

How to install Utility

Title	PSA6000 and FP6000 Series Utility
Supported OS	Windows 11 IoT Enterprise 2024 LTSC x64
Description	<p>When this utility is installed on a product, the product can use the following features.</p> <p>*For details of each function, refer to the User Manual.</p> <p>*The display name of the Application Launcher has been changed from the User Manual.</p> <p>Utility Name</p> <ul style="list-style-type: none">● Application Launcher● FP6 Brightness Refer to “Brightness” in the User Manual.● Buzzer● FP6 Calibration Refer to “Calibration” in the User Manual.● FP6 System● FP6 Front USB Refer to “Front USB” in the User Manual.● FP6 Touch Mode Refer to “Touch Mode” in the User Manual.
Limitation	The Application Launcher layout will be partially reset when you use this installer.

How to Install

1. Extract “PSA6000 and FP6000 Utility_[date].zip”.
2. Execute setup.exe in the “Display Communication USB Driver” folder.
3. Execute setup.exe in “PSA6000 and FP6000 Utility_[date]” folder.

*This utility installer requests “Restart” during installing.