

Intel(R) Serial IO Drivers

Title	Intel(R) Serial IO Drivers
Supported OS	Windows 11 IoT Enterprise 2024 LTSC x64
Description	After installing these drivers, your product can use Serial IO appropriately.

How to Install

1. Right-Click on “Drivers\iaLPSS2_GPIO2\iaLPSS2_GPIO2.inf”.
2. Click “Install”.
3. Right-Click on “Drivers\iaLPSS2_I2C\iaLPSS2_I2C.inf”
4. Click “Install”.