

RS-232C, RS422/485 driver

Title	RS-232C, RS422/485 driver
Supported OS	Windows 11 64bit (Build version is 24H2 or more.)
Description	After installing this driver, your product can use a RS-232C isolated x2 and RS-422/485 isolated x2 appropriately.

How to Install

1. Right-Click on “xrusber_xxxx_signed_win7¥Vx.x.x.x Drivers¥x64¥xrusbser.inf”
2. Click “Install”.
3. Double-Click on XR21B1422_Init.reg, then YES, then YES.