

RS-232C, RS422/485 driver

Title	RS-232C, RS422/485 driver
Supported OS	Windows 11 64bit (Build version is 24H2 or more.)
Description	After installing this driver, your product can use a RS-232C isolated x2, RS-232C x4, and RS-422/485 isolated x2 appropriately.

How to Install

1. Extract EMP2-X403.zip
2. Execute the installer. Installer module depends on your system.
e.g., Windows 10 64bit
If Windows, then extract Fixed_driver.zip and within that open Innodisk_Installer_Fixed_Win10 for Win10 and for x64 execute “Innodisk_Installer_Fixed_Win_10_x64_WHQL_XXXXXXX.exe”.