

System Monitor

Title	System Monitor API
Supported OS	Windows 10 64bit (Build version is 21H2 or more.)
Description	<p>This API can operate sensor, WDT, and Error LED.</p> <p>Sensor: PFXPHMIP6_SysMonApi_Ver.x.x.x.x.zip</p> <p>WDT: PFXPHMIP6_RAS_API_WDT_Ver.x.x.x.x.zip</p> <p>Error LED: PFXPHMIP6_ERROR_LED_API_Ver.x.x.x.x.zip</p>

How to install

1. Right-Click on "PFXPHMIP6_ERROR_LED_API_Ver.x.x.x.x\Driver\VSensor.inf".
2. Click "Install".
3. Click [Win + R] key.
4. Input "services.msc".
5. Right-Click on SysMonSrv, and then Click "Stop"
6. Copy "DLL\ErrorLedApi.dll" and "DLL\VSensorApi.dll" to "C:\Windows\System32" with administrators account.
7. Restart.

Detail Information

https://www.proface.com/en/node/49216#system_monitor_api