

GPW6000 Series

Advanced Web HMI — Firmware

Release Notes

GPW6000-RN.00

05/2026

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Pro-face brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety Information.....	4
About the Document.....	5
Product Information	7
Installation Instructions	7
Current Firmware Version	7
Version 1.3.21	7
Firmware Release History	7
Version 1.2.31	7

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Document

Document Scope

This document contains important information about the delivery of GPW6000 Series firmware release history. Read this document completely before using the product or products described.

Validity Note

This document is valid for GPW6000 Series firmware.

The characteristics of the products described in this document are intended to match the characteristics that are available on www.pro-face.com. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on www.pro-face.com, consider www.pro-face.com to contain the latest information.

General Cybersecurity Information

In recent years, the growing number of networked machines and production plants has seen a corresponding increase in the potential for cyber threats, such as unauthorized access, data breaches, and operational disruptions. You must, therefore, consider all possible cybersecurity measures to help protect assets and systems against such threats.

To help keep your Pro-face products secure and protected, it is in your best interest to implement the cybersecurity best practices as described in the [Cybersecurity Best Practices](#) document.

Pro-face provides additional information and assistance:

- Visit the [Security Notification](#) page to find security notifications.
- [Contact us](#) to report vulnerabilities and incidents.

Product Related Cybersecurity Information

Refer to GPW6000 Series Advanced Web HMI User Guide.

Related Documents

Title of documentation	Reference number
GPW6000 Series Advanced Web HMI User Guide	GPW6000-MM01-EN
	GPW6000-MM01-FR
	GPW6000-MM01-DE
	GPW6000-MM01-ES
	GPW6000-MM01-IT
	GPW6000-MM01-CS
	GPW6000-MM01-JA
	GPW6000-MM01-KO

You can download the manuals related to this product from the Pro-face download page (www.pro-face.com/trans/en/manual/1085.html).

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Trademarks

Schneider Electric has made every effort to supply trademark information about company names, products, and services mentioned in this manual.

All other brands and products referenced in this document are acknowledged to be the trademarks or registered trademarks of their respective holders.

Product Information

Installation Instructions

Refer to GPW6000 Series Advanced Web HMI User Guide.

Current Firmware Version

Version 1.3.21

New Features and Enhancements

- The “http://” prefix was not added automatically when Boot Delay was enabled. This issue has been fixed.

Security Updates

The following vulnerabilities (CVEs) have been addressed.

CVE-2025-2783	CVE-2025-4664	CVE-2025-5419	CVE-2025-6554
CVE-2025-6558	CVE-2025-10585	CVE-2025-38352	CVE-2025-32463

Firmware Release History

Version 1.2.31

New Features and Enhancements

- A logout button has been added to System Settings. When you exit System Settings using the logout button, the Start Page will be displayed. If you changed settings before exiting System Settings, reboot the product to apply the changes.
- The software keyboard was still displayed even when it was disabled. This issue has been fixed.

Security Updates

No vulnerabilities (CVEs) have been addressed.

Schneider Electric Japan Holdings Ltd.

4-4-9 Kitahama, Chuo-ku, Osaka
Osaka, 541-0041, JAPAN

+ 81 (0) 50 4561 4800

www.pro-face.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2026 – Schneider Electric Japan Holdings Ltd. All rights reserved.

GPW6000-RN.00