



Operating Instruction Manual
DTM for Hilscher PROFINET IO-Controller Devices
Configuration of Hilscher Controller Devices
V1.200

Hilscher Gesellschaft für Systemautomation mbH

www.hilscher.com

DOC150704OI05EN | Revision 5 | English | 2019-04 | Released | Public

Table of Contents

1	INTRODUCTION.....	6
1.1	About this Manual	6
1.1.1	Descriptions of the Dialog Panes	6
1.1.2	Online Help	7
1.1.3	List of Revisions	7
1.1.4	Conventions in this Manual	8
1.2	Legal Notes.....	9
1.3	Registered Trademarks.....	12
1.4	About PROFINET IO-Controller DTM.....	12
1.4.1	Requirements	13
1.5	Dialog Structure of the PROFINET IO-Controller DTM.....	14
1.5.1	General Device Information.....	15
1.5.2	Navigation Area	15
1.5.3	Dialog Panes	16
1.5.4	OK, Cancel, Apply and Help.....	17
1.5.5	Table Lines	17
1.5.6	Status Bar	18
2	SAFETY	19
2.1	General Note.....	19
2.2	Intended Use.....	19
2.3	Personnel Qualification	19
2.4	Safety Instructions.....	19
2.4.1	Communication Stop during Firmware or Configuration Download	20
2.4.2	Mismatching System Configuration	20
2.5	Property Damage	21
2.5.1	Power Disconnect while downloading Firmware or Configuration	21
2.5.2	Invalid Firmware	21
2.6	Labeling of Safety Messages	22
2.7	References Safety.....	22
3	GETTING STARTED.....	23
3.1	Configuration Steps.....	23
3.2	Safety Messages on Firmware or Configuration Download	28
4	SETTINGS	29
4.1	Overview Settings	29
4.2	Settings for Driver and Device Assignment	30
4.3	Driver	32
4.3.1	Verify or adapt Driver Settings	32

4.3.2	cifX Device Driver	34
4.3.3	netX Driver	34
4.3.4	Configuring netX Driver	35
4.3.5	netX Driver - USB/RS232 Connection	36
4.3.6	netX Driver - TCP/IP Connection	38
4.4	Device Assignment	41
4.4.1	Scanning for Devices	41
4.4.2	Selecting the Device (with or without firmware)	44
4.4.3	Selecting the Device once more (with Firmware)	45
4.5	Firmware Download	47
4.6	Licensing	54
4.7	Ethernet Devices	55
4.7.1	Overview Ethernet Devices	55
4.7.2	Selecting Network Devices for Scan	56
4.7.3	Searching and selecting Devices	57
4.7.4	Configuring Device	60
5	CONFIGURATION	70
5.1	Overview Configuration	70
5.2	Configuring Device Parameters	71
5.3	Configure IRT Communication	75
5.4	Controller Network Settings	76
5.5	Device Table	79
5.6	IP Address Table	81
5.6.1	Set the IP Settings of the PROFINET IO-Device Station	82
5.7	Process Data	83
5.8	Isochronous Modules	84
5.9	Address Table	87
5.9.1	Auto Addressing, Display Mode, CSV Export	88
5.9.2	Inputs / Outputs	89
5.10	FSU/Port-Settings	91
5.11	Stations Timing	93
5.11.1	Parameter in the 'Stations Timing' Pane	95
5.11.2	Configuration Steps Stations Timing	97
5.12	Controller Settings	106
5.12.1	Start of Bus Communication	107
5.12.2	Application Monitoring	107
5.12.3	Port Settings	108
6	ONLINE FUNCTIONS	109
6.1	Connecting/Disconnecting Device	109
6.2	'Network Scan' and 'Upload'	111
6.2.1	Starting 'Network Scan'	112
6.2.2	Settings in the Scan Response Dialog of the Controller DTM	114

6.2.3	Description on the Scan Response dialog of the Controller DTM.....	115
6.2.4	Creating Devices	117
6.2.5	Download to the PROFINET IO-Controller Device	118
6.2.6	Running 'Upload' and generating Module Configuration.....	119
6.2.7	Download to the PROFINET IO-Controller Device	123
6.2.8	Upload failed from device	124
6.3	Download Configuration	125
6.4	Start /Stop Communication	127
6.5	Licenses.....	128
6.5.1	Open License Dialog	128
6.5.2	License Dialog	129
6.5.3	Which Licenses are present in the Device?	130
6.5.4	How to order a License.....	132
6.5.5	Selecting License(s)	132
6.5.6	Ordering Data	133
6.5.7	Ordering the License	135
6.5.8	How to get the License and transfer it to the Device.....	140
7	DIAGNOSIS	141
7.1	Overview Diagnosis	141
7.2	General Diagnosis.....	142
7.3	Master Diagnosis	144
7.4	Station Diagnosis	145
7.5	Firmware Diagnosis	146
8	EXTENDED DIAGNOSIS	147
8.1	Overview Extended Diagnosis.....	147
8.2	Task Information	148
8.3	IniBatch Status.....	149
8.4	PNM_AP	150
8.4.1	Configuration State.....	150
8.4.2	Network State	151
8.4.3	Communication State	152
8.4.4	Most recent Logbook Entries.....	153
8.4.5	PROFINET Interface State	154
8.4.6	PROFINET Switch Diagnosis	155
8.4.7	System State	155
9	TOOLS	156
9.1	Overview Tools	156
9.2	Packet Monitor	157
9.2.1	Sending Packet	158
9.2.2	Receiving Packet.....	159
9.3	IO Monitor	160
9.4	Process Image Monitor	161

10	ERROR CODES.....	163
10.1	Error Code Definition.....	163
10.2	Overview Error Codes	164
10.3	General Hardware Error Codes	165
10.3.1	RCX General Task Errors.....	165
10.3.2	RCX Common Status & Errors Codes	166
10.3.3	RCX Status & Error Codes	167
10.4	PROFINET IO-Controller V3 Task Error Codes.....	168
10.5	ODM Error Codes	171
10.5.1	General ODM Error Codes	171
10.5.2	General ODM Driver Error Codes	172
10.5.3	cifX Driver Specific ODM Error Codes	173
10.6	Error Codes cifX Device Driver and netX Driver	176
10.6.1	Generic Error Codes.....	176
10.6.2	Generic Driver Error Codes	177
10.6.3	Generic Device Error Codes	178
10.7	Error Codes netX Driver	179
10.7.1	CIFX API Transport Error Codes.....	179
10.7.2	CIFX API Transport Header State Error Codes	179
10.8	ODM Error Codes DBM V4	180
11	APPENDIX	185
11.1	User Rights	185
11.1.1	Settings.....	185
11.1.2	Configuration	185
11.2	Name encoding	186
11.3	References.....	186
11.4	List of Figures	187
11.5	List of Tables.....	189
11.6	Glossary.....	191
11.7	Contacts.....	194

1 Introduction

1.1 About this Manual

This manual provides information on how to set and configure the device parameters of a netX based PROFINET IO-Controller device using the PROFINET IO-Controller DTM, and what can be read from the diagnosis panes.

The configuration of the Sync domain settings for RT or IRT-capable PROFINET IO-Devices is enclosed.



For information concerning the configuration of the topology of devices in domains for isochronous real-time communication (IRT), refer to the Operating instruction manual *Topology Editor*.

1.1.1 Descriptions of the Dialog Panes

The table below gives an overview for the individual dialog panes descriptions:

Section	Subsection	Page
Settings	Overview Settings	29
	Driver	32
	Device Assignment	41
	Firmware Download	47
	Licenses	128
	Ethernet Devices	55
Configuration	Overview Configuration	70
	Configure IRT Communication	75
	Controller Network Settings	76
	Device Table	79
	IP Address Table	81
	Process Data	83
	Isochronous Modules	84
	Address Table	87
	FSU/Port-Settings	91
	Stations Timing	93
	Controller Settings	106
Diagnosis	Overview Diagnosis	141
	General Diagnosis	142
	Master Diagnosis	144
	Station Diagnosis	145
	Firmware Diagnosis	146
Extended Diagnosis	Overview Extended Diagnosis	147
Tools	Overview Tools	156
	Packet Monitor	157
	IO Monitor	160
	Process Image Monitor	161

Table 1: Descriptions Dialog Pages

1.1.2 Online Help

The PROFINET IO-Controller DTM contains an integrated online help facility.

- To open the online help, click on **Help** or press **F1**.

1.1.3 List of Revisions

In- dex	Date	Version	Chapter	Revision
1	15-10-22	1.000	All	Created.
2	16-12-15	1.000	5.2, 5.4, 5.6, 5.8, 5.11	Sections <i>Configuring Device Parameters</i> , <i>Controller Network Settings</i> , <i>IP Address Table</i> updated. Section <i>Isochronous Modules</i> created. Section <i>Stations Timing</i> updated.
3	17-02-24	1.100 (and 1.0100)	1.4.1	Section <i>Requirements</i> Internet access added, Windows 8.1 and Windows 10 added.
4	18-02-16	1.100 (and 1.0100)	2.5.1, 3.2, 4.5, 6.3	Versioning information revised (title page and this section). Safety Message or warning added: Sections <i>Power Disconnect while downloading Firmware or Configuration</i> , <i>Safety Messages on Firmware or Configuration Download</i> , <i>Firmware Download</i> and <i>Download Configuration</i> . Safety communication in the document revised in general.
5	19-04-03	1.200 (and 1.0200)	5.4, 6.2	Section <i>Controller Network Settings</i> : Name coding added. Section <i>'Network Scan' and 'Upload'</i> updated.

Table 2: List of Revisions

1.1.4 Conventions in this Manual

Notes, operation instructions and results of operation steps are marked as follows:

Notes



Important: <important note you must follow to avoid malfunction>



Note: <general note>



<note, where to find further information>

Operation Instructions

1. <instruction>

2. <instruction>

or

➤ <instruction>

Results

↗ <result>



Note: The PROFINET IO specification defines the designations "Controller" instead of "Master" and "Device" instead of "Slave". In this manual "Controller" and "Device" are used with the PROFINET IO device or the DTM. In connection with general questions about the Master or the Slave functionality, the terms "Master" and "Slave" are used, as in the network configuration on the Master bus line, the „Stand-Alone-Slave“, the Master diagnosis or the Master license.

Positions in Figures

The *Positions* ①, ②, ③ ... or a, b, c ... or A, B, C ... refer to the figure used in that section. If the numbers reference to a section outside the current section then a cross reference to that section and figure is indicated.

1.2 Legal Notes

Copyright

© Hilscher Gesellschaft für Systemautomation mbH

All rights reserved.

The images, photographs and texts in the accompanying materials (in the form of a user's manual, operator's manual, Statement of Work document and all other document types, support texts, documentation, etc.) are protected by German and international copyright and by international trade and protective provisions. Without the prior written consent, you do not have permission to duplicate them either in full or in part using technical or mechanical methods (print, photocopy or any other method), to edit them using electronic systems or to transfer them. You are not permitted to make changes to copyright notices, markings, trademarks or ownership declarations. Illustrations are provided without taking the patent situation into account. Any company names and product designations provided in this document may be brands or trademarks by the corresponding owner and may be protected under trademark, brand or patent law. Any form of further use shall require the express consent from the relevant owner of the rights.

Important notes

Utmost care was/is given in the preparation of the documentation at hand consisting of a user's manual, operating manual and any other document type and accompanying texts. However, errors cannot be ruled out. Therefore, we cannot assume any guarantee or legal responsibility for erroneous information or liability of any kind. You are hereby made aware that descriptions found in the user's manual, the accompanying texts and the documentation neither represent a guarantee nor any indication on proper use as stipulated in the agreement or a promised attribute. It cannot be ruled out that the user's manual, the accompanying texts and the documentation do not completely match the described attributes, standards or any other data for the delivered product. A warranty or guarantee with respect to the correctness or accuracy of the information is not assumed.

We reserve the right to modify our products and the specifications for such as well as the corresponding documentation in the form of a user's manual, operating manual and/or any other document types and accompanying texts at any time and without notice without being required to notify of said modification. Changes shall be taken into account in future manuals and do not represent an obligation of any kind, in particular there shall be no right to have delivered documents revised. The manual delivered with the product shall apply.

Under no circumstances shall Hilscher Gesellschaft für Systemautomation mbH be liable for direct, indirect, ancillary or subsequent damage, or for any loss of income, which may arise after use of the information contained herein.

Liability disclaimer

The hardware and/or software was created and tested by Hilscher Gesellschaft für Systemautomation mbH with utmost care and is made available as is. No warranty can be assumed for the performance or

flawlessness of the hardware and/or software under all application conditions and scenarios and the work results achieved by the user when using the hardware and/or software. Liability for any damage that may have occurred as a result of using the hardware and/or software or the corresponding documents shall be limited to an event involving willful intent or a grossly negligent violation of a fundamental contractual obligation. However, the right to assert damages due to a violation of a fundamental contractual obligation shall be limited to contract-typical foreseeable damage.

It is hereby expressly agreed upon in particular that any use or utilization of the hardware and/or software in connection with

- Flight control systems in aviation and aerospace;
- Nuclear fusion processes in nuclear power plants;
- Medical devices used for life support and
- Vehicle control systems used in passenger transport

shall be excluded. Use of the hardware and/or software in any of the following areas is strictly prohibited:

- For military purposes or in weaponry;
- For designing, engineering, maintaining or operating nuclear systems;
- In flight safety systems, aviation and flight telecommunications systems;
- In life-support systems;
- In systems in which any malfunction in the hardware and/or software may result in physical injuries or fatalities.

You are hereby made aware that the hardware and/or software was not created for use in hazardous environments, which require fail-safe control mechanisms. Use of the hardware and/or software in this kind of environment shall be at your own risk; any liability for damage or loss due to impermissible use shall be excluded.

Warranty

Hilscher Gesellschaft für Systemautomation mbH hereby guarantees that the software shall run without errors in accordance with the requirements listed in the specifications and that there were no defects on the date of acceptance. The warranty period shall be 12 months commencing as of the date of acceptance or purchase (with express declaration or implied, by customer's conclusive behavior, e.g. putting into operation permanently).

The warranty obligation for equipment (hardware) we produce is 36 months, calculated as of the date of delivery ex works. The aforementioned provisions shall not apply if longer warranty periods are mandatory by law pursuant to Section 438 (1.2) BGB, Section 479 (1) BGB and Section 634a (1) BGB [Bürgerliches Gesetzbuch; German Civil Code] If, despite of all due care taken, the delivered product should have a defect, which already existed at the time of the transfer of risk, it shall be at our discretion to either repair the product or to deliver a replacement product, subject to timely notification of defect.

The warranty obligation shall not apply if the notification of defect is not asserted promptly, if the purchaser or third party has tampered with the products, if the defect is the result of natural wear, was caused by unfavorable operating conditions or is due to violations against our

operating regulations or against rules of good electrical engineering practice, or if our request to return the defective object is not promptly complied with.

Costs of support, maintenance, customization and product care

Please be advised that any subsequent improvement shall only be free of charge if a defect is found. Any form of technical support, maintenance and customization is not a warranty service, but instead shall be charged extra.

Additional guarantees

Although the hardware and software was developed and tested in-depth with greatest care, Hilscher Gesellschaft für Systemautomation mbH shall not assume any guarantee for the suitability thereof for any purpose that was not confirmed in writing. No guarantee can be granted whereby the hardware and software satisfies your requirements, or the use of the hardware and/or software is uninterrupted or the hardware and/or software is fault-free.

It cannot be guaranteed that patents and/or ownership privileges have not been infringed upon or violated or that the products are free from third-party influence. No additional guarantees or promises shall be made as to whether the product is market current, free from deficiency in title, or can be integrated or is usable for specific purposes, unless such guarantees or promises are required under existing law and cannot be restricted.

Confidentiality

The customer hereby expressly acknowledges that this document contains trade secrets, information protected by copyright and other patent and ownership privileges as well as any related rights of Hilscher Gesellschaft für Systemautomation mbH. The customer agrees to treat as confidential all of the information made available to customer by Hilscher Gesellschaft für Systemautomation mbH and rights, which were disclosed by Hilscher Gesellschaft für Systemautomation mbH and that were made accessible as well as the terms and conditions of this agreement itself.

The parties hereby agree to one another that the information that each party receives from the other party respectively is and shall remain the intellectual property of said other party, unless provided for otherwise in a contractual agreement.

The customer must not allow any third party to become knowledgeable of this expertise and shall only provide knowledge thereof to authorized users as appropriate and necessary. Companies associated with the customer shall not be deemed third parties. The customer must obligate authorized users to confidentiality. The customer should only use the confidential information in connection with the performances specified in this agreement.

The customer must not use this confidential information to his own advantage or for his own purposes or rather to the advantage or for the purpose of a third party, nor must it be used for commercial purposes and this confidential information must only be used to the extent provided for in this agreement or otherwise to the extent as expressly authorized by the disclosing party in written form. The customer has the right, subject to the obligation to confidentiality, to disclose the terms and conditions of this agreement directly to his legal and financial consultants as would be required for the customer's normal business operation.

Export provisions

The delivered product (including technical data) is subject to the legal export and/or import laws as well as any associated regulations of various countries, especially such laws applicable in Germany and in the United States. The products / hardware / software must not be exported into such countries for which export is prohibited under US American export control laws and its supplementary provisions. You hereby agree to strictly follow the regulations and to yourself be responsible for observing them. You are hereby made aware that you may be required to obtain governmental approval to export, reexport or import the product.

1.3 Registered Trademarks

Windows® XP, Windows® Vista, Windows® 7, Windows® 8, Windows® 8.1 and Windows® 10 are registered trademarks of Microsoft Corporation.

PROFINET® is a registered trademark of PROFIBUS & PROFINET International (PI), Karlsruhe.

CODESYS® is a registered trademark of 3S-Smart Software Solutions GmbH, Deutschland.

All other mentioned trademarks are property of their respective legal owners.

1.4 About PROFINET IO-Controller DTM

You can use the PROFINET IO-Controller DTM to configure the PROFINET IO-Controller device within a FDT Framework.

1.4.1 Requirements

System Requirements

- PC with 1 GHz processor or higher
- Windows® XP SP3,
Windows® Vista (32-Bit) SP2,
Windows® 7 (32-Bit and 64-Bit) SP1,
Windows® 8 (32-Bit and 64-Bit),
Windows® 8.1 (32-Bit and 64-Bit),
Windows® 10 (32-Bit and 64-Bit)
- Administrator privilege required for installation
- Internet Explorer 5.5 or higher
- RAM: min. 512 MByte, recommended 1024 MByte
- Graphic resolution: min. 1024 x 768 pixel
- Keyboard and Mouse
- Restriction: Touch screen is not supported.



Note: If the project file is used on a further PC,

- this PC must also comply with the above system requirements,
- the device description files of the devices used in the project must be imported into the configuration software SYCON.net on the new PC,
- and the DTMs of the devices used in the project must also be installed on that further PC.

Requirements PROFINET IO-Controller DTM

To configure the PROFINET IO-Controller device with the PROFINET IO-Controller DTM the following requirements have to be accomplished:

- Completed hardware installation of a netX based DTM-compatible PROFINET IO-Controller device, inclusive loaded firmware, license and loaded cifX configuration file
- Installed FDT/DTM V 1.2 compliant frame application
- Loaded DTM in the Device Catalog of the FDT Framework
- Additional Requirement for the Topology Editor:
Microsoft .NET Framework 4.0



Note: If the PROFINET IO-Controller DTM and the PROFINET IO-Controller device are installed on the same PC, the **cifX Device Driver** must be installed on that PC, as you can connect the DTM to the device.



For more information to the hardware installation, please refer to the corresponding **User Manual** of your device.
To get information on how to order and to download the license to the device, please refer to section *Licenses* on page 128.

1.5 Dialog Structure of the PROFINET IO-Controller DTM

The graphical user interface of the DTM is composed of different areas and elements listed hereafter:

1. A header area containing the **General Device Information**,
2. The **Navigation Area** (area on the left side),
3. The **Dialog Pane** (main area on the right side),
4. **OK, Cancel, Apply, Help**,
5. The **Status Line** containing information e. g. the online-state of the DTM.

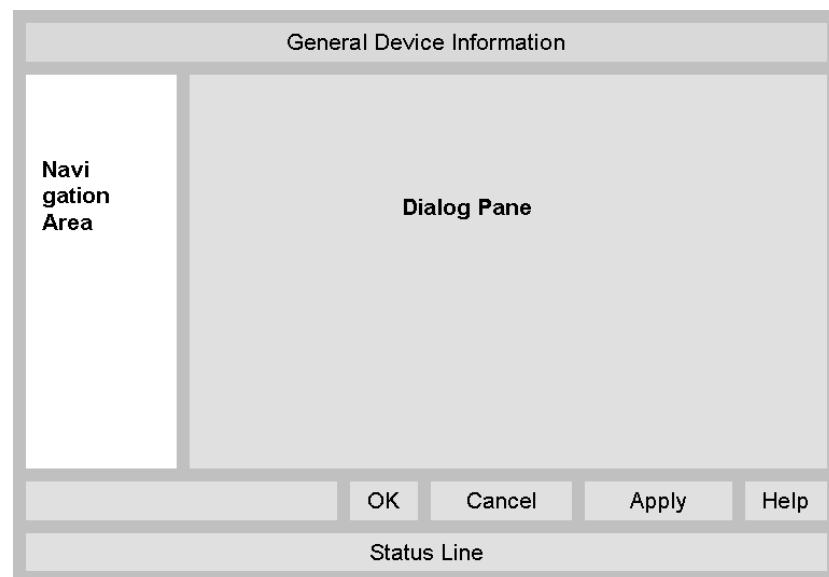


Figure 1: Dialog Structure of the PROFINET IO-Controller DTM

1.5.1 General Device Information

Parameter	Meaning
IO Device	Name of the device
Vendor	Vendor name of the device
Device ID	Identification number of the device
Vendor ID	Identification number of the vendor

Table 3: General Device Information

1.5.2 Navigation Area

The **Navigation Area** contains folders and subfolders to open the dialog panes of the DTM.

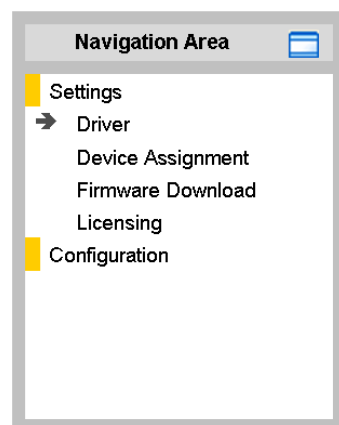


Figure 2: Navigation Area

- Select the required folder and subfolder.
- The corresponding Dialog pane is displayed.

Hide / display Navigation

	Hiding the navigation area (above right side).
Show navigation area	Opening the navigation area (below left side).

1.5.3 Dialog Panes

At the dialog pane the **Settings**, **Configuration**, **Diagnosis/Extended Diagnosis** or the **Tools** panes are opened via the corresponding folder in the navigation area.

Settings	
Driver	To establish a connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device, on the pane Driver you can verify if the default driver is checked and respectively check another driver or multiple drivers. For further information, refer to section <i>Driver</i> on page 32.
Device Assignment	On the Device Assignment pane you select the device and assign the device to the driver. For further information, refer to section <i>Device Assignment</i> on page 41.
Firmware Download	The dialog on the Firmware Download pane is used to load a new firmware into the device. A detailed description can be found in section <i>Firmware Download</i> on page 47.
Licensing	Using the license dialog, you can order licenses for Master protocols or Utilities and download them to your device. A detailed description can be found in section <i>Licenses</i> on page 128.
Ethernet Devices	The dialog on the Ethernet Devices pane is used to adjust the device name (=Name of Station) or the IP address at Ethernet-capable devices or to use existing values therefore. A detailed description can be found in section <i>Ethernet Devices</i> on page 55.
Configuration	
Controller Network Settings	The Controller Network Settings pane displays general PROFINET IO-Controller information. Here you must set the name of station and the IP settings for the PROFINET IO-Controller. For further information, refer to section <i>Controller Network Settings</i> on page 76.
Device Table	The Device Table displays the list of all configured PROFINET IO-Device devices. Here you must set the network name for the PROFINET IO-Device station. For further information, refer to section <i>Device Table</i> on page 79.
IP Address Table	The IP Address Table pane displays communication data of the devices associated with the PROFINET IO-Controller. Here you must make the IP settings for the PROFINET IO-Device station. For further information, refer to section <i>IP Address Table</i> on page 81.
Process Data	The Process Data pane serves for the PROFINET IO-Controller DTM as an external process data interface. For further information, refer to section <i>Process Data</i> on page 83.
Isochronous Modules	The Isochronous Modules pane displays IRT capable (isochronous) devices or modules, or isochronously supported submodules, which provide the isochronous mode. For further information, refer to section <i>Isochronous Modules</i> on page 84.
Address Table	The Address Table pane shows a list of all dpram addresses used in the process data image. Here you must set the address. For further information, refer to section <i>Address Table</i> on page 87.
FSU/Port Settings	On the FSU/Port Settings pane you set in the PROFINET IO-Controller device, whether a PROFINET IO-Device must use a fast start up (FSU) connection to establish the cyclic data exchange. For further information, refer to section <i>FSU/Port-Settings</i> on page 91.
Stations Timing	On the Stations Timing pane you can select or set the station global and the Sync domain settings. For further information, refer to section <i>Stations Timing</i> on page 93.
Controller Settings	At the Controller Settings pane device related settings can be made. For further information, refer to section <i>Controller Settings</i> on page 106.
Diagnosis	
Diagnosis/Extended Diagnosis	At the Diagnosis panes information can be read for troubleshooting. For further information, refer to section <i>Overview Diagnosis</i> on page 141 or section <i>Overview Extended Diagnosis</i> on page 147.
Tools	
Packet Monitor/ IO Monitor/ Process Image Monitor	Under Tools the Packet Monitor and the IO Monitor are provided for test and diagnosis purposes. For further information, refer to section <i>Packet Monitor</i> on page 157, section <i>IO Monitor</i> on page 160 or section <i>Process Image Monitor</i> on page 161.

Table 4: Overview Dialog Panes



Note: Accessing the **Diagnosis** panes of the PROFINET IO-Controller DTM requires an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device.



For further information, refer to section *Connecting/Disconnecting Device* on page 109.

1.5.4 OK, Cancel, Apply and Help

OK, Cancel, Apply and Help you can use as described hereafter.

	Meaning
OK	To confirm your latest settings, click OK . All changed values will be applied on the frame application database. <i>The dialog then closes.</i>
Cancel	To cancel your latest changes, click Cancel . Answer to the safety query Configuration data has been changed. Do you want to save the data? by Yes , No or Cancel . Yes: The changes are saved or the changed values are applied on the frame application database. <i>The dialog then closes.</i> No: The changes are <u>not</u> saved or the changed values are not applied on the frame application database. <i>The dialog then closes.</i> Cancel: <i>Back to the DTM.</i>
Apply	To confirm your latest settings, click Apply . All changed values will be applied on the frame application database. <i>The dialog remains opened.</i>
Help	To open the DTM online help, click Help .

Table 5: OK, Cancel, Apply and Help

1.5.5 Table Lines

In the DTM dialog pane table lines can be selected, inserted or deleted.

	Meaning
	To select the first line of a table use First Line .
	To select the previous line of a table use Previous Line .
	To select the next line of a table use Next Line .
	To select the last line of a table use Last Line .
	Create a new Line inserts new lines into the table.
	Delete selected Line deletes the selected line from the table.

Table 6: Selecting, inserting, deleting Table Line

1.5.6 Status Bar

The **Status Bar** displays information about the current state of the DTM. The current activity, e.g. download, is signaled graphically via icons in the status bar.


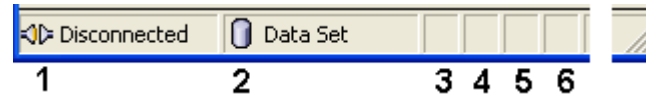


Figure 3: Status Bar – Status Fields 1 to 6

Status Field	Icon / Meaning	
1	DTM Connection States	
		Connected: Icon closed = Device is online
		Disconnected: Icon opened = Device is offline
2	Data Source States	
		Data set: The displayed data are read out from the instance data set (database).
		Device: The displayed data are read out from the device.
3	States of the instance Date Set	
		Valid Modified: Parameter is changed (not equal to data source).
4	Changes directly made on the Device	
		Load/configure diagnosis parameters: Diagnosis is activated.
6	Device Diagnosis Status	
		Save operation succeeded: The save operation has been successful. Further messages due to successful handling of device data.
		Firmware Download: Firmware Download is running
		Save operation failed: The save operation has failed. Further fail operation messages due to incorrect communication due to malfunction in the field device or its peripherals.

Table 7: Status Bar Icons [1]


Offline State

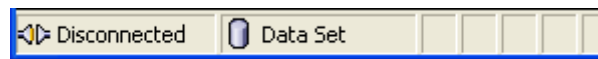

Save operation succeeded



Firmware Download

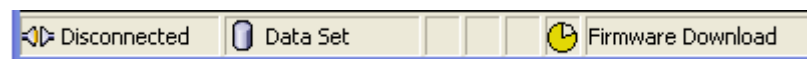

Firmware Download successful



Online State and Diagnosis

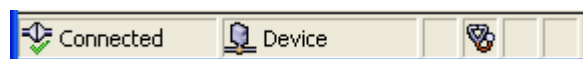


Figure 4: Status Bar Display Examples

2 Safety

2.1 General Note

The documentation in the form of a user manual, an operating instruction manual or other manual types, as well as the accompanying texts have been created for the use of the products by educated personnel. When using the products, all Safety Messages, Integrated Safety Messages, Property Damage Messages and all valid legal regulations must be obeyed. Technical knowledge is presumed. The user has to assure that all legal regulations are obeyed.

2.2 Intended Use

The PROFINET IO-Controller DTM serves for configuration and diagnosis of PROFINET IO-Controller devices.

2.3 Personnel Qualification

Personnel responsible for the application of the network system shall be aware of the system behavior and shall be trained in using the system.

2.4 Safety Instructions

To ensure your own personal safety and to avoid personal injury, you necessarily must read, understand, and comply with the safety instructions and safety messages in this manual before you install and operate your system.

For cases if both, personal injury as well as property damage (damage of equipment or device) may occur together, you find the safety instructions in this section.

2.4.1 Communication Stop during Firmware or Configuration Download

If you want to perform either a firmware update (as a download) or a configuration download, both via the PROFINET IO-Controller DTM, be aware of the following:

- Together with the firmware download, an automated reset to the device is performed that will interrupt all network communication and all established connections will drop.
- If you download the configuration during bus operation, the communication between master and slaves is stopped.

Possible faulty System Operation

- An unpredictable and unexpected behavior of machines and plant components may cause personal injury and property damage.
- Stop the application program, before starting the firmware update or before downloading the configuration.
- Make sure that your equipment operates under conditions that prevent personal injury or property damage. All network devices should be placed in a fail-safe mode, before starting the firmware update or before downloading a configuration.

Loss of Device Parameters, Overwriting of Firmware

- Both the firmware download and the configuration download erase the configuration data base. The firmware download overwrites the existing firmware in the network device.
- To complete the firmware update and to make the device operable again, re-load the configuration after the firmware update has been finished.
- Device parameters that have been saved volatile, e. g. as the temporarily set IP address parameters, are getting lost during the reset.
- In order to prevent loss of configuration data, make sure that your project configuration data are saved non-volatile, before you initiate a firmware update or download the configuration.

2.4.2 Mismatching System Configuration

Mismatching system configuration loaded into the device could result in faulty data mapping in the application program and thus unexpected equipment operation may cause personal injury or damage of equipment.

- In the device use only a configuration suitable for the system.

2.5 Property Damage

To avoid property damage and damage to your system or to your equipment, you necessarily must read, understand, and comply with the safety instructions and safety messages in this manual before you configure your system.

2.5.1 Power Disconnect while downloading Firmware or Configuration

If during the process of downloading a firmware or configuration

- the power supply to a PC with the software application is interrupted,
- or the power supply to the PROFINET IO-Controller device is interrupted,
- or a reset to the device is performed,

this may lead to the following consequences:

Loss of Device Parameters, Firmware Corruption

- The firmware download or the configuration download will be interrupted and remains incomplete.
- The firmware or the configuration database will be corrupted and device parameters will be lost.
- Device damage may occur as the device cannot be rebooted.

Whether these consequences occur depends on when the power disconnect occurs during the download.

- During configuration download process, do not interrupt the power supply to the PC, or to the device and do not perform a reset!

Otherwise you might be forced to return your device for repair.

Power Drop during Write and Delete Accesses in the File System

The FAT file system in the netX firmware is subject to certain limitations in its operation. Write and delete accesses in the file system (firmware update, configuration download etc.) can destroy the FAT (File Allocation Table) if the accesses cannot be completed if the power drops. Without a proper FAT, a firmware may not be found and cannot be started.

Make sure that the power supply to the device is not interrupted during write and delete accesses in the file system (firmware update, configuration download, etc.).

2.5.2 Invalid Firmware

Loading invalid firmware files could render your device unusable.

- Only download firmware files to the device that are valid for this device.

Otherwise you might be forced to return your device for repair.

2.6 Labeling of Safety Messages

- The **Section Safety Messages** at the beginning of a chapter are pinpointed particularly and highlighted by a signal word according to the degree of endangerment. The type of danger is specified by the safety message text
- The **Integrated Safety Messages** within an instruction description are highlighted with a signal word according to the degree of endangerment. The kind of danger is specified exactly by the safety message text.





Signal Word	Meaning (International)	Meaning (USA)
 DANGER	Indicates a direct hazard with high risk, which will have a consequence of death or grievous bodily harm if it is not avoided.	Indicates a hazardous situation which if not avoided, will result in death or serious injury.
 WARNING	Indicates a possible hazard with medium risk, which will have a consequence of death or (grievous) bodily harm if it is not avoided.	Indicates a hazardous situation which if not avoided, could result in death or serious injury.
 CAUTION	Indicates a minor hazard with medium risk, which could have a consequence of minor or moderate bodily harm if it is not avoided.	Indicates a hazardous situation which if not avoided, may result in minor or moderate injury.
 NOTICE	Indicates a property damage message.	Indicates a property damage message.

Table 8: Signal Words



Note: The ANSI Z535.6 standard specifies in section 4.8: "Messages about hazards that could result in both, physical injury and property damage are considered safety messages, not property damage messages." Thus depending of the type of danger and its consequences, warning messages marked by a signal word DANGER, WARNING or CAUTION may include both, messages on physical injury and property damage.

In this document all Safety Instructions and Safety Messages are designed according both to the international used safety conventions as well as to the ANSI Z535.6 standard, refer to safety reference [S1].

In this document the signal words 'WARNING', 'CAUTION' and 'NOTICE' are used according to ANSI Z535.6 standard. The meaning given in ISO/IEC 26514 [S4] section '11.11 Contents of warnings and cautions' is not relevant in this manual.

2.7 References Safety


- [S1] ANSI Z535.6-2011 American National Standard for Product Safety Information in Product Manuals, Instructions, and Other Collateral Materials
- [S4] 26514-2010 - IEEE Standard for Adoption of ISO/IEC 26514:2008 Systems and Software Engineering--Requirements for Designers and Developers of User Documentation




3 Getting started

3.1 Configuration Steps

The following overview provides to you the step sequence on how to configure a netX based PROFINET IO-Controller device with PROFINET IO-Controller DTM as it is typical for many cases. At this time it is presupposed that the hardware installation was done.

The overview lists all the steps in a compressed form. For detailed descriptions of each step refer to the sections noted in the column *For detailed information see section*.

#	Step	Short Description	For detailed information see section	Page
1	Add PROFINET IO-Device in the Device Catalog	Add the Device in the Device Catalog by importing the device description file to the Device Catalog. Depending of the FDT Container. For netDevice: - Network > Import Device Descriptions .	(See <i>Operating Instruction Manual netDevice and netProject</i>)	-
2	Load device catalog	Depending of the FDT Container: For netDevice: - select Network > Device Catalog , - select Reload Catalog .	(See <i>Operating Instruction Manual netDevice and netProject</i>)	-
3	Create new project / Open existing project	Depending of the frame application. For the configuration software: - select File > New or File > Open .	(See <i>Operating Instruction Manual of the Frame Application</i>)	-
4	Insert Controller or Device into configuration	Depending of the FDT Container: For netDevice:  Important! In order to select the desired device in the device catalog, note the details about the DTM and the device at the bottom of the window. When sorting by <i>Fieldbus</i> multiple devices with identical names by different vendors can be displayed. - in the Device Catalog click to the Controller, - and insert the device via drag and drop to the line in the network view, - in the Device Catalog click to the Device, * - and insert the device via drag and drop to the Controller bus line in the network view.* (*This step won't be necessary if the network structure is scanned automatically. See <i>step 19</i> .)	(See <i>Operating Instruction Manual netDevice and netProject</i>)	-
5	Open the Controller DTM configuration dialog	Open the Controller DTM configuration dialog. - Double click to the device icon of the Controller. - The Controller DTM configuration dialog is displayed.	-	-

6	Verify or adapt Driver Settings	<p>In the Master DTM configuration dialog: - select Settings > Driver.</p> <div data-bbox="499 226 571 297">  </div> <p>Note! For PC cards cifX the cifX Device Driver is preset as a default driver. For all the other Hilscher devices the netX Driver is preset as a default driver.</p> <ul style="list-style-type: none"> • Use the cifX Device Driver if the PROFINET IO-Controller DTM is installed on the same PC as the PROFINET IO-Controller device. • Use the netX Driver to establish a USB, Serial (RS232) or TCP/IP connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device. • The 3SGateway Driver for netX (V3.x) is used only in relationship with CODESYS. <p>To search for devices you can check one or multiple drivers simultaneously.</p> <p>- Verify that the default driver is checked. - If necessary, check another driver or multiple drivers.</p>	<p><i>Settings for Driver and Device Assignment and Driver</i></p>	<p>30</p> <p>32</p>
7	Configure Driver	<p>If you use the netX Driver, you respectively must configure it.</p> <p>For netX Driver and communication via TCP/IP set the IP address of the device:</p> <ul style="list-style-type: none"> - Select Settings > Driver > netX Driver > TCP Connection. - Via  add an IP range. - Under IP Address enter the IP Address of the device or an IP range. - Click Save. <p>Adjust the driver parameters netX Driver USB/RS232 only if they differ from the default settings.</p> <div data-bbox="499 1294 571 1366">  </div> <p>Note!</p> <ul style="list-style-type: none"> • The cifX Device Driver requires no configuration. • The configuration of the 3SGateway Driver for netX (V3.x) is carried out via the CODESYS surface. 	<p><i>Configuring netX Driver</i></p>	<p>35</p>
8	Assign Controller device (with or without firmware)	<p>Assign the device to this driver.</p> <p>In the Controller DTM configuration dialog:</p> <ul style="list-style-type: none"> - select Settings > Device Assignment, - select a Controller device (with or without firmware), - therefore check the appropriate checkbox, - select Apply. 	<p><i>Selecting the Device (with or without firmware)</i></p>	<p>44</p>
9	Select and download firmware	<p>If not yet a firmware was loaded to the device:</p> <ul style="list-style-type: none"> - Adhere to the necessary safety precautions to prevent personnel injury and property damage. <p>In the Controller DTM configuration dialog:</p> <ul style="list-style-type: none"> - select Settings > Firmware Download, - select Browse.., - select a firmware file, - select Open, - select Download and Yes. 	<p><i>Safety Messages on Firmware or Configuration Download</i></p> <p><i>Firmware Download</i></p>	<p>28</p> <p>47</p>

10	Assign Controller device once more (with firmware and system channel) <i>For repeated download this step is omitted.</i>	In the Controller DTM configuration dialog: - select Settings > Device Assignment , - select Scan , - select the Controller device (with loaded and defined system channel), - therefore check the appropriate checkbox, - select Apply , - close the Controller DTM configuration dialog via OK .	<i>Selecting the Device once more (with Firmware)</i>	45
11	Configuring Ethernet Device*	In the Controller DTM configuration dialog: - select Settings > Ethernet Devices , - click Devices Online > Search devices , - under Devices Online click the line for the device to be configured. - Respectively check Use Configuration of and select a device, the configuration of which shall be used. - Set the device name (=Name of Station) newly or overtake it, - click Set Name , - set the IP address, subnet mask and gateway address newly or overtake them, - click Set Address , - click Search devices once more to display the newly adjusted current values, - close the Controller DTM configuration dialog via OK .	<i>Ethernet Devices</i>	55
12	Configure Device* (*This step won't be necessary if the network structure is scanned automatically. See step 19.)	Configure the Device. In the DTM device configuration dialog: - select Configuration > Modules , - configure the PROFINET IO-Device modules, - select Configuration > Device Settings , - set the Device Settings . - Close the DTM device configuration dialog via OK .	<i>(See Operating Instruction Manual DTM for PROFINET IO-Devices)</i>	-
13	Configure Controller device For Device device: Set Name of Station and IP settings.	Configure the Controller device. - Double click to the device icon of the Controller. In the Controller DTM configuration dialog: - select Configuration > Controller Network Settings , - set the name of station for the Controller, - make the IP settings for the Controller, - possibly make further settings if required. - select Configuration > Device Table , - select the PROFINET IO-Device required, - Enter the name of station of the PROFINET IO-Device station, - select Configuration > IP Address Table , - Enter the IP settings of the PROFINET IO-Device station. - select Configuration > Process data , - set symbolic names for the configured modules or signals. - select Configuration > Isochronous Modules , - enable isochronous mode and set parameters for this mode. - select Configuration > Address Table , - activate or deactivate auto addressing, - for manual addressing: enter the addresses, - select Configuration > FSU/Port-Settings , - chose the FSU-Port settings. Therefore check FSU for the appropriate device(s) and for each port set the MAU-Type.	<i>Configuring Device Parameters</i> <i>Controller Network Settings</i> <i>Device Table</i> <i>IP Address Table</i> <i>Process Data</i> <i>Isochronous Modules</i> <i>Address Table</i> <i>FSU/Port-Settings</i>	71 76 79 81 83 84 87 91

		<ul style="list-style-type: none"> - select Configuration > Stations Timing, - select the appropriate station, - make the station global and the Sync domain settings for the PROFINET IO-Device stations, - select Configuration > Controller Settings, - set the Controller Settings (including the Port Settings for the Controller device and IOPS interface configuration). - close the Controller DTM config. dialog via OK. 	<i>Stations Timing</i> <i>Controller Settings</i>	93 106
14	Configure topology	Settings in the topology editor to make: <ul style="list-style-type: none"> - Connect the devices. - Configure the properties for devices and ports. 	(See <i>Operating Instruction Manual Toplogy Editor</i>)	-
15	Save project	Depending of the frame application. For the configuration software: <ul style="list-style-type: none"> - select File > Save. 	(See <i>Operating Instruction Manual of the Frame Application</i>)	-
16	Connect Controller device	Depending of the FDT Container. For netDevice: <ul style="list-style-type: none"> - right click to the device icon of the Controller, - select Connect. 	<i>Connecting/Disconnecting Device</i>	109
17	Licensing	How to order licenses later and how to transfer them to the device.	<i>Licenses</i>	128
18	Download Configuration	<ul style="list-style-type: none"> - Adhere to the necessary safety precautions to prevent personnel injury and property damage. Depending of the FDT Container. For netDevice: <ul style="list-style-type: none"> - right click to the device icon of the Controller, - select Download. 	<i>Safety Messages on Firmware or Configuration Download</i> <i>Download Configuration</i>	28 125
19	Network Scan / Upload	As an alternative to manually configure the Device, you can automatically scan the network structure by using the context menu Network Scan . Then confirm the query whether the module configuration of the Device shall be generated and download the configuration to the Controller device. Important: For the generation of the module configuration, you first must manually assign the IP settings to the Device in the PROFINET IO Controller DTM. Proceed the steps as follows: <ol style="list-style-type: none"> 1. Start the Network Scan function. 2. Make the settings in the Scan Response dialog of the Master DTM. 3. Click Create devices. 4. Assingn the IP address of the Device in the Controller DTM manually 5. Download of the configuration to the Controller device (Download). 6. Upload of the Device configuration and genere the module configuration. 7. Download the Device configuration to the Controller device (Download). 	<i>'Network Scan' and 'Upload'</i>	111

20	Diagnosis	<p>Depending of the FDT Container. For netDevice:</p> <ul style="list-style-type: none"> - right click to the device icon of the Controller, - select Diagnosis. - The Controller DTM diagnosis dialog is displayed. <p>(1) Check whether the communication is OK: Diagnosis > General Diagnosis > Device status "Communication" must be green! (2) "Communication" is green: Open the IO Monitor and test the input or output data. (3) "Communication" is not green: Use Diagnosis and Extended diagnosis for troubleshooting.</p> <ul style="list-style-type: none"> - close the Controller DTM diagnosis dialog via OK. 	<i>Overview Diagnosis</i>	141
21	IO Monitor	<p>Depending of the FDT Container: For netDevice:</p> <ul style="list-style-type: none"> - right click to the device icon of the Controller, - select Diagnosis, - select Tools > IO Monitor. - Check the input or output data, - close the IO Monitor dialog via OK. 	<i>IO Monitor</i>	160
22	Disconnect	<p>Depending of the FDT Container. For netDevice:</p> <ul style="list-style-type: none"> - right click to the device icon of the Controller, - select Disconnect. 	<i>Connecting/Disconnecting Device</i>	109

Table 9: Getting started - Configuration Steps

3.2 Safety Messages on Firmware or Configuration Download

If you perform a firmware download or a configuration download via the PROFINET IO-Controller DTM be aware of the following:

⚠ WARNING**Communication Stop caused by Firmware or Configuration Download**

Initiating a firmware or configuration download process during bus operation will stop the communication and a subsequent plant stop may cause unpredictable and unexpected behavior of machines and plant components, possibly resulting in personal injury and damage to your equipment.


The firmware download overwrites the existing firmware. The communication stop may cause loss of device parameters and possible device damage may occur.

- Stop the application program, before you start the firmware or configuration download.
- Make sure that all network devices are placed in a fail-safe condition.

⚠ WARNING**Mismatching System Configuration**


Mismatching system configuration loaded into the device could result in faulty data mapping in the application program and thus unexpected equipment operation may cause personal injury or damage of equipment.

- In the device use only a configuration suitable for the system.

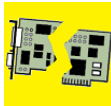NOTICE**Power Disconnect while downloading Firmware or Configuration**

If the power supply to the PC or device is interrupted while the firmware or configuration is being downloaded, the download will be aborted, the firmware may be corrupted, the device parameters may be lost, and the device may be damaged.

- During firmware or configuration download process do not interrupt the power supply to the PC, or to the device and do not perform a reset to the device!

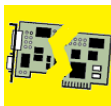NOTICE**Invalid Firmware**

Loading invalid firmware files could render your device unusable.

- Only proceed with a firmware version valid for your device.

4 Settings

4.1 Overview Settings

Settings Dialog Panes

The table below gives an overview for the individual **Settings** dialog panes descriptions:

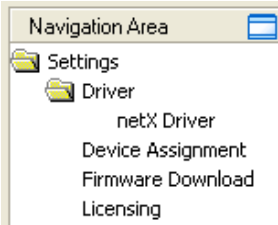
PROFINET IO-Controller DTM	Folder Name / Section	Subsection	Manual Page
 <p>Navigation Area – Settings (Example)</p> <p>Additional drivers can be displayed.</p>	Driver		32
		Verify or adapt Driver Settings	32
		cifX Device Driver	34
		netX Driver	34
		Configuring netX Driver	35
	Device Assignment		41
		Scanning for Devices	41
		Scanning for all Devices or for suitable only	43
		Selecting the Device (with or without firmware)	44
		Selecting the Device once more (with Firmware)	45
	Firmware Download		47
	Licenses		128

Table 10: Descriptions of the Dialog Panes Settings



Note: To edit the **Settings** dialog panes you need *User Rights* for “Maintenance”.



Notice the descriptions in the section *Settings for Driver and Device Assignment* on page 30.

To access to the online help with the descriptions of the drivers:

- Select **Settings > Driver > [Name of the assigned driver]**.
- Press the **F1** key.

4.2 Settings for Driver and Device Assignment

The following steps are needed to establish a connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device:

Verifying or adapting Driver Settings

Verify the Driver Settings and adapt them if necessary.

1. Open the DTM configuration dialog.
 - In the FDT container **netDevice** double click to the PROFINET IO-Controller device icon.
2. Verify that the default driver is checked and respectively check another or multiple drivers.
 - Select **Settings > Driver**.



Note! For PC cards cifX the **cifX Device Driver** is preset as a default driver. For all the other Hilscher devices the **netX Driver** is preset as a default driver.

- Use the **cifX Device Driver** if the PROFINET IO-Controller DTM is installed on the same PC as the PROFINET IO-Controller device.
- Use the **netX Driver** to establish an USB, Serial (RS232) or TCP/IP connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device.
- The **3SGateway Driver for netX (V3.x)** is used only in relationship with CODESYS.

To search for devices on the network you can check one or multiple drivers simultaneously.

- Verify that the default driver for your device is checked.
- If necessary, check another driver or multiple drivers.

Configuring Driver



Note!

- The **cifX Device Driver** requires no configuration.
- The configuration of the **3SGateway Driver for netX (V3.x)** is carried out via the CODESYS surface.

If you use the **netX Driver**, you respectively must configure it.

3. Configure the **netX Driver** if necessary.

For the driver **netXDriver** an individual driver dialog window can be opened where you can configure the driver.

- Select **Settings > Driver > netX Driver**.
- For netX Driver and communication via TCP/IP set the IP address of the device.

Adjust the driver parameters **netX Driver USB/RS232** only if they differ from the default settings.

Assigning the Controller device to the DTM

4. Scan for and select the devices (with or without firmware).
 - Select **Settings > Device Assignment**.
 - Under **Device selection** select *suitable only* or *all* and then **Scan**.
 - In the table check the required devices.
 - Select **Apply**.

Selecting and downloading the Firmware

5. If not yet a firmware was loaded to the device, select and download the firmware.
 - Select **Settings > Firmware Download**.
 - Select and download the firmware via **Download**.
 - Select **Apply**.
6. Scan for and select the devices (with firmware and defined system channel) once more.

For repeated download this step is omitted.

 - Select **Settings > Device Assignment**.
 - Select **Scan**.
 - In the table check the required device.
7. Close the DTM configuration dialog via **OK**.

Connecting the Device

8. In **netDevice** put a right-click on the PROFINET IO-Controller device icon.
9. Select the **Connect** command from the context menu.
- In the network view the device description at the device icon of the Controller is displayed with a green colored background. The PROFINET IO-Controller device now is connected to the PROFINET IO-Controller DTM via an online connection.

Further Information



For descriptions about these steps refer to the sections following hereafter.

4.3 Driver

The **Driver** dialog pane displays the drivers to be used for a PROFINET IO-Controller DTM to establish a device communication connection.



Note! A **default driver** is set in the configuration software.

Driver			
	Driver	Version	ID
<input checked="" type="checkbox"/>	CIFX Device Driver	1.101.1.9801	{368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}
<input type="checkbox"/>	3SGateway Driver for netX (V3.x)	0.9.1.2	{787CD3A9-4CF6-4259-8E4D-109B6A6BEA91}
<input type="checkbox"/>	netX Driver	1.103.2.5183	{B54C8CC7-F333-4135-8405-6E12FC88EE62}

Figure 5: Default Driver 'CIFX Device Driver' for PC cards CIFX

Parameter	Meaning
Driver	Name of the driver (for more details see descriptions hereafter)
Version	ODMV3 Version of the respective driver
ID	ID of the driver (driver identification)

Table 11: Driver Selection List Parameters

To establish a connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device, verify if the default driver is checked and respectively check another driver or multiple drivers.

4.3.1 Verify or adapt Driver Settings

Proceed as follows:

1. Select **Settings > Driver** in the navigation area.
- The **Driver** dialog pane is displayed with the available drivers and the setting for the default driver.

Driver			
	Driver	Version	ID
<input checked="" type="checkbox"/>	CIFX Device Driver	1.101.1.9801	{368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}
<input type="checkbox"/>	3SGateway Driver for netX (V3.x)	0.9.1.2	{787CD3A9-4CF6-4259-8E4D-109B6A6BEA91}
<input type="checkbox"/>	netX Driver	1.103.2.5183	{B54C8CC7-F333-4135-8405-6E12FC88EE62}

Figure 6: Default Driver 'CIFX Device Driver' for PC cards CIFX (example)

Driver			
	Driver	Version	ID
<input type="checkbox"/>	CIFX Device Driver	1.101.1.9801	{368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}
<input type="checkbox"/>	3SGateway Driver for netX (V3.x)	0.9.1.2	{787CD3A9-4CF6-4259-8E4D-109B6A6BEA91}
<input checked="" type="checkbox"/>	netX Driver	1.103.2.5183	{B54C8CC7-F333-4135-8405-6E12FC88EE62}

Figure 7: Default Driver 'netX Driver' for Hilscher devices except for PC cards CIFX (example)

2. Verify that the default driver is checked.
- Verify that the default driver for your device is checked.

Default Driver (Pre-settings in the Configuration Software): For PC cards cifX the **cifX Device Driver** is preset as a default driver. For all the other Hilscher devices the **netX Driver** is preset as a default driver.

3. Respectively check another driver.



Note! The driver used for the connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device must be supported by the device and must be available for the device.

- Use the **cifX Device Driver** if the PROFINET IO-Controller DTM is installed on the same PC as the PROFINET IO-Controller device.
- Use the **netX Driver** to establish a USB, Serial (RS232) or TCP/IP connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device.
- The **3SGateway Driver for netX (V3.x)** is used only in relationship with CODESYS. The version V3.x refers to the driver version defined by 3S-Smart Software Solutions GmbH.

➤ Check the checkbox for the driver in the selection list.

4. Respectively check multiple drivers.

To search for devices on the network you can check multiple drivers simultaneously.

Driver			
	Driver	Version	ID
<input checked="" type="checkbox"/>	CIFX Device Driver	1.101.1.9801	{368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}
<input type="checkbox"/>	3SGateway Driver for netX (V3.x)	0.9.1.2	{787CD3A9-4CF6-4259-8E4D-109B6A6BEA91}
<input checked="" type="checkbox"/>	netX Driver	1.103.2.5183	{B54C8CC7-F333-4135-8405-6E12FC88EE62}

Figure 8: Manual Selection of multiple drivers (Example)

4.3.2 cifX Device Driver

In the PROFINET IO Controller DTM for the **cifX Device Driver** no driver dialog pane is available, since for the **cifX Device Driver** no driver settings are required.

The **cifX Device Driver** will be used if the PROFINET IO Controller DTM is installed in the same PC as the PROFINET IO Controller device.



Note: To establish a connection from a DTM to a Controller device via the **cifX Device Driver**, the **cifX Device Driver** must be installed and the driver must have access to the Controller device.

4.3.3 netX Driver

The **netX Driver** is used to connect the DTM to the device via different connection types. The DTM communicates with the device via an USB connection, a serial (RS232) connection or a TCP/IP connection. The **netX Driver** establishes

- via the USB interface of the device and the USB port of the PC an USB connection to the device,
- via the RS232 interface of the device and the COM port of the PC a serial connection (RS232) to the device
- and via Ethernet a TCP/IP connection to the device.

To connect the DTM to the physical layer of the device the **netX Driver** software works in combination with the software components:

- “USB/COM connector” for the USB connection and for the serial connection (RS232) and
- “TCP/IP connector” for the Ethernet connection.

4.3.4 Configuring netX Driver

The following steps are required to configure the netX Driver:

USB/RS232 Connection

To set the driver parameters for an USB/RS232 connection note:




Note: Adjust the driver parameters netX Driver USB/RS232 only if they differ from the default settings. After saving the changed driver parameters, these parameters are used for the device assignment when scanning devices.

For setting the driver parameters for an USB connection or a serial connection:

1. Select **Settings > Driver > netX Driver > USB/RS232 Connection**.
 - Set the driver netX Driver USB/RS232 parameters.

TCP/IP Connection

For setting the driver parameters for a TCP/IP connection:

1. Select **Settings > Driver > netX Driver > TCP Connection**.
2. Set IP Address of the device:
 - Add an IP Range via **Select IP Range** .
3. Under **IP Range Configuration > IP Address** enter the IP Address of the device (**Use IP Range** is unchecked).

Or

4. Set IP Range:
 - Check **Use IP Range**.
 - Under **IP Range Configuration > IP Address** enter the start address (left side) and the ending address of the IP scanning range (right side).
 5. Click **Save**, to save the IP address or the IP range.
- After saving the changed driver parameters, these parameters are used for the device assignment when scanning devices.

4.3.5 netX Driver - USB/RS232 Connection

The communication from the DTM to the device via an **USB/RS232 Connection** is used when the DTM is installed on a PC and between the PC and the device

- an USB connection
- or a serial connection (RS232) exists.

The DTM accesses the device via the USB interface or via the RS232 interface. This requires either to connect an USB port of the PC to the USB interface of the device using an USB cable or to connect a physical COM port of the PC to the RS232 interface of the device via a serial cable.

The **netX Driver / USB/RS232 Connection** supports all physical and virtual COM ports available on the PC.

Via the RS232 interface or USB interface, the device is configured or diagnosis is performed.

4.3.5.1 Driver Parameters for netX Driver - USB/RS232 Connection

The settings of the driver parameters for the USB/RS232 connection are made via the **netX Driver / USB/RS232 Connection** configuration dialog.

- Open the **USB/RS232 Connection** dialog via navigation area **Settings > Driver > netX Driver**.

- The **USB/RS232 Connection** dialog is displayed:

The screenshot shows the 'netX Driver' configuration window with the 'USB/RS232 Connection' tab selected. The 'TCP Connection' tab is also visible. The 'Enable USB/RS232 Connector (Restart of ODM required)' checkbox is checked. The 'Select Port:' dropdown is set to 'COM1'. The 'Port Configuration' section includes a 'Disable Port' checkbox (unchecked) and several settings: 'Baud Rate' (115.2 kBit/s), 'Byte Size' (8 Byte), 'Stop Bits' (1 Stopbit), 'Parity' (No Parity), 'Send Timeout' (1000 ms), 'Reset Timeout' (10000 ms), and 'Keep Alive Timeout' (2000 ms). At the bottom, there are 'Restore', 'Save', and 'Save All' buttons.

Figure 9: netX Driver > USB/RS232 Connection


Parameter	Meaning	Range of Value / Default Value
Enable USB/RS232 Connector (Restart of ODM required)	checked: The netX Driver can communicate via the USB/RS232 interface. unchecked: The netX Driver can <u>not</u> communicate via the USB/RS232 interface. If the check mark for Enable USB/RS232 Connector is set or removed, then the ODM server must be restarted ¹ , to make the new setting valid. ¹ Restart the ODM server via the ODMV3 Tray Application : - In the foot line click on  using the right mouse key. - In the context menu select Service > Start .	checked, unchecked; Default: unchecked
Select Port	Depending on the COM ports (interfaces) available on the PC, they will be listed under Select Port .	COM 1 to COM N
Port Configuration		
Disable Port	checked: No connection. unchecked: The netX Driver tries to establish a connection using the configured USB/RS232 interface.	checked, unchecked (Default)
Baud rate	Transfer rate: number of bits per second. The device must support the baud rate.	9.6, 19.2, 38.4, 57.6 or 115.2 [kBit/s]; Default (RS232): 115.2 [kBit/s]
Stop bits	Number of stop bits sent after the transfer of the send data for synchronization purposes to the receiver.	Stop bit: 1, 1.5, 2; Default (RS232): 1
Send Timeout	Maximum time before the transfer of the transmission data is canceled, when the send process fails, for example, because of the transfer buffer is full.	100 ... 60.000 [ms]; Default (RS232 and USB): 1000 ms
Reset Timeout	Maximum time for a device reset, including the re-initialization of the physical interface used for the communication.	100 ... 60.000 [ms]; Default (RS232 and USB): 5000 ms
Byte size	Number of bits per byte by byte specification	7 Bit, 8 Bit; Default (RS232): 8 Bit
Parity	In the error detection in data transmission using parity bits, "parity" describes the number of bits occupied with 1 in the transmitted information word. No Parity: no parity bit Odd Parity: The parity is "odd" if the number of bits occupied with 1 in the transmitted information word will be odd. Even parity: The parity is "even" if the number of bits occupied with 1 in the transmitted information word will be even. Mark Parity: if the parity bit is always 1, this will be named mark-parity (the bit does not contain any information). Space Parity: if the parity bit always 0, this will be named space-parity (the bit represents an empty space).	No Parity, Odd Parity, Even Parity, Mark Parity, Space Parity; Default (RS232): No Parity
Keep Alive Timeout	The "Keep Alive" mechanism is used to monitor whether the connection to the device is active. Connection errors are detected using a periodic heartbeat mechanism. The heartbeat mechanism will be initiated after the set time has elapsed if the communication has failed.	100 ... 60.000 [ms]; Default (RS232 and USB): 2000 ms
Restore	Resets all settings in the configuration dialog to the default values.	
Save	Saving all settings made in the configuration dialog netX Driver > Save USB/RS232 Connection , i. e. only for the selected connection type.	
Save All	Saving all settings made in the configuration dialog netX Driver , i. e. for all connection types.	

Table 12: Parameters netX Driver > USB/RS232 Connection

4.3.6 netX Driver - TCP/IP Connection

The communication from the DTM to the device via a **TCP/IP Connection** is used in the following two typical applications:

Application 1: The device has its own Ethernet interface. The DTM is installed on a PC and the TCP/IP connection is established from this PC to the stand-alone device. The IP address of the device is used.

Application 2: The device is installed in a remote PC. The DTM is installed on an additional PC and the TCP/IP connection is established from this PC to the remote PC. The IP address of the remote PC is used. For the TCP/IP connection is made, on the remote PC the cifX TCP/IP server must be started. The cifX TCP/IP server allows the remote access to the device via a TCP/IP connection.



Note: An exe file for the cifXTCP/IP server is provided on the product CD in the *Tools* directory.

Via the TCP/IP interface of the device or of the remote PC, the device is configured or diagnosis is performed.




4.3.6.1 Driver Parameters for netX Driver - TCP/IP Connection

The settings of the driver parameters for the TCP/IP connection are made via the **netX Driver / TCP Connection** configuration dialog.

- Open the **TCP Connection** dialog via navigation area **Settings > Driver > netX Driver**.
- The dialog **netX Driver** is displayed:
- Select **TCP Connection**.

The screenshot shows the 'netX Driver' configuration window with the 'TCP Connection' tab selected. The 'Enable TCP Connector (Restart of ODM required)' checkbox is checked. Below it, 'Select IP Range' is set to 'IP_RANGED' with '+' and '-' icons. 'Scan Timeout' is 100 ms. The 'IP Range Configuration' section contains a 'Disable IP Range' checkbox (unchecked). It also shows 'IP Address' (192.168.1.1), 'Use IP Range' (unchecked), 'TCP Port' (50111), and 'Address Count' (1). At the bottom of this section are 'Send Timeout' (1000 ms), 'Reset Timeout' (20000 ms), and 'Keep Alive Timeout' (2000 ms). The main window has 'Restore', 'Save', and 'Save All' buttons at the bottom right.

Figure 10: netX Driver > TCP Connection

Parameter	Meaning	Range of Value / Default Value
Enable TCP Connector (Restart of ODM required)	<p>checked: The netX Driver can communicate via the TCP/IP interface.</p> <p>unchecked: The netX Driver can <u>not</u> communicate via the TCP/IP interface.</p> <p>If the check mark for Enable TCP Connector is set or removed, then the ODM server must be restarted¹, to make the new setting valid.</p> <p>¹ Restart the ODM server via the ODMV3 Tray Application:</p> <ul style="list-style-type: none"> - In the foot line click on  using the right mouse key. - In the context menu select Service > Start. 	checked, unchecked; Default: unchecked
Select IP Range	<p>Via Select IP Range already created IP ranges can be selected.</p> <p>Via  an additional IP range can be added.</p> <p>Via  an IP range can be deleted.</p>	

Parameter	Meaning	Range of Value / Default Value
Scan Timeout [ms]	With Scan Timeout can be set, how long to wait for a response while a connection is established.	10 ... 10000 [ms]; Default: 100 ms
IP Range Configuration		
Disable IP Range	checked: No connection. unchecked: The netX Driver tries to establish a connection using the configured TCP/IP interface.	checked, unchecked (Default)
IP Address (left)	Enter the IP address of the device, (if Use IP Range is not checked). Enter the start address of the IP scanning range, (if Use IP Range is checked).	valid IP address; Default: 192.168.1.1
Use IP Range	checked: An IP address range is used. unchecked: Only one IP address is used.	checked, unchecked; Default: unchecked
IP Address (right)	Enter the ending address of the IP scanning range, (only if Use IP Range is checked).	valid IP address; Default: 0.0.0.0
Address Count	Displays the scanning range address count, depending on the selected IP-start or IP-end address. (For this read the note given below.)	recommended: 10
TCP Port	Identifies the endpoint of a logical connection or addresses a specific endpoint on the device or PC.	0 - 65535; Default Hilscher device: 50111
Send Timeout [ms]	Maximum time before the transfer of the transmission data is canceled, when the send process fails, for example, because of the transfer buffer is full.	100 ... 60.000 [ms]; Default (TCP/IP): 1000 ms
Reset Timeout [ms]	Maximum time for a device reset, including the re-initialization of the physical interface used for the communication.	100 ... 60.000 [ms]; Default (TCP/IP): 2000 ms
Keep Alive Timeout [ms]	The "Keep Alive" mechanism is used to monitor whether the connection to the device is active. Connection errors are detected using a periodic heartbeat mechanism. The heartbeat mechanism will be initiated after the set time has elapsed if the communication has failed.	100 ... 60.000 [ms]; Default (TCP/IP): 2000 ms
Restore	Resets all settings in the configuration dialog to the default values.	
Save	Saving all settings made in the configuration dialog netX Driver > Save TCP/IP Connection , i. e. only for the selected connection type.	
Save All	Saving all settings made in the configuration dialog netX Driver , i. e. for all connection types.	

Table 13: Parameters netX Driver > TCP Connection



Note: Do not use large IP ranges in combination with a low scan timeout. Microsoft introduced in Windows® XP SP2 a limit of concurrent half-open outbound TCP/IP connections (connection attempts) to slow the spread of virus and malware from system to system. This limit makes it impossible to have more than 10 concurrent half-open outbound connections. Every further connection attempt is put in a queue and forced to wait. Due to this limitation a large IP range used in combination with a low scan timeout could prevent the connection establishment to a device.

4.4 Device Assignment



Note: In the **Device Assignment** dialog pane you first must assign the PROFINET IO-Controller device to the PROFINET IO-Controller DTM by checking the check box. This is essential to establish an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device later, as described in section *Connecting/Disconnecting Device* on page 109.

Therefore in the **Device Assignment** dialog pane you scan for the PROFINET IO-Controller device and select it.

If the device did not get a firmware or shall get a new firmware:

1. first you scan for the device (with or without firmware) and select the device,
2. then you download a firmware to the device and
3. subsequently you scan for the device (with firmware) once more and select the device again.

4.4.1 Scanning for Devices

1. Select **Settings > Device Assignment** in the navigation area.

➤ The dialog pane **Device Assignment** is displayed.

Device Assignment

Scan progress: 3/5 Devices (Current device: -)

Device selection: suitable only

	Device	Hardware Port 0/1/2/3	Slot number	Serial number	Driver	Channel Protocol	Access path
<input checked="" type="checkbox"/>	Device Cl*	-{}/PROFIBUS{}/	1	20148	CIFX Device Driver	Undefined Undefined	...\cifX3_SYS

Access path:

Figure 11: Device Assignment - detected Devices (* The name of the device class is displayed.) – Example for a device without firmware

2. Under **Device Selection** select *suitable only*.
3. Select **Scan**, to start the scanning process.

➤ In the table all devices are displayed, which can be connected to the PROFINET IO-Controller DTM via the preselected driver.



Note: For devices, which have been found via the **cifX Device Driver** in the column **Access path** the indication **...\cifX[0toN]_SYS** is displayed. This is correct, as long as a device did not get a firmware. After the firmware download has been completed, in the column **Access path** the indication **...\cifX[0toN]_Ch[0to3]** is displayed.

Parameter	Meaning	Range of Value / Default Value
Device selection	Selecting suitable only or all devices.	suitable only, all
Device	Device class of the PROFINET IO-Controller Devices.	
Hardware Port 0/1/2/3	Shows, which hardware is assigned to which communication interface.	
Slot number	Shows the Slot Number (Card ID) preset at the PC card cifX via the Rotary Switch Slot Number (Card ID) . The indication n/a means that no Slot-Number (Card ID) exists. This will occur if the PC card cifX is not equipped with a Rotary Switch Slot Number (Card ID) or for PC cards cifX equipped with a Rotary Switch Slot Number (Card ID) if the rotary switch is set to the value 0 (zero).	1 to 9, n/a
Serial number	Serial number of the device	
Driver	Name of the driver	
Channel Protocol	Shows, which firmware is loaded to which device channel. The data for the used channel consists of the protocol class and the communication class. a.) For devices without firmware: Undefined Undefined, b.) For devices with firmware: Protocol name corresponding to the used Firmware	
Access path (last column on the right)	Depending on the used driver in the column Access path different data to the device are displayed. For the cifX Device Driver the following data are displayed: a.) For devices without firmware: ...\\cifX[0toN]_SYS, b.) For devices with firmware: ...\\cifX[0toN]_Ch[0to3]. cifX[0toN] = Board number 0 to N Ch[0to3] = Channel number 0 to 3	Depending on the device and on the driver: board or channel number, IP address or COM interface
Access path (at the lower side of the dialog pane)	If in the table a device is checked, under Access path (at the lower side of the dialog pane) the driver identification or depending on the used driver additional data to the device will be displayed. For the cifX Device Driver the following data are displayed: a.) For devices without firmware: ...\\cifX[0toN]_SYS, b.) For devices with firmware: ...\\cifX[0toN]_Ch[0to3]. cifX[0toN] = Board number 0 to N Ch[0to3] = Channel number 0 to 3	driver identification (ID) depending on the device and on the driver: board or channel number, IP address or COM interface

Table 14: Parameters of the Device Assignment

4.4.1.1 Scanning for all Devices or for suitable only

all

1. Under **Device Selection** select *all*.
2. Select **Scan**.

Device Assignment							
Scan progress: 5/5 Devices (Current device: -)							
<div>Device selection: all</div>							<div>Scan</div>
	Device	Hardware-Port 0/1/2/3	Slot number	Serial number	Driver	Channel Protocol	Access path
<input type="checkbox"/>	Device Cl.*	-/-/PROFIBUS/-	1	20148	CIFX Device Driver	Undefined Undefined	...\cifX3_SYS
<input type="checkbox"/>	Device Cl.*	-/-/DeviceNet/-	n/a	20027	CIFX Device Driver	Undefined Undefined	...\cifX1_SYS
<input type="checkbox"/>	Device Cl.*	-/-/-/-	n/a	20058	netX Driver	Undefined Undefined	...\192.168.1..
<input type="checkbox"/>	Device Cl.*	Ethernet/Ethernet/-/-	n/a	20288	CIFX Device Driver	Undefined Undefined	...\cifX2_SYS
<input type="checkbox"/>	Device Cl.*	-/-/CANopen/-	n/a	20022	CIFX Device Driver	Undefined Undefined	...\cifX0_SYS

Figure 12: Device Assignment - detected Devices (* The name of the device class is displayed.) Example for Devices without Firmware

- ⇒ In the table all devices are displayed, which are attainable in the network and which can be connected to a single DTM each via the preselected drivers.



Note: During a subsequent firmware download in the selection window **Select Firmware File** all files from the selected folder are displayed, under **Files of Type** „All Files (*.*)“ is displayed and the check box **Validate the selected firmware file.** is unchecked.

suitable only

1. Under **Device Selection** select *suitable only*.
2. Select **Scan**.

- ⇒ In the table all devices are displayed, which can be connected to the PROFINET IO-Controller DTM via the preselected drivers.



Note: During a subsequent firmware download in the selection window **Select Firmware File** only firmware files from the selected folder are displayed, under **Files of Type** „Firmware Files (*.nxm)“ or „Firmware Files (*.nxf)“ is displayed and the check box **Validate the selected firmware file.** is checked.

4.4.2 Selecting the Device (with or without firmware)



Note: A connection with the PROFINET IO-Controller DTM can only be established with one PROFINET IO-Controller device.

To select the physical PROFINET IO-Controller device (with or without firmware):

1. Check the appropriate device.

Device Assignment

Scan progress: 5/5 Devices (Current device: -)

Device selection:

	Device	Hardware Port 0/1/2/3	Slot number	Serial number	Driver	Channel Protocol	Access path
<input checked="" type="checkbox"/>	Device Cl.	-/-/PROFIBUS/-	1	20148	CIFX Device Driver	PROFIBUS Master	...{cifx3_SYS

Access path: {368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}{cifx3_SYS

Figure 13: Device Assignment - Selecting the Device (* The name of the device class is displayed.) – Example for a device without firmware / one Device is selected

- Under **Access path** (below in the dialog pane) the access path to the device, e. g. the driver identification, or depending on the used driver additional access data of the device are displayed.

2. Select **Apply**, to apply the selection.



Note: Before an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device can be established, a firmware must be loaded to the device and the device must be selected once more.



For further information refer to section *Firmware Download* on page 47 or to section *Selecting the Device once more (with Firmware)* on page 45.

4.4.3 Selecting the Device once more (with Firmware)



Note: For repeated download this step is omitted.

To select the PROFINET IO-Controller device (with firmware and defined system channel) once more, proceed as described hereafter:

all

1. Under **Device Selection** select *all*.
2. Select **Scan**.
 - In the table all devices are displayed, which are attainable in the network and which can be connected to a DTM via the preselected drivers.
3. Check the appropriate device.

Device Assignment

Scan progress: 5/5 Devices (Current device: -)

Device selection: all Scan

	Device	Hardware-Port 0/1/2/3	Slot number	Serial number	Driver	Channel Protocol	Access path
<input checked="" type="checkbox"/>	Device Cl.*	-/-/PROFIBUS/-	1	20148	CIFX Device Driver	PROFIBUS-DP Master	...\cifX3_Ch0
<input type="checkbox"/>	Device Cl.*	-/-/DeviceNet/-	n/a	20027	CIFX Device Driver	DeviceNet Master	...\cifX1_Ch0
<input type="checkbox"/>	Device Cl.*	-/-/-/-	n/a	20058	netX Driver	Undefined Undefined	...\192.168....
<input type="checkbox"/>	Device Cl.*	Ethernet/Ethernet/-/-	n/a	20288	CIFX Device Driver	PROFINET IO Device	...\cifX2_Ch0
<input type="checkbox"/>	Device Cl.*	-/-/CANopen/-	n/a	20022	CIFX Device Driver	Undefined Undefined	...\cifX0_SYS

Access path: {368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}\cifX3_Ch0

Figure 14: Device Assignment - Selecting the Device (* The name of the device class is displayed.) – Example for Devices with and without Firmware / one Device is selected



Note: After the firmware download has been completed, for the devices which have been detected via the **cifX Device Driver** the following data are displayed:

- In the column **Channel Protocol**: the data for the firmware for the used channel
- In the column **Access path** or under **Access path** (below in the dialog pane): the data: ...\\cifX[0toN]_Ch[0to3].
 cifX[0toN] = board number 0 to N
 Ch[0to3] = channel number 0 to 3

4. Select **Apply**, to apply the selection.
5. Or select **OK**, to apply the selection and to close the DTM interface dialog.
6. Connect the DTM to the device using the context menu (right mouse click).

Or:

suitable only

1. Under **Device Selection** select *suitable only*.
2. Select **Scan**.
- In the table all devices are displayed, which can be connected to the PROFINET IO-Controller DTM via the preselected drivers.
3. Check the appropriate device.

Device Assignment

Scan progress: 5/5 Devices (Current device: -)

Device selection: suitable only Scan

	Device	Hardware Port 0/1/2/3	Slot number	Serial number	Driver	Channel Protocol	Access path
<input checked="" type="checkbox"/>	Device Cl*	-/-/PROFIBUS/-	1	20148	CIFX Device Driver	PROFIBUS-DP Master	...\cifX3_Ch0

Access path: {368BEC5B-0E92-4C0E-B4A9-64F62AE7AAFA}\cifX3_Ch0

Figure 15: Device Assignment - Selecting the Device (* The name of the device class is displayed.) – Example for a device with firmware / one Device is selected



Note: After the firmware download has been completed, for the devices which have been detected via the **cifX Device Driver** the following data are displayed:

- In the column **Channel Protocol**: the data for the firmware for the used channel
- In the column **Access path** or under **Access path** (below in the dialog pane): the data: ...\\cifX[0toN]_Ch[0to3].
cifX[0toN] = board number 0 to N
Ch[0to3] = channel number 0 to 3

4. Select **Apply**, to apply the selection.
5. Or select **OK**, to apply the selection and to close the DTM interface dialog.
6. Connect the DTM to the device using the context menu (right mouse click).



For further information how to establish an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device, refer to section *Connecting/Disconnecting Device* on page 109.

4.5 Firmware Download

Using the **Firmware Download** dialog a firmware can be transferred to the device.



Note: Prior to the firmware download, you must select the driver and the Controller device (with or without firmware) and the device must be assigned to the hardware.



For further information refer to section **Overview Settings** on page 29.

To load the firmware to the device:

1. In the navigation area select **Settings > Firmware Download**.

➤ The dialog **Firmware-Download** pane is displayed.

Figure 16: Firmware Download

Element	Meaning
Name	The path and name of the firmware file selected are displayed.
Version	The version and build version of the firmware file selected are displayed.
Browse...	Via 'Browse...' you can select the firmware file for the download.
Download	Via 'Download' you can download the firmware to the device.

Table 15: Parameter Firmware Download

2. Select the firmware file.

➤ Select **Browse**.

Device is not assigned to the Hardware

If the device is not assigned to the Hardware, the error message 'The device is not assigned to the hardware!' is displayed:

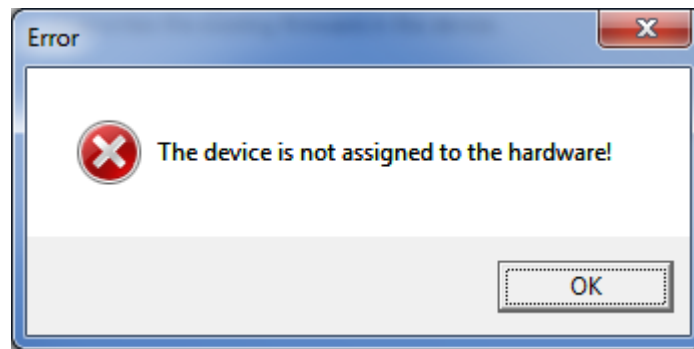


Figure 17: Error Message 'The device is not assigned to the hardware!'

- Click **OK** and select and assign the Controller device as described in section *Device Assignment*.

Device is assigned to the Hardware

- The selection window **Select Firmware File** is displayed.
- Enlarge the selection window to view the columns **Hardware** and **Version**.

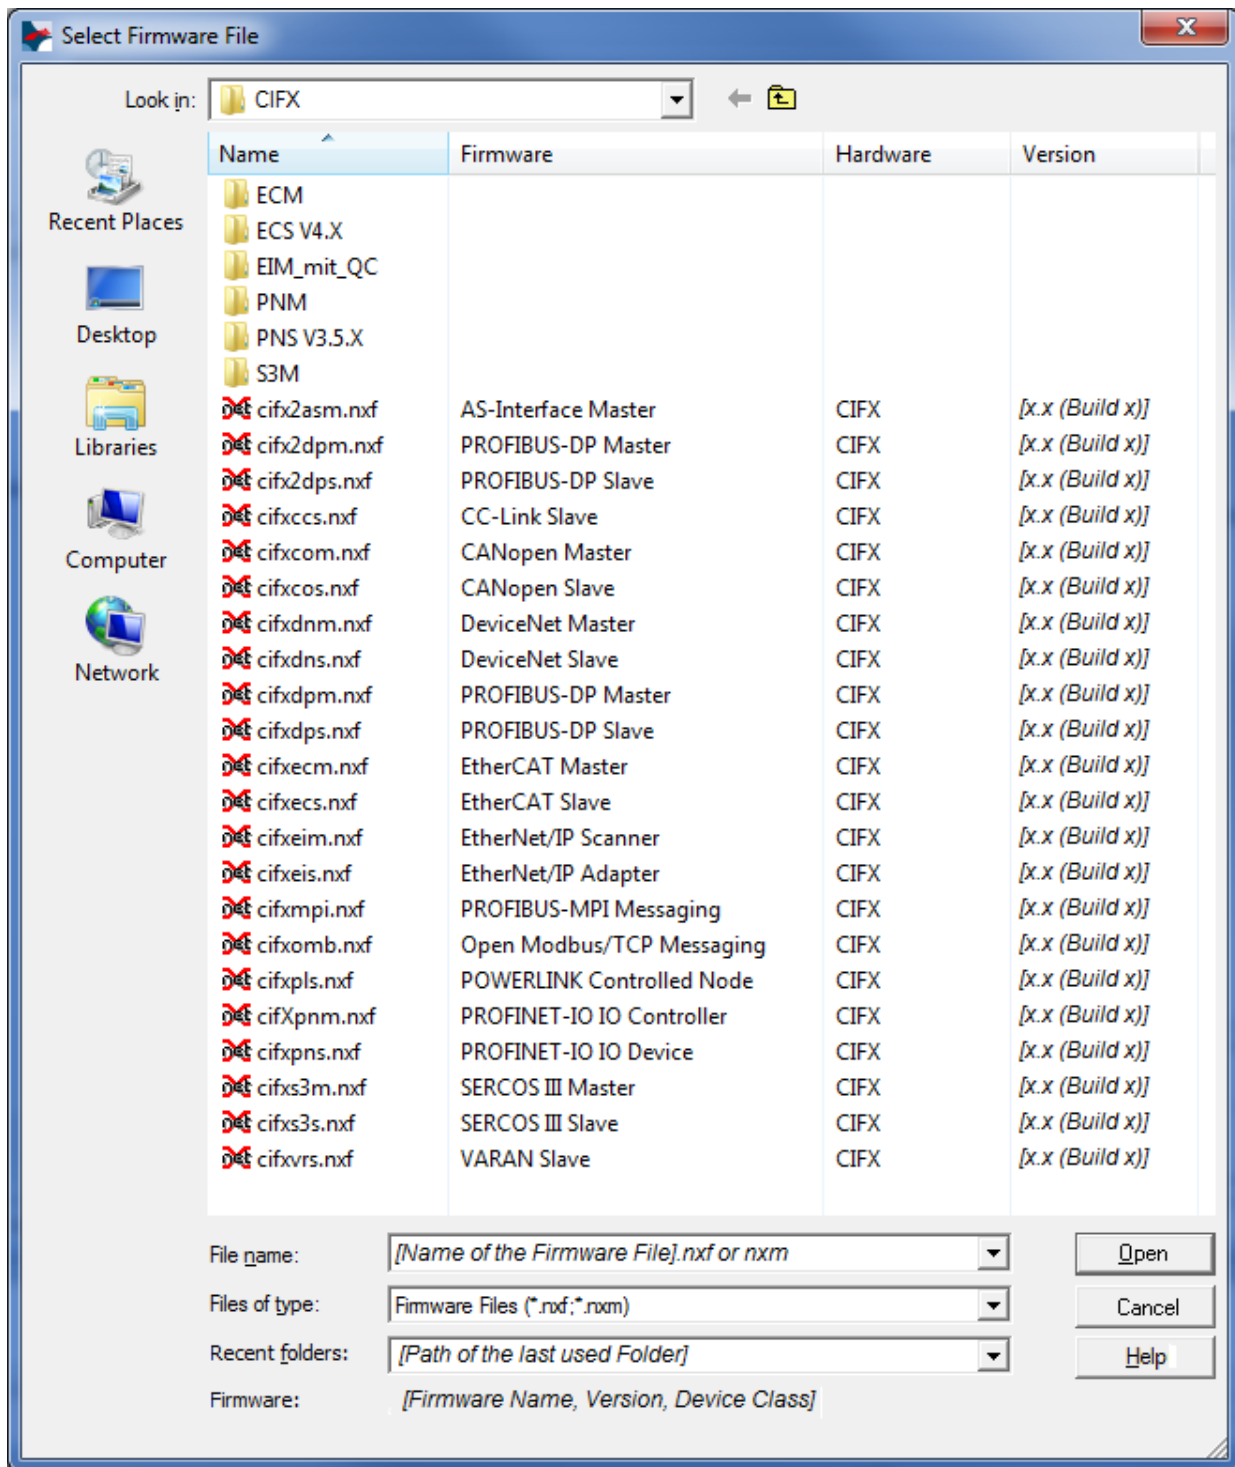


Figure 18: Window 'Select Firmware File' (Example CIFX)

Parameter	Meaning	Range of Value / Default Value
Column Name	File name of the firmware file To sort the entries of the window Select Firmware File by name click to the column head Name .	nxf, nxm
Column Firmware	Name of the firmware (consisting of the protocol name and protocol class)	
Column Hardware	Device class of the associated hardware	e. g. CIFX, COMX, COMX 51, NETJACK 10, NETJACK 50, NETJACK 51,

		NETJACK 100, NETTAP 50 (Gateway), NETTAP 100 (Gateway), NETBRICK 100 (Gateway)
Column Version	Firmware version	x.x (build x)
Tooltip	To view the tooltip information move with the mouse pointer over the selected firmware line. <div> Type: Hilscher firmware file for netX-based targets (NXF) Size: 563 KB Date of change: 2013/03/26 11:10 </div>	
Files of Type	„All Files (*.*)“ if before in the Device Assignment pane under Device selection all was selected. „Firmware Files (*.nxm)“ or <i>Firmware Files (*.nxf)</i> if before in the Device Assignment pane under Device selection <i>suitable only</i> was selected.	All Files (*.*), Firmware Files (*.nxm), Firmware Files (*.nxf)
Recent folders	Path of the recently opened folder	
Firmware	As soon as the firmware file has been selected, under Firmware the name, the version and the build version as well as the device class for the selected firmware is displayed.	Name, Version, Build Version, Device Class for the selected firmware
Help	Button, to open the online help of the DTM.	

Table 16: Parameters Select Firmware File




Further descriptions to the selection window **Select Firmware File** are included in the context sensitive help (**F1** key) of the Microsoft Corporation.




Note: After in the **Device Assignment** pane under **Device selection** *all* or *suitable only* has been set, during a subsequent firmware download in the selection window **Select Firmware File** the following data are displayed or set:

(for list box entry →)	all	suitable only
In the selection window Select Firmware File :	all files from the selected folder	only firmware files from the selected folder
Under Files of Type *:	„All Files (*.*)“	„Firmware Files (*.nxm)“, „Firmware Files (*.nxf)“
Validation:	A restricted validation will be performed if the selected firmware is applied for the download.	A validation is made whether the firmware file is suitable for the PROFINET IO-Controller DTM.

*These settings in the selection window **Select Firmware File** can also be changed manually.

- In the selection window mark the firmware file to be loaded using the mouse.
-  In the selection window under **Firmware** the name and the version of the firmware are displayed.
- In the selection window select the **Open** button.

Validation

-  A validation is made, whether the selected firmware file is suitable for the PROFINET IO-Controller device.

Invalid Firmware

NOTICE

Invalid Firmware

Loading invalid firmware files could render your device unusable.

➤ Only proceed with a firmware version valid for your device.

- ⇒ If a firmware file is selected, which is not valid for the assigned device, the request **Select Firmware File** will be displayed.
'Invalid firmware for assigned device!
[detailed explication]
Shall firmware file nevertheless be applied for the download?'



Figure 19: Request Select Firmware File - Example Invalid Firmware

- Answer to the request with **No** and select a valid firmware.
- ⇒ The selection window is closed.

Valid Firmware

➤ The selection window is directly closed (without dialog).

5. Start firmware upgrade.

⚠ WARNING

Communication Stop caused by Firmware Update, faulty System Operation possible, Overwriting of Firmware or Loss of Device Parameters

Before you initiate a firmware download process, while the bus is still in operation status:

- Stop the application program.
- Make sure that all network devices are placed in a fail-safe condition.

NOTICE

Firmware Corruption or Loss of Parameters caused by Power Disconnect during Firmware Download

- During firmware download process, do not interrupt the power supply to the PC, or to the device and do not perform a reset to the device!
- In the dialog pane **Firmware Download** click to the **Download** button, to download the firmware.
- The request **Do you really want to download the firmware?** is displayed.

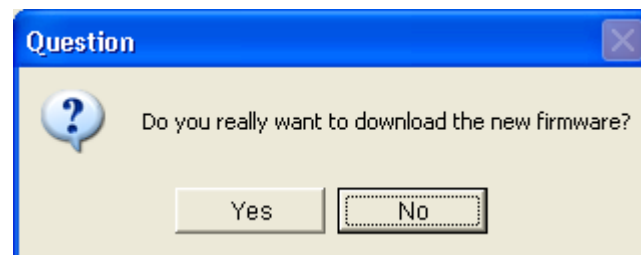


Figure 20: Request - Do you really want to download the firmware?

6. Click **Yes**.

- If you are sure, that you have selected the appropriate firmware file answer to the request with **Yes** otherwise with **No**.
- During the download a progress bar is displayed ('Download active, device performs initialization...'), in the status line a clock / green hook symbol is displayed and in the dialog pane **Firmware Download** **Download** is grayed out.

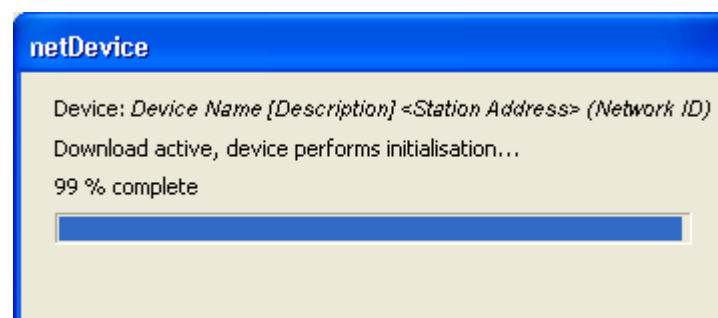


Figure 21: Firmware Download - Progress Bar

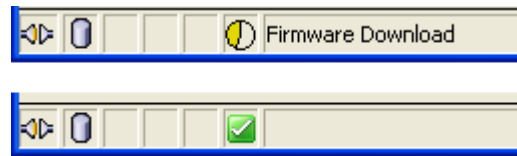


Figure 22: Clock Symbol and Hook Symbol green

- In the **Firmware-Download** dialog pane the path and name as well as the version of the selected firmware file are displayed.

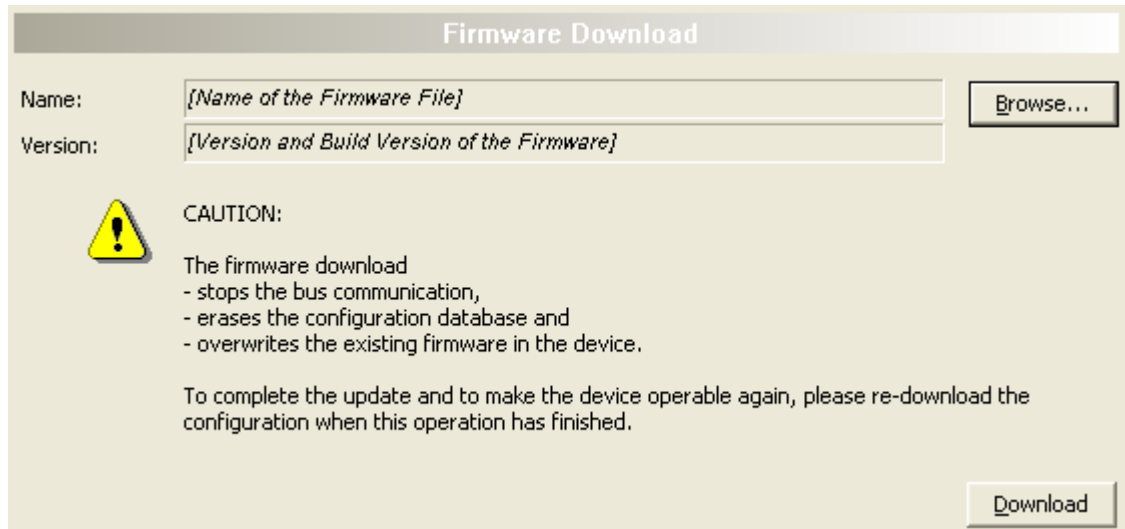


Figure 23: Firmware Download – Download

4.6 Licensing

To open the Licensing pane:

1. In the navigation area select **Settings > Licensing**.
- The dialog **Licensing** pane is displayed.

Licensing

License Type

	Existing	Order
Master protocols		
One General Master License	NO	<input type="checkbox"/>
Two General Master Licenses	NO	<input type="checkbox"/>
PROFIBUS Master	YES	<input type="checkbox"/>
CANopen Master	YES	<input type="checkbox"/>
DeviceNet Master	YES	<input type="checkbox"/>
AS-Interface Master	YES	<input type="checkbox"/>
PROFINET IO RT Controller	YES	<input type="checkbox"/>

Request Form, please fill out

Name	Value
License type	User Single Device License
Manufacturer*	00000001
Article number*	01250510
Serial number*	00020086
Chiptype*	00000002
Step*	00000000
Romcode revision*	00000002

Fields marked with "*" are mandatory.

Hilscher Germany

E-mail... license@hilscher.com

Print Fax Form... +49 6190 9907-50

Telephone... +49 6190 9907-0

Export License Request...

Download License

Figure 24: Licensing



For a detailed description refer to section *Licenses* on page 128.

4.7 Ethernet Devices

In the dialog **Ethernet Devices** the **Device Name** or the **IP address** at Ethernet-capable devices can be adjusted. The device name must match to the PROFINET IO specification [3] for the “Name of Station”.

Alternatively a **Device Name** or **IP address** can be used that was set in the configuration under **Configuration > Device Table > Name of Station** or under **Configuration > IP Address Table > IP Address** for a different device.



For more information refer to section *Device Table* on page 79, and to section *IP Address Table* on page 81.

The identification of devices is done via the *DCP protocol*, which is supported by PROFINET compatible devices.

4.7.1 Overview Ethernet Devices

- Select **Settings > Ethernet Devices**.

Ethernet Devices

Use Network Connections for Scan: **(A)**

Device	Port
<input checked="" type="checkbox"/> Broadcom NetXtreme Gigabit Ethernet Driver (Micro...	\\Device\\NPF_{DF10B663-7D6C-41A3-A5B3-CDF99...}
<input checked="" type="checkbox"/> VMware Virtual Ethernet Adapter	\\Device\\NPF_{70F0A330-6C60-47DB-86EA-C9DE3...}
<input checked="" type="checkbox"/> VMware Virtual Ethernet Adapter	\\Device\\NPF_{B181D0D4-83F4-4DFE-B245-ACD7F...}

Devices Online Find:

MAC Address	Device Type	Device Name	IP Address	Protocol	Device ID	Vendor ID	Device role

(B)

☐ Use Configuration of:

(C)

Device name:

New device name:

☐ temporary

Figure 25: Ethernet Devices Pane
(The figure shows example devices.)

In the window **Ethernet Devices** you can.

1. Select Network Devices

Under **Use Network Connections for Scan** ^(A) the network devices at the PC are displayed. Here you must select the network devices at the PC are to be used at the scan.

2. Search and select Devices

Under **Devices Online** ^(B) the devices are displayed, which are found in the Ethernet network connected to the PC via the *DCP protocol*. The device to be configured must be selected here.

3. Configure Devices

The selected device is to be configured in the area below ^(C). Therefore the configuration for the device can be performed here or a configuration of an other device can be used.

4.7.2 Selecting Network Devices for Scan



Note: Using the *DCP protocol* to scan for devices, the network devices to be used for the scan must be selected manually.

Under **Use Network Connections for Scan** the network devices at the PC are displayed.

Use Network Connections for Scan:	
Device ⁽²⁾	Port ⁽³⁾
<input checked="" type="checkbox"/> Broadcom NetXtreme Gigabit Ethernet Driver (Microso...	{Device}\NPF_{DF10B663-7D6C-41A3-A5B3-CDF99A833D82}
<input checked="" type="checkbox"/> VMware Virtual Ethernet Adapter	{Device}\NPF_{70F0A330-6C60-47DB-86EA-C9DE362F3D5F}
<input checked="" type="checkbox"/> VMware Virtual Ethernet Adapter	{Device}\NPF_{B181D0D4-83F4-4DFE-B245-ACD7F20DE72A}

Figure 26: Ethernet Devices Pane - Selection of the Ethernet Connection
(The figure shows example devices.)

Here you must select the network devices to be used at the scan via the *DCP protocol*.

- Under **Device** ⁽¹⁾ check the network devices to be used with the *DCP protocol* at the scan.
- Under **Device** ⁽²⁾ the *name* and under **Port** ⁽³⁾ the *port number* of the network devices of your PC are displayed.

4.7.3 Searching and selecting Devices

- To search for devices, click **Devices Online > Search Devices** (refer to position 12 in the following figure).
- The Ethernet network connected to the PC is searched for devices reacting to the *DCP protocol*. If devices are found, they are listed in the following manner:

Devices Online

Find:

next

previous

MAC Address	Device Type	Device Name	IP Address	Protocol	Device ID	Vendor ID	Device role
00-02-A2-20-91...	NXIO 50	nxio50repn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-91...	NXIO 50	nxio50repn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-91...	NXIO 50	nxio50repn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-71...	cifx /pnm	controller	192.168.0.1	DCP	0x0203	0x011E	Controller
4	5	6	7	8	9	10	11

12

Search Devices

Figure 27: Ethernet Devices Pane - Searching and selecting Devices
(The figure shows example devices.)

In the table in the figure above you can find the following information:

Item	Position in Figure	Meaning	Value / Range of Value
MAC Address	4	The MAC Address (=MAC-ID) is on delivery the unique (physical) Ethernet address of the device fixed by the manufacturer of the device.	
Device type	5	Name for the device that is stored non-volatile on the device.	
Device name	6	Device name that can be set in the Ethernet Device dialog. The device name must match to the PROFINET IO specification [3] for the "Name of Station".	Character string, 1 ... 240 characters
IP-Address	7	IP-Address of the device that can be set in the Ethernet Device dialog. The IP address must be unique and must fit to the used network. The IP address 0.0.0.0 indicates that no IP address has been adjusted yet.	valid IP-Address
Protocol	8	Protocol by which the device has been found.	DCP
Device ID	9	Identification number of the device, is fixed by the manufacturer for every device.	0x00000000 ... 0xFFFFFFFF (hex)
Vendor ID	10	Identification number of the vendor, assigned by PROFIBUS Nutzerorganisation e. V.	0x00000000 ... 0xFFFFFFFF (hex)
Device Role	11	Textual description on the function the device has on the network.	"Device", "Controller", "Multidevice", "Supervisor"

Table 17: Parameters of found Devices

4.7.3.1 Search Device within Table

How to proceed:

- Put in the string to be searched at **Find** ①.

If the table is large, you can search within the table for any sequence of characters appearing within one single column.

Devices Online

Find:

next previous

MAC Address	Device Type	Device Name	IP Address	Protocol	Device ID	Vendor ID	Device role
00-02-A2-20-91...	NXIO 50	nxio50reprn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-91...	NXIO 50	nxio50reprn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-91...	NXIO 50	nxio50reprn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-71...	cifx /pnm	controller	192.168.0.1	DCP	0x0203	0x011E	Controller

Search Devices

Figure 28: Ethernet Devices Pane - Search Device within Table
(The figure shows example devices.)

- Using **next** ② you can find the next entry in the table matching the search string (Direction of search: downwards).
- Using **previous** ③ you can find the next entry in the table matching the search criteria (Direction of search: upwards).

Sorting the Table

By a mouse click at a field at the head line of the table, you can force sorting the lines in alphanumerically ascending or descending order according to the entries of the selected column.

4.7.3.2 Selecting Device

- To select a device to be configured click the corresponding line in the table **Devices Online**.

Devices Online

Find:

next

previous

MAC Address	Device Type	Device Name	IP Address	Protocol	Device ID	Vendor ID	Device role
00-02-A2-20-91...	NXIO 50	nxio50repn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-91...	NXIO 50	nxio50repn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-91...	NXIO 50	nxio50repn...	0.0.0.0	DCP	0x010C	0x011E	Device
00-02-A2-20-71...	cifx /pnm	controller	192.168.0.1	DCP	0x0203	0x011E	Controller

Search Devices

Figure 29: Ethernet Devices Pane - Selecting Device
(The figure shows example devices.)

4.7.4 Configuring Device

Using the *DCP protocol* you can newly assign the **Device Name** or the **IP Address** of a device or you can change an already configured device name or IP address. For configuring a device there are the two possibilities:

- The configuration for the device can be created newly.
- Alternatively a configuration already existing can be used, which has been created / set at another place in the configuration software for another device.

4.7.4.1 Overview on Configuration

For configuring Ethernet capable devices when using the DCP protocol in the **Ethernet Devices** dialog there are the following options:

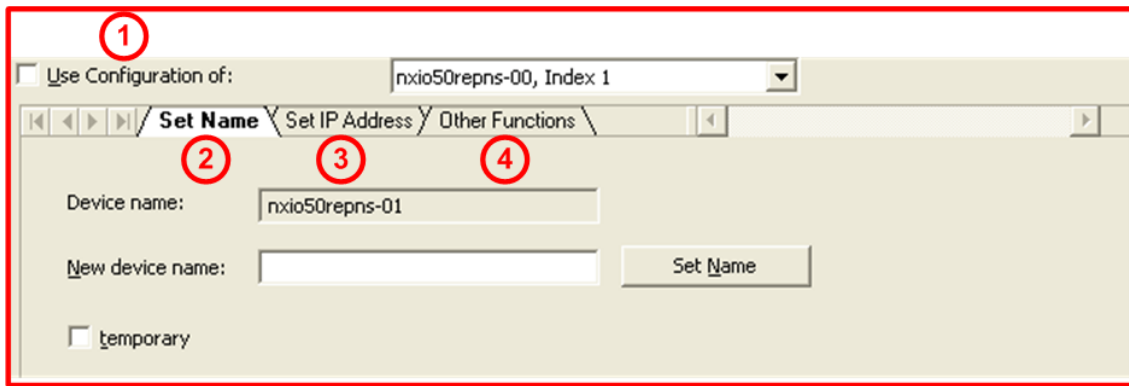


Figure 30: Ethernet Devices Pane - Overview on Configuration
(The figure shows example devices.)

- Under **Use Configuration of** ① it is possible to define whether the configuration for a device shall be created newly or whether a configuration shall be used, that has been created /set at another place of the configuration software for another device
- Under **Set Name** ② the device name read out from the device can be displayed and respectively be changed or set newly. The device name must match to the PROFINET IO specification [3] for the “Name of Station”.
- Under **Set IP Address** ③ the IP Address can be set or changed.
- Under **Other Funktionen** ④ for Ethernet capable devices there are the configuration possibilities **Signal** and **Reset to factory defaults**.



Note: For PROFINET IO-Controller devices a change of the device name or the IP address can be rejected. Then an error message is displayed.

4.7.4.2 Creating new Configuration or using from Device



Important: As a configuration that was made in the configuration software elsewhere for a PROFINET IO device (Controller or Device) can be applied to another device, the already configured PROFINET IO device must be configured in the FDT container (here netDevice) as a PROFINET IO DTM.

Under **Use Configuration of** can be defined whether

- the configuration for a device must be created newly,
- or for configuring a device a configuration is to be used, which was set in the configuration software elsewhere for another device. The existing configuration can be used for the selected device and must be sent to this device.

How to proceed:

1.

If the configuration shall be created newly:

- Uncheck **Use Configuration of** ①.
- Or check **Use Configuration of** ①, when an already created configuration will be used.
- Select the device ② whose configuration will be used for the device to be configured newly.

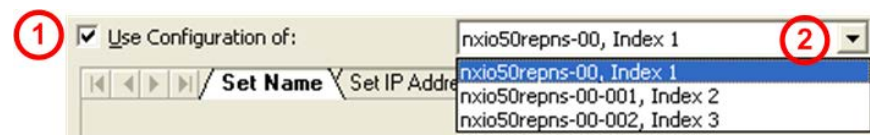


Figure 31: Ethernet Devices Pane - Use Configuration of
(The figure shows example devices.)

2. Configure the device name and the IP address as described hereafter.
 3. Click **Devices Online > Search Devices** once more.
- Only then the used values are displayed as current values.

4.7.4.3 Creating new Configuration / Setting new Device Name



Note: The device name must comply with the PROFINET IO specification [3]. Forbidden signs (e. g. blanks) must not be used in the name.

How to proceed:

1. Uncheck **Use Configuration of** ①.
2. Click the **Set Name** ③ tab.

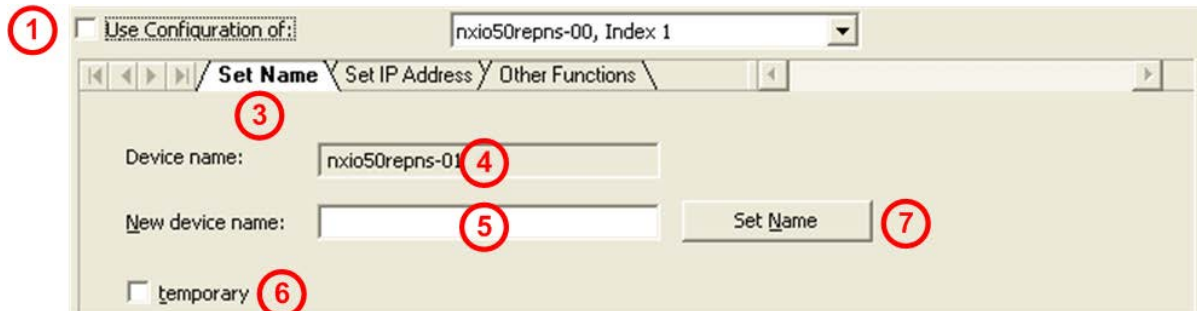


Figure 32: Ethernet Devices Pane - Setting new Device Name
(The figure shows example devices.)

3. For the PROFINET IO device (Controller or Device):
 - The current device name is displayed under **Device Name** ④.
 - To **New device name** ⑤ type a new device name according to the PROFINET IO specification [3].
4. To set the device name "temporary" or "permanent":
 - Check **temporary** ⑥, if the device name is to be saved only temporarily (as far as the used device supports this functionality).
 - Or uncheck **temporary** ⑥, if the device name should be set permanently (if the device supports this choice).
5. Set Device Name:
 - Click **Set Name** ⑦.
 - The new device name will be transferred to the used device.
6. Click **Devices Online > Search Devices** once more.
 - The newly set device name is displayed under **Device Name** ④ as the current device name.



Note: For PROFINET IO-Controller devices a change of the device name can be rejected. Then an error message is displayed.

4.7.4.4 Device Name according to PROFINET „Name of Station“ Specification

The device name must comply with the coding rules following excerpt from the PROFINET IO specification [3] for the „Name of Station“.

A Name of Station:

- has a **length** of 1 ... 240 *characters*.
- may consist of one or more **labels**, which are 1 ... 63 *characters* long and which are separated by dots.
- must contain only **valid characters**:
 - a – z** *lower case letters*,
 - 0 – 9** *digits*,
 - *Minus sign*,
 - .** *Point*.

The *point* is the separator between labels.

The *minus sign* must not be used as the start or end character.

The *minus sign* must not be used before or after a dot.

The *Name of Station* must not begin or end with a point.

Invalid characters are, for example, capital letters and spaces.

Source [3] (see section *References* on page 186): *PNO document 2722*, section 4.3.1.4.15.1, on page 10073f.

4.7.4.5 Use Configuration / Use Device Name

How to proceed:

1. Check **Use Configuration of** ①.
2. Select the device ② whose configuration will be used for the device to be configured newly.
3. Click the **Set Name** ③ tab.

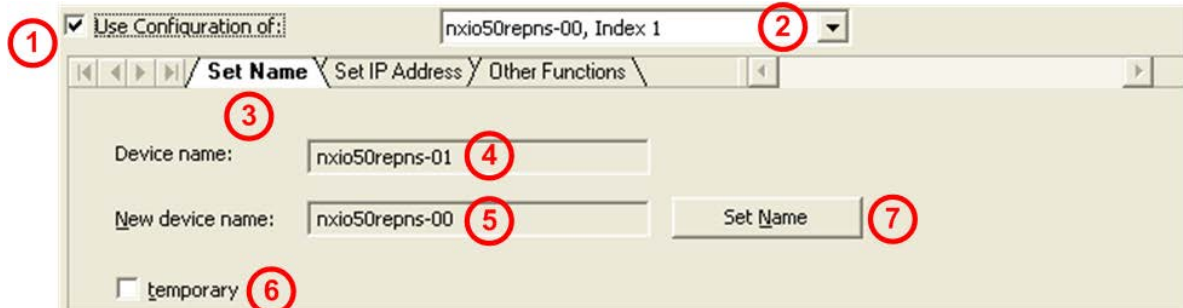


Figure 33: Ethernet Devices Pane - Use Name of Station
(The figure shows example devices.)

4. For the PROFINET IO device (Controller or Device):
 - The current device name is displayed under **Device Name** ④.
 - Under **New device name** ⑤ the device name is displayed that was already entered in the configuration software as the „Name of Station“. This one must not be entered again, but can be sent as a new device name to the used device.
5. To set the Device Name "temporary" or "permanent":
 - Check **temporary** ⑥, if the device name is to be saved only temporarily (as far as the used device supports this functionality).
 - Or uncheck **temporary** ⑥, if the device name should be set permanently (if the device supports this choice).
6. Set Device Name:
 - Click **Set Name** ⑦.
 - The device name to be used will be transferred to the used device and is displayed under **Device name** ④ as the current device name.
7. Click **Devices Online > Search Devices** once more.
 - The used device name is displayed under **Device Name** ④ as the current device name.



Note: For PROFINET IO-Controller devices a change of the device name can be rejected. Then an error message is displayed.

4.7.4.6 Creating new Configuration / Setting new IP Address

The IP address is statically during the configuration. Later on, the PROFINET IO-Controller will assign an IP address via the „Name of Station“. If the used device supports the IP address assignment via a DHCP server (*for future application*), you can choose between static IP address assignment and taking over the IP address from a DHCP server.

How to proceed:

1. Uncheck Use Configuration of ①.
2. Click the **Set IP Address** ③ tab.

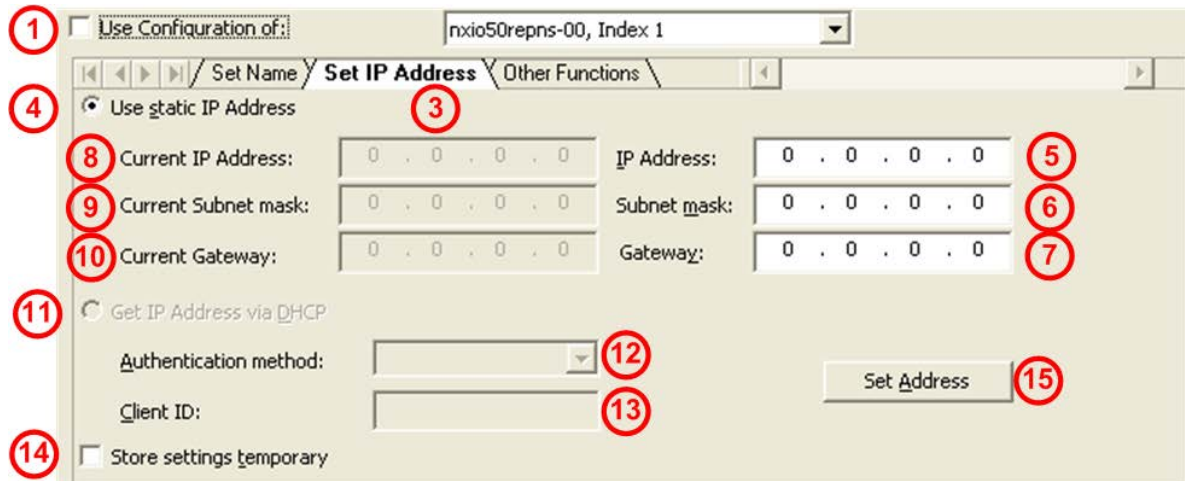


Figure 34: Ethernet Devices Pane - Setting new IP Address
(The figure shows example devices.)

3. Select **Use static IP Address** ④ (default setting).
Or select **Get IP Address via DHCP** ⑪ (*for future application*).

- If under point 3. **Use static IP Address** was selected, continue as follows:

4. For the PROFINET IO device (Controller or Device):

- Under **IP Address** ⑤ enter the IP address.
- Under **Subnet Mask** ⑥ enter the subnet mask.
- Under **Gateway** ⑦ enter the gateway address.



Figure 35: Ethernet Devices Pane – Enter new IP Address, Subnet Mask and Gateway Address

- If under *point 3.* **Get IP Address via DHCP** (for future application) was selected, continue as follows:

➤ The area to specify the static IP address is grayed out.

4.

- Under **Authentication method** ¹² select how to identify the device, via *MAC Address*, *Device Name* or by *Client ID*.
- For the authentication method *Client ID*: set the Client ID under **Client ID** ¹³.

- For both possibilities of *point 3.*, continue as follows:

5. To set the IP address, the subnet mask and the gateway address "temporary" or "permanent":

- Check **Store settings temporary** ¹⁴.



Note: If the IP address, subnet mask and gateway address are set "only temporarily", after a device reset the settings are no longer stored in the device.

- Or uncheck **Store settings temporary** ¹⁴, to set the IP address, the subnet mask and the gateway address permanently (if the device supports this choice).



Note: The PROFINET IO-Controller can assign a new IP address to the PROFINET IO-Device during the start of the PROFINET network.

6. Set the Address:

- Click **Set Address** ¹⁵.



Figure 36: Ethernet Devices Pane – Set Address

➤ The new IP address, subnet mask and gateway address will be transferred to the used device. The transfer may take up to 40 seconds depending by the device.

7. Click **Devices Online > Search Devices** once more.

- Under **Current IP Address** ⁸, **Current Subnet Mask** ⁹ or **Current Gateway** ¹⁰ the new current IP Address, Subnet Mask and Gateway Address are displayed.

Figure 37: Ethernet Devices Pane – The new current IP Address, Subnet Mask and Gateway Address are shown.



Note: For PROFINET IO-Controller devices a change of the IP address can be rejected. Then an error message is displayed.

4.7.4.7 Use Configuration / Use IP Address

The IP address is statically during the configuration. Later on, the PROFINET IO-Controller will assign an IP address via the „Name of Station“. If the used device supports the IP address assignment via a DHCP server (*for future application*), you can choose between static IP address assignment and taking over the IP address from a DHCP server.

How to proceed:

1. Check **Use Configuration of** ①.
2. Select the device ② whose configuration will be used for the device to be configured newly.
3. Click the **Set IP Address** ③ tab.

Figure 38: Ethernet Devices Pane - Use IP Address
(The figure shows example devices.)

3. Select **Use static IP Address** ④ (*default setting*).
Or select **Get IP Address via DHCP** ⑪ (*for future application*).
- If under *point 3.* **Use static IP Address** was selected, continue as follows:
4. For the PROFINET IO device (Controller or Device):
 ➤ Under **IP Address** ⑤, **Subnet Mask** ⑥ or **Gateway** ⑦ the IP address, subnet mask and gateway address to be used are displayed, which were already entered in the configuration software. These need not to be entered again, but can be sent as a new IP address, subnet mask and gateway address to the used device.

- If under *point 3.* **Get IP Address via DHCP** (for future application) was selected, continue as follows:

➤ The area to specify the static IP address is grayed out.

4.

- Under **Authentication method** ¹² select how to identify the device, via *MAC Address*, *Device Name* or by *Client ID*.
- For the authentication method *Client ID*: set the Client ID under **Client ID** ¹³.

- For both possibilities of *point 3.*, continue as follows:

5. To set the IP address, the subnet mask and the gateway address "temporary" or "permanent":

- Check **Store settings temporary** ¹⁴.



Note: If the IP address, subnet mask and gateway address are set "only temporarily", after a device reset the settings are no longer stored in the device.

- Or uncheck **Store settings temporary** ¹⁴, to set the IP address, the subnet mask and the gateway address permanently (if the device supports this choice).



Note: The PROFINET IO-Controller can assign a new IP address to the PROFINET IO-Device during the start of the PROFINET network.

6. Set the Address:

- Click **Set Address** ¹⁵.



Figure 39: Ethernet Devices Pane – Set Address

➤ The IP address, subnet mask and gateway address to be used will be transferred to the used device. The transfer may take up to 40 seconds depending by the device.

7. Click **Devices Online** > **Search Devices** once more.

- Under **Current IP Address** ⁸, **Current Subnet Mask** ⁹ or **Current Gateway** ¹⁰ the new current values are displayed.

Figure 40: Ethernet Devices Pane – The new current IP Address, Subnet Mask and Gateway Address are shown.



Note: For PROFINET IO-Controller devices a change of the IP address can be rejected. Then an error message is displayed.

4.7.4.8 Signal, Factory Defaults

The tab **Other Functions** provides the functions **Signal** and **Reset to factory defaults**.

How to proceed:

1. Do not check **Use configuration of** ①.
2. Click **Other Functions** ②.

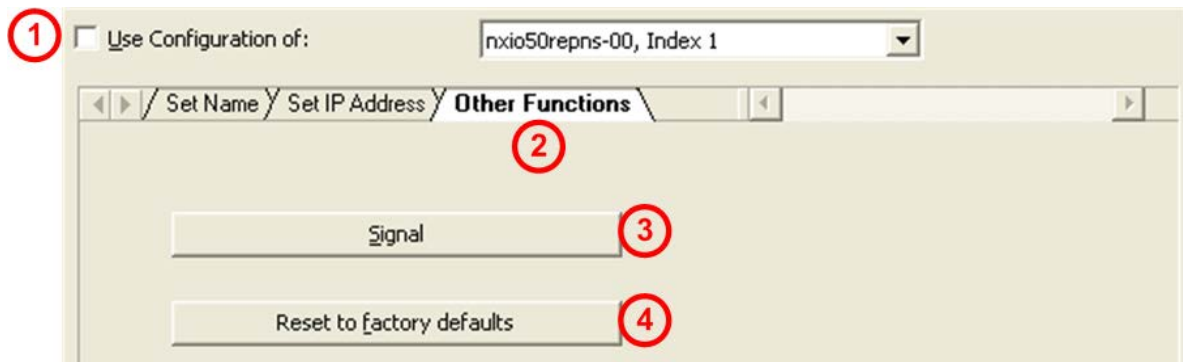


Figure 41: Ethernet Devices Pane - Signal, Factory Defaults
(The figure shows example devices.)

3. For the PROFINET IO device (Controller or Device):
 - Click **Signal** ③.
 - The LED on the selected device blinks. This allows to clearly identifying the device among others.
 - Click **Reset to factory defaults** ④.
 - Adjustments made at the device are reset to the factory defaults.

5 Configuration

5.1 Overview Configuration

Configuration Dialog Panes

The table below gives an overview for the **Configuration** dialog panes descriptions:

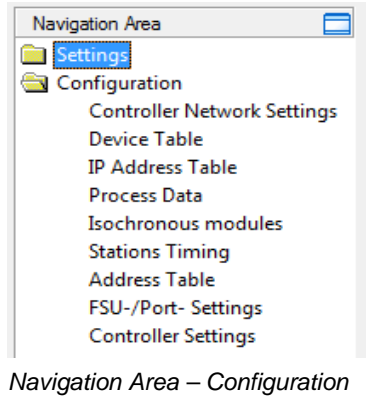
PROFINET IO-Controller DTM	Folder Name / Section	Page
 <p>Navigation Area – Configuration</p>	Controller Network Settings	76
	Device Table	79
	IP Address Table	81
	Process Data	83
	Isochronous Modules	84
	Address Table	87
	FSU/Port-Settings	91
	Stations Timing	93
	Controller Settings	106

Table 18: Descriptions of the Dialog Panes Configuration



Notice the descriptions in the section *Configuration Steps* on page 23.

Configuration of the PROFINET IO-IRT Device Topology

Settings in the topology editor to make for PROFINET IO-IRT devices:

- Connect the devices.
- Configure the properties for devices and ports.



Information about the configuration of the PROFINET IO-IRT device topology you find in the Operating Instruction Manual *Topology Editor*.

5.2 Configuring Device Parameters

The following steps are required to configure the parameters of the PROFINET IO-Controller device using the PROFINET IO-Controller DTM:

Controller Network Settings

1. Set the name of station and the IP settings for the PROFINET IO-Controller.
 - Select **Configuration > Controller Network Settings**.
 - Set the Name of Station and the IP settings for the PROFINET IO-Controller.
 - Check **DCP set is activated via the network** if the settings for the Name of Station and the IP settings are to be made via the DCP protocol (if necessary via an external tool).
 - Check **Overwrite Name of Station of devices based on topology information** if Name of Station settings are to be set to devices subsequently.
 - Apply all settings.

Device Table

2. Select the PROFINET IO-Device devices required for communication:
 - Select **Configuration > Device Table** in the navigation area.
 - Select the required device/s.
 - In the column **Activate** check the corresponding checkbox.
3. Set the **Name of station** of the PROFINET IO-Device station.



Note: The **Name of station** displayed here must match with the name of station set in the PROFINET IO-Device. The name of station must be explicit in the PROFINET network. It must be a DNS compatible name.

- In the column **Name of station** set the network name of the PROFINET IO-Device station.
- Apply all settings.

IP Address Table

4. Set the IP settings of the PROFINET IO-Device station.
 - Select **Configuration > IP Address Table** in the navigation area.
5. Select **Inherit(Standard)**.
 - Set the IP address manually.
 - The manually set IP address is applied to the PROFINET IO-Device device. Also the network mask and gateway address from the Controller Network Settings are applied.
6. Alternatively select **Assign manually**.
 - Set the IP address, network mask and gateway address manually.
 - The manually set values are applied to the PROFINET IO-Device station.

7. Or select **Assume from network**.

- The IP address, network mask and gateway address are applied from the network settings to the PROFINET IO-Device station.
- Apply all settings.

Process Data

8. Set the process data:

- Select **Configuration > Process Data** in the navigation area.
- Set symbolic names for the configured modules or signals.
- Apply all settings.

Isochronous Modules

9. Enable isochronous mode and set parameters for this mode.

- Select **Configuration > Isochronous Modules** in the navigation area.
- By activating the **Isochronous** option, you define, for which isochronous devices or modules or isochronously supported submodules (if can be enabled), the timing parameters configured automatically or manually in this window should apply.
- Check **Isochronous**.
- Set isochronous mode parameters.

The isochronous mode parameters are configured on the device level.



Note! By default use the **Auto** setting! Use the **Manual** (expert mode) setting only if you know exactly how to make the configuration.

- Under **Options for Calculation** select **Auto** (recommended).
- The timing parameters are automatically configured in the background. The calculated times apply to the entire selection, i. e.. to all selected devices, modules or submodules.

Address Table

10. Set the device address:

- Select **Configuration > Address Table** in the navigation area.
- Activate or deactivate **Auto Addressing**.
- For manual addressing: Enter the addresses.
- Apply all settings.

FSU/Port-Settings

11. Choose the **FSU-Port settings**.

- Select **Configuration > FSU/Port-Settings** in the navigation area.
- Check **FSU** for those PROFINET IO-Devices, which must use a fast start up (FSU) connection to establish the cyclic data exchange.
- Apply all settings.

Stations Timing

12. Make the Station global settings and respectively the sync domain settings for each selected PROFINET IO-Device station.

- Select **Configuration > Stations Timing** in the navigation area.

Example ‚Unsynchronized (RT)‘

- Adjust the values for **Updating time** manually or via **Adjust**.
- Adjust the values for **Watchdog time** manually.

Example ‚Synchronized (IRT)‘, with or without isochronous mode

- For each PROFINET IO-Device station select the station **RT mode** (only for devices without isochronous mode).
- For each PROFINET IO-Device station select the **Basic send-clock** factor.



Important: By changing the ‚Basic send-clock‘ factor invalid values for the cycle time (‘Updating time’) of PROFINET IO-Devices can be generated. Values which are marked with a red exclamation mark, result in an invalid configuration and must be adjusted before the configuration is complete.

- Adjust the values for **Updating time** manually or via **Adjust**.
- Adjust the values for **Watchdog time** manually.
- Apply all settings.

Controller Settings

13. Set the **Controller Settings**:

- Select **Configuration > Controller Settings** in the navigation area.
- Under **Start of Bus Communication**: Select **Automatically by device** or **Controlled by application** option.
- Under **Application Monitoring**: Set **Watchdog time**.
- Under **Module Alignment**: Set **Byte boundaries** or **2 Byte boundaries** option.
- Under **Port Settings**: Under **Port 1** or **Port 2** each set the port setting required.
- Under **IO State Information**: Configure the IOPS interface. Therefore select under **Input Provider** or **Output Provider** the mode ‚Disabled‘, ‚Bit‘ or ‚Byte‘.

Close Master DTM Configuration Dialog

14. Click **OK** in order to close the Controller DTM configuration dialog and to store your configuration.

Configuration Download to the PROFINET IO Controller Device

- Adhere to the necessary safety precautions to prevent personnel injury and property damage.



Note: In order to transfer the configuration to the PROFINET IO Controller device, download the data of the configuration parameters in the PROFINET IO Controller device. See section *Download Configuration* on page 125.

Further Information



For more information refer to the sections *Controller Network Settings* on page 76, *Device Table* on page 79, *IP Address Table* on page 81, *Process Data* on page 83, *Isochronous Modules* on page 84, *Address Table* on page 87, *FSU/Port-Settings* on page 91, *Stations Timing* on page 93 and *Controller Settings* on page 106.

5.3 Configure IRT Communication

To configure devices for the isochronous real-time communication (IRT)

- the configuration of the **Stations Timing** settings in the PROFINET IO-Controller DTM for IRT is required. For this, the sync domain settings must be made for IRT-capable PROFINET IO-Device devices. For more information, see section *Stations Timing* on page 93.
- Furthermore the planning and configuration of the device topology and the configuration of the properties of the device, port and connection must be done in the **Topology Editor**.



For information concerning the configuration of the topology of devices in domains for isochronous real-time communication (IRT), refer to the Operating instruction manual *Topology Editor*.

5.4 Controller Network Settings

The **Controller Network Settings** dialog page shows the current **Name of Station** and the IP settings of the PROFINET IO-Controller, which can be changed here.

By using the **Accept DCP Set via Network** option, the controller network settings can be set via the DCP protocol (if necessary using an external tool). By using the **Overwrite Name of Station of devices based on topology information** option, station names can be subsequently assigned to devices.

- Select **Configuration > Controller Network Settings** in the navigation area.
- The **Controller Network Settings** pane is displayed.

Figure 42: Configuration > Controller Network Settings

Parameter	Meaning	Range of Value / Value
Name of Station (editable)	<p>Network name of the PROFINET IO-Controller station.</p> <p>The name of station can be edited here. It must be DNS compatible. For further information refer to section <i>Device Name according to PROFINET „Name of Station“ Specification</i> on page 63. For invalid inputs a red exclamation mark and an error message will appear.</p> <p>The name of station of the PROFINET IO-Controller station can be edited in the 'Device properties' of the 'Topology Editor' too.</p> <p>For information on the approved marks, see section <i>Name encoding</i> on page 186.</p>	1 - 240 characters
Description (editable)	Symbolic Name of the PROFINET IO-Controller DTM.	


Parameter	Meaning	Range of Value / Value
Accept DCP Set via Network	<p>Case 1: If Accept DCP Set via Network is checked, the settings for the Name of Station and the IP settings of the PROFINET IO-Controller device are made via the DCP protocol. This can be made in the Ethernet Devices window (see section <i>Ethernet Devices</i> on page 55) or via an external tool which can send DCP commands.</p> <p>As soon as a DCP command is sent in case 1, settings made in the Controller Network Settings window are overwritten.</p> <div>  <p>Important! The Name of Station and the IP settings of the PROFINET IO-Controller device can be set via the DCP protocol only if the PROFINET IO-Controller device is in operating mode 'Network Up'.</p> </div> <p>If the Name of Station is set via an external tool ("name baptism" of PROFINET devices), this one must be synchronized manually with the device. I. e., the "name baptism" is not made via the configuration download in the configuration software SYCON.net.</p> <p>Case 2: If Accept DCP Set via Network is unchecked, the Name of Station settings and the IP settings made in the Controller Network Settings window are used.</p> <p>In case 2, the Name of Station and IP settings cannot be set in the Ethernet Devices window or these settings would be rejected by the PROFINET IO-Controller.</p>	Checked, unchecked, Default: unchecked
IP Settings of the PROFINET IO-Controller Station (editable)		
IP Address	IP address of the PROFINET IO-Controller station.	valid IP Address
Network Mask	Network mask of the PROFINET IO-Controller station.	valid Network Mask
Gateway Address	Gateway address of the PROFINET IO-Controller station.	valid Gateway Address
Device Settings		
Overwrite Name of Station of devices based on topology information	<p>By means of the Overwrite Name of Station of devices based on topology information option, the PROFINET IO-Controller device can set a Name of Station subsequently to a PROFINET IO-Device device. The subsequent allocation of names for devices is made in the Device table window (see section <i>Device Table</i> on page 79) in the Name of station column.</p> <p>As a pre-requisite for the use of this option, corresponding topology information for the PROFINET IO-Device device must be present in the firmware. This one is set in the Topology editor. This means that a connection must be configured for the device in the Topology editor. For more information on how to connect devices in the topology editor, refer to the operation instruction manual <i>Topology Editor</i>.</p> <p>If the PROFINET IO-Controller firmware does not find a PROFINET IO-Device device in the network according to the Name of Station indicated in the Device table window, the PROFINET IO-Controller device will address the PROFINET IO-Device device by the use of topology information.</p>	Checked, unchecked, Default: unchecked
	<p>If the PROFINET IO-Controller device then finds a PROFINET IO-Device device which is located at that position within the topology, there are two possibilities:</p> <p>1.) Overwrite Name of Station of devices based on topology information is checked: In this case the PROFINET IO-Controller device will perform the "name baptism" although the found device already has a Name of station.</p> <p>2.) Overwrite Name of Station of devices based on topology information is not checked: In this case the PROFINET IO-Controller device will perform the "name baptism" provided that the PROFINET IO-Device device does not have any Name of station. No consequences will follow for a wrong Name of station.</p>	

Table 19: Controller Network Settings Pane Parameters

- Set the Name of Station and the IP settings for the PROFINET IO-Controller.
- Check **DCP set is activated via the network** if the settings for the Name of Station and the IP settings are to be made via the DCP protocol (if necessary via an external tool).



Important! The Name of Station and the IP settings of the PROFINET IO-Controller device can be set via the DCP protocol only if the PROFINET IO-Controller device is in operating mode 'Network Up'.

-
- Check **Overwrite Name of Station of devices based on topology information** if Name of Station settings are to be set to devices subsequently.

5.5 Device Table

The **Device Table** dialog pane shows the list of all PROFINET IO-Devices configured in the PROFINET IO-Controller configuration.

Follow the steps described hereafter:

1. Activate the required device/s:
 - Select **Configuration > Device Table** in the navigation area.
 - Select the required device/s.
 - In the column **Activate** check the corresponding checkbox.
2. Set the **Name of station** of the PROFINET IO-Device station.



Note: The **Name of station** displayed here must match with the name of station set in the PROFINET IO-Device. The name of station must be explicit in the PROFINET network. It must be a DNS compatible name.

- In the column **Name of station** set the network name of the PROFINET IO-Device station.

Device Table						
	Activate	Index ▲	Name of station	Device	Description	Vendor
	<input checked="" type="checkbox"/>	1	Device*-00	Device*	Device*	[Vendor Name]
	<input checked="" type="checkbox"/>	2	Device*-00-001	Device*	Device*	[Vendor Name]
	<input checked="" type="checkbox"/>	3	Device*-00-002	Device*	Device*	[Vendor Name]

Figure 43: Configuration > Device Table (*The name of the PROFINET IO-Device is displayed.)

Parameter	Meaning	Range of Value / Value
Activate	<p>Checkbox, to activate / deactivate a station.</p> <p>If the Activate checkbox is checked, process memory in the controller is reserved for this device and the controller makes a data exchange on the bus to this device.</p> <p>If the Activate checkbox is deactivated, the controller reserves memory in the process data image for this device, but no data exchange to this device is made on the bus.</p>	Checked, unchecked Default: checked
Index (editable)	About the index it is possible to set an user-defined sequence for the devices configured in the PROFINET IO-Controller.	1 ... n

Parameter	Meaning	Range of Value / Value
Name of Station (editable)	<p>Network name of the PROFINET IO-Device station.</p> <p>The name of station is set here. In the PROFINET IO-Device-DTM device it is only displayed or otherwise it must be set directly in the configuration tool of the PROFINET IO-Device.</p> <p>The name of station set here must match with the name of station set in the PROFINET IO-Device. The PROFINET IO-Controller uses the name of station to identify the PROFINET IO-Device via the PROFINET network and to build up communication.</p> <p>The name of station must be explicit in the PROFINET network. It must be a DNS compatible name. For further information refer to section <i>Device Name according to PROFINET „Name of Station“ Specification</i> on page 63. For invalid inputs a red exclamation mark and an error message will appear.</p> <p>The name of station of the PROFINET IO-Device station can be edited in the 'Device properties' of the 'Topology Editor' too.</p>	<p>Unique network name of the device according to the PROFINET specification (PNO document 2722).</p> <p>1 - 240 characters</p>
Device	The name of the physical device. Name for the device that is stored non-volatile on the device.	
Description	The symbolic name of the device.	
Vendor	Name of the vendor of the device.	

Table 20: Device Table Pane Parameters

5.6 IP Address Table

In the **IP Address Table** you can configure if the network mask and the gateway address of the PROFINET IO-Devices are to be taken from the PROFINET IO-Controller or if the IP settings are to be set manually or if they are to be taken from the network.

IP Address Table				
Name of station	Mode	IP address /	Network mask	Gateway address
cifxrepns	Inherit(Standard)	192.168.0.2	255.255.255.0	0.0.0.0

IP Address Table				
Name of station	Mode	IP address /	Network mask	Gateway address
cifxrepns	Assign manually	192 168 0 2	255.255.255.0	0.0.0.0

IP Address Table				
Name of station	Mode	IP address /	Network mask	Gateway address
cifxrepns	Assume from network			

Figure 44: Configuration > IP Address Table

Parameter	Meaning	Range of Value / Value
Name of Station	Network name of the PROFINET IO-Device station. The name of station is set in the Device Table in the PROFINET IO Controller DTM. Here it is only displayed (refer to section <i>Device Table</i> on page 79) or otherwise it must be set directly in the configuration tool of the PROFINET IO-Device.	1 - 240 characters
IP Settings of the PROFINET IO Device Station		
Mode	Inherit(Standard): The IP address is manually. The network mask and the gateway address are taken from the Controller Network Settings. Assign manually: The IP address, network mask and the gateway address can be set or changed manually. Assume from network: The IP address, network mask and gateway address are overtaken from the network settings (e. g. from the DHCP server).	Inherit(Standard), Assign manually, Assume from network
IP Address (editable)	IP address of the PROFINET IO-Device station. The IP address of the PROFINET IO-Device station is set here in the IP Address Table . In the PROFINET IO-Device DTM it is only displayed. The PROFINET IO Controller device transmits the IP address of the PROFINET IO-Device during startup via the PROFINET network to the PROFINET IO-Device and thereby configures the PROFINET IO-Device.	valid IP Address
Network Mask (editable)	Network mask of the PROFINET IO-Device station The Network mask of the PROFINET IO-Device station is set here in the IP Address Table . In the PROFINET IO-Device DTM it is only displayed. The PROFINET IO-Controller device transmits the Network mask of the PROFINET IO-Device during startup via the PROFINET network to the PROFINET IO-Device and thereby configures the PROFINET IO-Device.	valid Network Mask

Parameter	Meaning	Range of Value / Value
Gateway Address (editable)	<p>Gateway address of the PROFINET IO-Device station</p> <p>The Gateway address of the PROFINET IO-Device station is set here in the IP Address Table. In the PROFINET IO-Device DTM it is only displayed.</p> <p>The PROFINET IO-Controller device transmits the Gateway address of the PROFINET IO-Device during startup via the PROFINET network to the PROFINET IO-Device and thereby configures the PROFINET IO-Device.</p>	valid Gateway Address

Table 21: IP Address Table Pane Parameters

5.6.1 Set the IP Settings of the PROFINET IO-Device Station

The IP settings for the PROFINET IO-Device station can be inherited. In this case, the IP address is set manually and the network mask or gateway address are applied from the Controller Network Settings of the PROFINET IO-Controller device, to which the PROFINET IO-Device device is connected. Alternatively, the IP settings can be set manually or can be applied from the network settings. Proceed as follows:

- Select **Configuration > IP Address Table** in the navigation area.

Inherit

1. Select the **Inherit(Standard)** mode.
 2. Set the IP address manually.
- The manually set IP address is applied to the PROFINET IO-Device device. Also the network mask and gateway from the Controller Network Settings are applied.

Assign manually

3. Alternatively select the **Assign manually** mode.
4. Then set the IP address, network mask and gateway address manually.



Note: The fields **Network Mask** and **Gateway Address** are only editable if **Assign manually** is selected.

- The manually set values are applied to the PROFINET IO-Device station.

Assume from network mode

5. Or select the **Assume from network** mode.
- The IP address, network mask and gateway address are applied from the network settings to the PROFINET IO-Device station.

5.7 Process Data

For the PROFINET IO-Controller DTM the **Process Data** pane serves as an external process data interface, e. g. for data transfer to a PLC unit. The process data pane lists the Device devices connected to the Controller, as well as the configured modules or input or output signals of the devices. This makes the fieldbus structure visible.

For the configured modules or signals names can be set (Column *Tag*).

In addition signal data available to the OPC server can be checked (Column *SCADA*).


















Process Data				
	Type	Tag	SCADA	
	Device	Device	<input checked="" type="checkbox"/>	
	1 Byte Input <Slot 1>	1 Byte Input <Slot 1>	<input checked="" type="checkbox"/>	
	1 Byte Input <Subslot 1>	1 Byte Input <Subslot 1>	<input checked="" type="checkbox"/>	
	(1 bytes) OctetString input	Inputs	<input checked="" type="checkbox"/>	
	1 Byte Input <Slot 2>	1 Byte Input <Slot 2>	<input checked="" type="checkbox"/>	
	1 Byte Input <Subslot 1>	1 Byte Input <Subslot 1>	<input checked="" type="checkbox"/>	
	(1 bytes) OctetString input	Inputs	<input checked="" type="checkbox"/>	
	1 Byte Input <Slot 3>	1 Byte Input <Slot 3>	<input type="checkbox"/>	
	1 Byte Input <Subslot 1>	1 Byte Input <Subslot 1>	<input type="checkbox"/>	
	(1 bytes) OctetString input	Inputs	<input type="checkbox"/>	
	Device	Device	<input checked="" type="checkbox"/>	
	1 Byte Input <Slot 1>	1 Byte Input <Slot 1>	<input checked="" type="checkbox"/>	
	1 Byte Input <Subslot 1>	1 Byte Input <Subslot 1>	<input checked="" type="checkbox"/>	
	(1 bytes) OctetString input	Inputs	<input checked="" type="checkbox"/>	
	1 Byte Input <Slot 2>	1 Byte Input <Slot 2>	<input type="checkbox"/>	
	1 Byte Input <Subslot 1>	1 Byte Input <Subslot 1>	<input type="checkbox"/>	
	(1 bytes) OctetString input	Inputs	<input type="checkbox"/>	

Figure 45: Process Data (*The name of the Device device is displayed.)








Column	Symbol	Meaning
Type	 device	Device labeling* provided by the hardware followed by the device's name of station in pointy brackets
	 module, submodule	Description of the modules or input or output signals configured to the device (not editable)
	 I/O signal	
Tag	 device	Symbolic name* of the device
	 module, submodule	Symbolic name for the modules or for the input or output signals configured to the device (editable)
	 I/O signal	
	 warning	Duplicate Tag at the same level can cause errors by use of OPC!
SCADA	Option which module or signal data shall be provided for the OPC server. „SCADA“ (= Supervisory Control and Data Acquisition), here used with the meaning „to provide for visualizing purposes“.	
*Depending on the protocol, either the device name or the symbolic name can be edited via the device symbol context menu.		

Table 22: Process Data

5.8 Isochronous Modules

The **Isochronous Modules** window displays IRT capable (isochronous) devices or modules, or isochronously supported submodules, which provide the isochronous mode. If not enabled or disabled by default (fixed setting), the isochronous mode can be activated or deactivated in the **Isochronous** column. It serves to determine for which isochronous devices or modules or isochronously supported submodules the configured timing parameters

- **Options for calculation,**
- **Input time,**
- **Output time,**
- **Input interval steps,**
- or **Output interval steps** will apply.

If the **Auto** setting is selected (recommended), the automatically in the background calculated timing parameters applies. In the expert mode **Manual**, you can set the timing parameters yourself. These values applies each for the entire selection.

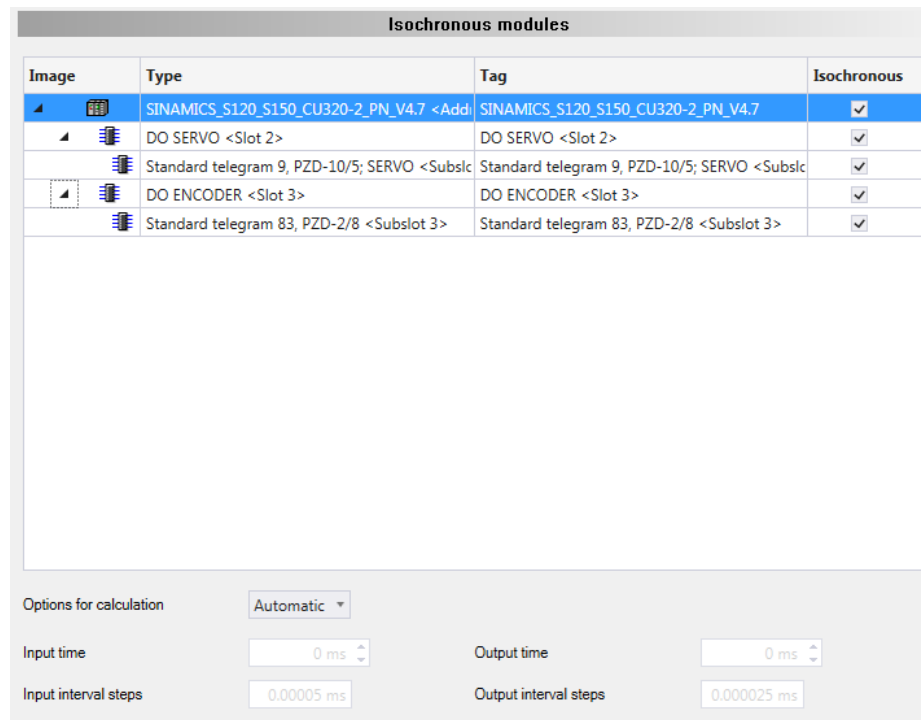


Image	Type	Tag	Isochronous
	SINAMICS_S120_S150_CU320-2_PN_V4.7 <Add>	SINAMICS_S120_S150_CU320-2_PN_V4.7	<input checked="" type="checkbox"/>
	DO SERVO <Slot 2>	DO SERVO <Slot 2>	<input checked="" type="checkbox"/>
	Standard telegram 9, PZD-10/5; SERVO <Subslot 3>	Standard telegram 9, PZD-10/5; SERVO <Subslot 3>	<input checked="" type="checkbox"/>
	DO ENCODER <Slot 3>	DO ENCODER <Slot 3>	<input checked="" type="checkbox"/>
	Standard telegram 83, PZD-2/8 <Subslot 3>	Standard telegram 83, PZD-2/8 <Subslot 3>	<input checked="" type="checkbox"/>

Options for calculation: Automatic

Input time: 0 ms Output time: 0 ms

Input interval steps: 0.00005 ms Output interval steps: 0.000025 ms

Figure 46: Configuration > Isochronous Modules (Example isochronous Device and configured Modules and Submodules)





Parameter	Meaning		Range of Value / Value
Image		Icon for an isochronous device with isochronous mode	
		Icon for an isochronous module with isochronous mode	
		Icon (indented) for an isochronously supported sub module with isochronous mode. In this case the GSDML file includes an "IsochroneMode" node.	
Type	Name of an isochronous device or module or of an isochronously supported submodule of a device with isochronous mode.		String
Tag	Description of an isochronous device or module or of an isochronously supported submodule of a device with isochronous mode.		String
Isochronous	Indicates whether an isochronous device or module or an isochronously supported submodule is in isochronous mode from application view. Within a subnet (domain), the same clock time must be set for all IRT devices or for all devices that contain isochronous modules or isochronously supported submodules. If Isochronous is checked for an IRT device within a subnet, the same clock time is automatically used for all IRT devices in the corresponding subnet. The same applies to devices with isochronous modules or isochronously supported submodules.		
	<input checked="" type="checkbox"/>	Isochronous mode is enabled by default if GSDML attribute IsochroneModeRequired="true" is present.	<input checked="" type="checkbox"/>
	<input checked="" type="checkbox"/>	Isochronous mode can be enabled or disabled by the user for a single submodule, for all submodules in a module or for all submodules of a device.	<input checked="" type="checkbox"/> , <input type="checkbox"/>
Timing parameters for Isochronous mode:			
Options for calculation	Manual or automatical calculation  Note! By default use the Auto setting! Use the Manual setting only if you know exactly how to make the configuration. <hr/> Manual: Expert mode (refer also to [2]) Auto: Automatical calculation in the background (recommended)		Manual, Auto, Default: Auto
Input time	Bus-related input time In isochronous applications, the time before the next network cycle begins or when the isochronous PROFINET IO-Device devices or input modules or the isochronously supported sub-input modules should read in the input values.		Editable only for selection "Manual"
Output time	Bus-related output time In isochronous applications, the time before the next network cycle begins or when the isochronous PROFINET IO-Device devices or output modules or the isochronously supported sub output modules should set the output values towards the output.		Editable only for selection "Manual"
Input interval steps	The time pattern or isochronous interval steps specified in the GSDML file for the input time or for receiving the input data.		0 ... Default (typically): 125 µs
Output interval steps	Time pattern defined in the GSDML file or isochronous intervall steps for the output time or when output data is sent.		0 ... Default (typically): 125 µs

Table 23: Isochronous Modules Pane Parameters

For isochronous real-time communication within a subnet (domain) the process data is sent in a fixed order, in equidistant (isochronous) time intervals and isochronously to the other nodes. For IRT communication the cyclic data transmission is deterministic and based on the clock of the network master (sync master). The maximum allowed deviation from the synchronization clock is 1 µs (jitter accuracy).

Procedure for configuration:

1. Select the isochronous devices or modules or isochronous supported submodules (if can be enabled*) for which the timing parameters configured automatically or manually in this window should apply by activating the **Isochron** option.

➤ Check **Isochron**.

*For isochronously supported submodules in the GSDML of which the attribute `IsochronousModeRequired="true"` is present, **Isochronous** is checked fixed.

2. Set isochronous mode parameters.

The isochronous mode parameters are configured on the device level.



Note! By default use the **Auto** setting! Use the **Manual** (expert mode) setting only if you know exactly how to make the configuration.

➤ Under **Options for Calculation** select **Auto** (recommended).

- ↗ The timing parameters are automatically configured in the background. The calculated times apply to the entire selection, i. e.. to all selected devices, modules or submodules.

If **Manual** is selected, the input time or the output time for an isochronous device or module or an isochronous supported submodule can be set manually. The selected times apply to the entire selection. If a set value for the input time or the output time at the device, an associated module or submodule is changed again, a value previously set at another module or submodule is overwritten for the device, all its modules and submodules.

5.9 Address Table

The **Address Table** dialog pane shows a list of all addresses used in the process data image. The displayed addresses refer to the used PROFINET IO-Controller.

The **Address Table** displays which input module respectively output module (respectively sub module) is assigned to which address in the process data image. The start address of the input module respectively output module (respectively sub module) is displayed each time.

To display the address data:

- Select **Configuration > Address Table** in the navigation area.

The screenshot shows the 'Address Table' dialog pane. At the top, there is a title bar 'Address Table'. Below it, there are three controls: a checked checkbox 'Auto addressing', a 'Display mode:' dropdown menu set to 'Hexadecimal', and a 'CSV Export' button. The main area is divided into two sections: 'Inputs:' and 'Outputs:'. Each section contains a table with columns: 'Name of station', 'Module', 'Submodule', 'Type', 'Length', and 'Address'.

Inputs:

Name of station	Module	Submodule	Type	Length	Address
Device*	4 Bit Input	0x00000002	IB	0x0001	0x0000
Device*	4 Bit Input	0x00000002	IB	0x0001	0x0001
Device*	4 Bit Input	0x00000002	IB	0x0001	0x0002

Outputs:

Name of station	Module	Submodule	Type	Length	Address
Device*	4 Bit Output	0x00000101	QB	0x0001	0x0000
Device*	4 Bit Output	0x00000101	QB	0x0001	0x0001
Device*	4 Bit Output	0x00000101	QB	0x0001	0x0002

Figure 47: Configuration > Address Table (*The name of the PROFINET IO-Controller device is displayed.)

5.9.1 Auto Addressing, Display Mode, CSV Export

Auto Addressing

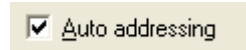


Figure 48: Configuration > Address Table - Auto Addressing

The **Auto Addressing** is used by default. For manual addressing the check-box must be unchecked and the user has to enter the addresses for input and output data.

Display Mode

- Use the **Display Mode** drop-down list to select data display mode decimal or hexadecimal.



Figure 49: Configuration > Address Table - Display Mode

CSV Export

The **CSV Export** option allows to export input- and output addresses as CSV file (CSV = comma separated value). Therefore:

- Click to the **CSV Export** button.
- A file saving dialog opens.
- Save the data as *.CSV file.

You can open the generated data by means of a spreadsheet application.

5.9.2 Inputs / Outputs

If manual addressing is allowed, you assign the input or output addresses of the modules manually:

- Click on an address of a module.
- Edit the field and type in a new address.

Address Table

☐ Auto addressing Display mode: Decimal CSV Export

Inputs:

Name of station	Module	Submodule	Type	Length	Addr...
Device	16 Bytes In <Slot 1>	0x0000000D <Subslot 1>	IB	16	0
Device	16 Bytes In <Slot 2>	0x0000000D <Subslot 1>	IB	16	16
Device	8 Bytes In <Slot 3>	0x00000009 <Subslot 1>	IB	8	32

Outputs:

Name of station	Module	Submodule	Type	Length	Addr...
Device	16 Bytes Out <Slot 4>	0x0000000E <Subslot 1>	QB	16	0
Device	16 Bytes Out <Slot 5>	0x0000000E <Subslot 1>	QB	16	16
Device	8 Bytes Out <Slot 6>	0x0000000A <Subslot 1>	QB	8	32

Figure 50: Configuration > Address Table – Input / Output (*The name of the PROFINET IO-Device is displayed.)

Parameter	Meaning	Range of Value / Value
Name of Station	Network name of the PROFINET IO-Device station. The name of station is set in the Device Table in the PROFINET IO Controller DTM. Here it is only displayed (refer to section <i>Device Table</i> on page 79) or otherwise it must be set directly in the configuration tool of the PROFINET IO-Device.	1 - 240 characters
Module	Module name	
Submodule	Submodule name	
Type	Data type (QB,QW,IB, IW)	
Length	Length of the Module / Submodule in Bytes.	
Address	Data offset address.	

Table 24: Address Table Pane Parameters - Inputs / Outputs

- Confirm your modifications by clicking on the **OK** button.
- The manually changed address is now set.

- The configuration software reports an error if an address overlapping in the process data image was detected. The configuration software reports the first address overlapping, which was detected. The display includes the Name of Station, the module, the submodule and especially the start address and the length of the overlapping modules.

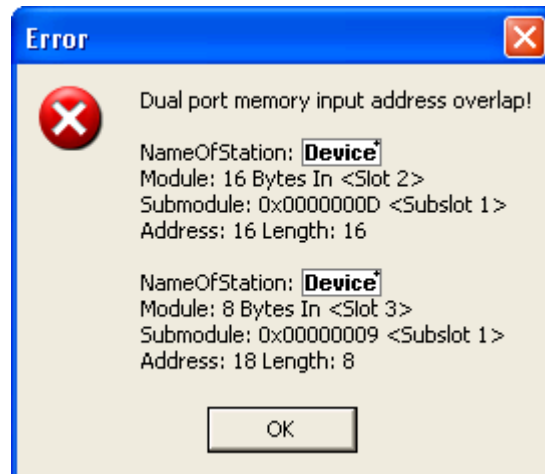


Figure 51: Configuration > Address Table – Address Overlap

*The name of the PROFINET IO-Device is displayed.

- Correct the address for one of the two modules and enter an unused address.
- Confirm your modifications by clicking on the **OK** respectively **Apply** button.

Sort Addresses

- To sort the address data, click on the respective column header.

5.10 FSU/Port-Settings

The **FSU/Port Settings** pane is used to set in the PROFINET IO-Controller device whether a PROFINET IO-Device must use a fast start up (FSU) connection to establish the the cyclic data exchange. For this, all existing Ethernet connections from the PROFINET IO-Controller to PROFINET IO-Devices are displayed, including all existing ports at each Device.

By the **MAU Type** for each PROFINET IO Device and for each port is to be set, whether the Device should establish the connection automatically or whether fixed parameters are to be used.



Important: If you check **FSU** (fast start up) to establish a fast connection for a port, use only the **MAU Type** "100BASETXFD". For the "AUTO" setting the *Auto negotiation* and *Auto crossover* effects will prevent establishing a fast Ethernet connection.

- Select **Configuration > FSU/Port-Settings**.
- Check **FSU** for those PROFINET IO-Devices, which must use a fast start up (FSU) connection to establish the cyclic data exchange.

FSU-/Port- Settings				
		Name	Name of station	MAU Type
		Device name*	Station name Device**	
		Interface 1 - Port1		AUTO
		Interface 1 - Port2		AUTO
		Device name*	Station name Device**	
		Interface 1 - Port1		AUTO
		Interface - Port2		AUTO

Figure 52: FSU/Port-Settings (*The name /**Name of Station of the Device device is displayed.)

Parameter	Meaning	Range of Value / Value
Name	The symbolic name of the PROFINET IO-Device station.	
Name of Station	Network name of the PROFINET IO-Device station. The name of station is set in the Device Table in the PROFINET IO Controller DTM. Here it is only displayed (refer to section <i>Device Table</i> on page 79) or otherwise it must be set directly in the configuration tool of the PROFINET IO-Device.	1 - 240 characters


Parameter	Meaning	Range of Value / Value
MAU Type	<p>The MAU-Type (MAU = Medium Attachment Unit) defines the physical settings (PHY) on the PROFINET IO-Device. For each port at the device the MAU type must be set separately.</p> <p>„<i>AUTO</i>“: For this setting, the connection between adjacent Devices is negotiated automatically. It may take 2-3 seconds for the physical connection is established.</p> <p>„<i>100BASETXFD</i>“ [4]: For this setting, the connection between adjacent Devices is fixed with 100 MBit /Full duplex.</p> <hr/> <p> Important for Hardware Wiring!</p> <p>(1) Make wiring only between ports with the same port setting (MAU-Type configuration). Otherwise no connection can be established between the Devices or only in half duplex mode.</p> <p>(2) Connect only ports with each other, which have different cross-over settings. Otherwise a connection between the devices can not be established. Refer to the manual of the end device manufacturer to get information which crossover settings are set on the used device. Respectively use crossover cables.</p>	<i>AUTO</i> , <i>100BASETXFD</i>
FSU	In the PROFINET IO-Controller device must be configured for each PROFINET IO-Device, whether the Device must use a fast start up (FSU) connection to establish the cyclic data exchange.	checked, unchecked

Table 25: FSU/Port-Settings

5.11 Stations Timing

- Select **Configuration > Stations Timing** in the navigation area.

In the dialog pane **Stations Timing** for each selected PROFINET IO-Device station you can make the following stations timing settings.

Not IRT capable devices:

- station global settings 'Updating time' and 'Watchdog time'.

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
cifxreps	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxreps-001	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxreps-002	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxreps-003	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0

Figure 53: Configuration > Stations Timing, Example 'Unsynchronized (RT)' by default

IRT capable devices or IRT capable devices with isochronous mode:

- unsynchronized (RT) or synchronized (isochronous) real-time communication (IRT),
- station global settings 'Updating time' and 'Watchdog time',
- or sync domain settings ,Name' and ,Basic send-clock'.

,Basic send-clock' is only valid for IRT. In a sync domain for all IRT participants globally an identical value for ,Basic send-clock' is valid. This is the basic clock of all IRT participants.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-001	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-002	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-003	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0

[Adjust](#)

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 54: Configuration > Stations Timing, Example 'Synchronized (IRT)' (editable)

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0

[Adjust](#)

Sync domain settings



Sync domain name:

Basic send-clock: ms

Figure 55: Configuration > Stations Timing, Example 'Synchronized (IRT)', Isochronous mode

5.11.1 Parameter in the 'Stations Timing' Pane

The following table shows the parameters description of the **Station Timing** pane:

Parameter	Meaning	Range of Value / Value
Station global Settings		
Name of station	Network name of the PROFINET IO-Controller station. Under Name of station all devices are displayed, which are connected to the PROFINET IO-Controller. The corresponding name of station is set in the Device Table in the PROFINET IO Controller DTM (refer to section <i>Device Table</i> on page 79) or otherwise it must be set directly in the configuration tool of the PROFINET IO-Device.	1 - 240 characters
Isochronous (not editable)	<p>Indicates whether the isochronous mode is used or not.</p>  <p>Note: The selection, whether the isochronous mode is to be used or not, for devices module or submodules, is made in the Isochronous Modules pane, in the Isochronous column (see section <i>Isochronous Modules</i> on page 84).</p> <p>Meaning if checked</p> <ul style="list-style-type: none"> Device is IRT-capable (isochronous), or contains isochronous modules or isochronously supported submodules, provides isochronous mode and uses isochronous mode. <p>Meaning if not checked:</p> <ul style="list-style-type: none"> Device is RT capable (not IRT capable), or does not contain isochronous modules or isochronously supported submodules. <p>OR</p> <ul style="list-style-type: none"> Device is IRT-capable (isochronous), or contains isochronous modules or isochronously supported submodules, does not provide isochronous mode. <p>OR</p> <ul style="list-style-type: none"> Device is IRT-capable (isochronous), or contains isochronous modules or isochronously supported submodules, provides isochronous mode, does not use isochronous mode. 	checked, unchecked
RT mode	<ul style="list-style-type: none"> Unsynchronized (RT): The setting involves that RT (= Real-Time) is used. The data exchange from the PROFINET IO-Controller with this PROFINET IO-Device device is not synchronized. 'Unsynchronized (RT)' as a <i>fixed setting</i> means that this device does not support a synchronized (isochronous) real-time communication. Synchronized (IRT): The setting involves that IRT (=Isochronous Real-Time) is used. The data exchange from the PROFINET IO-Controller with this PROFINET IO-Device device is synchronized. 'Synchronized (IRT)' as a <i>fixed setting</i> means that this device supports a synchronized (isochronous) real-time communication and provides the isochronous mode. 'Synchronized (IRT)' as a <i>selectable setting</i> involves that the values 'Updating time', 'Watchdog time' and 'Basic send-clock' are adjusted to each other.  <p>Note: The isochronous mode is to be enabled in the Isochronous Modules pane, in the Isochronous column (see section <i>Isochronous Modules</i> on page 84).</p> <p>For synchronized real-time communication (IRT communication), the process data is send in a fixed order, in equidistant (isochronous) time intervals and isochronously to the other participants on the bus.</p> <p>If you select IRT mode, the PROFINET IO-Controller is automatically assigned as the sync Master, as well, the assignment of the sync domain name is done.</p> <p>Note that the settings made here are taken over for 'Synchronization role' in the Topology Editor and vice versa. For more information, refer to the operation instruction manual <i>Topology Editor</i>.</p>	<i>Fixed or selectable:</i> Unsynchronized (RT), Synchronized (IRT)


Parameter	Meaning	Range of Value / Value
Updating time [ms]	<p>Eligible (total) cycle time of the device to exchange data.</p> <p>RT mode = RT: For each unsynchronized device, a value for 'Updating time' can be chosen. There is no dependence on other variables.</p> <p>RT mode= IRT: For each synchronized device only those values for 'Updating time' can be selected which are permissible, in dependence to the value selected for 'Basic send-clock'.</p> <p> Important! Values for 'Updating time', which after a change of 'Basic send-clock' are marked with a red exclamation mark, result in an invalid configuration and must be adjusted manually or via Adjust, before the configuration is completed.</p>	<p>RT mode RT: All values that are defined in the GSDML file are selectable.</p> <p>RT mode IRT: Only permissible values can be selected.</p>
Watchdog time [ms]	Time, after which a device reports the absence of cyclic telegrams and passes over to the error state. The value must be an integer multiple of the cycle time (updating time), (with restrictions from the GSDML file).	Integer multiple of 'Updating time'
Adjust	<p>Serves in 'IRT' mode as auto-correction of invalid values for 'Updating time'. For any invalid values for 'Updating time' the closest valid values are set automatically.</p> <p>Alternatively, the values can be corrected manually.</p>	
Sync domain settings		
Sync domain name	<p>DNS compatible name in accordance with the "Name of Station" naming convention. For further information refer to section <i>Device Name according to PROFINET „Name of Station“ Specification</i> on page 63. For invalid inputs a red exclamation mark and an error message will appear.</p> <p>The sync domain includes all devices that are controlled by one sync Master. In the 'Topology Editor' currently only one sync domain is supported.</p> <p>The packet synchronization for the IRT communication (synchronized real-time communication) is controlled by a sync Master. For each sync domain exactly one sync Master is determined. The Hilscher PROFINET IO-Controller device takes over the role as sync Master. The sync Master sets the synchronization clock for data exchange with the sync Slaves.</p> <p>For information on the approved marks, see section <i>Name encoding</i> on page 186.</p>	<p><i>All devices in RT mode RT:</i> disabled (grayed out)</p> <p><i>At least one device in the RT mode IRT:</i> Name acc. to PROFINET specification (PNO document 2722) 1 - 240 characters</p>
Basic send-clock	<p>Basic clock of all IRT participants of the sync domain. Thus, no PROFINET IO-Device is capable to exchange cyclical data faster than any other participant.</p> <p>RT mode = RT: For unsynchronized devices 'Basic send-clock' is disabled (grayed out).</p> <p>RT mode= IRT: For synchronized devices the value selected for 'Basic send-clock' decides about the values selectable for 'Updating time'.</p> <p>Note: By changing the 'Basic send-clock' factor invalid values for the cycle time ('Updating time') of PROFINET IO-Devices can be generated.</p>	<p><i>All devices in RT mode RT:</i> disabled (grayed out)</p> <p><i>At least one device in the RT mode IRT:</i> All values that are defined in the GSDML file are selectable.</p>

Table 26: Parameters in the 'Stations Timing' Pane

5.11.2 Configuration Steps Stations Timing

5.11.2.1 Example ,Unsynchronized (RT)‘

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
cifxrepns	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxrepns-001	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxrepns-002	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxrepns-003	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0

Adjust

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 56: Configuration > Stations Timing, Example ,Unsynchronized (RT)‘

1. Adjust the values for **Updating time** manually or via **Adjust**.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
cifxrepns	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
cifxrepns-001	<input type="checkbox"/>	Unsynchronized (RT)	1.0	48.0
cifxrepns-002	<input type="checkbox"/>	Unsynchronized (RT)	2.0	48.0
cifxrepns-003	<input type="checkbox"/>	Unsynchronized (RT)	4.0	48.0

Adjust

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 57: Configuration > Stations Timing > ,Updating time‘ to be adjusted, Example ,Unsynchronized (RT)‘

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
cifxrepns	<input type="checkbox"/>	Unsynchronized (RT)	1.0	3.0
cifxrepns-001	<input type="checkbox"/>	Unsynchronized (RT)	1.0	3.0
cifxrepns-002	<input type="checkbox"/>	Unsynchronized (RT)	1.0	3.0
cifxrepns-003	<input type="checkbox"/>	Unsynchronized (RT)	1.0	3.0

Sync domain settings

Sync domain name:

Basic send-clock: ms

Adjust

Figure 58: Configuration > Stations-Timing > ,Updating time' adjusted, Example ,Unsynchronized (RT)'

2. Adjust the values for **Watchdog time** manually.

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
cifxrepns	<input type="checkbox"/>	Unsynchronized (RT)	1.0	6.0
cifxrepns-001	<input type="checkbox"/>	Unsynchronized (RT)	1.0	6.0
cifxrepns-002	<input type="checkbox"/>	Unsynchronized (RT)	1.0	6.0
cifxrepns-003	<input type="checkbox"/>	Unsynchronized (RT)	1.0	6.0

Sync domain settings

Sync domain name:

Basic send-clock: ms

Adjust

Figure 59: Configuration > Stations-Timing > ,Watchdog' to be adjusted, Example ,Unsynchronized (RT)'

3. Apply all settings or complete the configuration via **OK**.

5.11.2.2 Example ‚Synchronized (IRT)‘

1. For each PROFINET IO-Device station select the station **RT mode**.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-001	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-002	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-003	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0

Adjust

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 60: Configuration > Stations-Timing, Example ‚Synchronized (IRT)‘

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	16.0	48.0
comx100reps-001	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-002	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0
comx100reps-003	<input type="checkbox"/>	Unsynchronized (RT)	16.0	48.0

Adjust

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 61: Configuration > Stations-Timing > RT mode to be selected, Example ‚Synchronized (IRT)‘

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-001	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-002	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-003	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 1.0 ms

Figure 62: Configuration > Stations-Timing > RT mode selected, Example ,Synchronized (IRT)‘

- For each PROFINET IO-Device station select the **Basic send-clock** factor.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-001	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-002	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-003	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Figure 63: Configuration > Stations-Timing > Send-Clock, Example ,Synchronized (IRT)‘



Important: By changing the ,Basic send-clock‘ factor invalid values for the cycle time (‘Updating time‘) of PROFINET IO-Devices can be generated. Values which are marked with a red exclamation mark, result in an invalid configuration and must be adjusted before the configuration is complete.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	1.0	3.0
comx100reps-001	<input type="checkbox"/>	Synchronized (IRT)	4.0	3.0
comx100reps-002	<input type="checkbox"/>	Synchronized (IRT)	8.0	3.0
comx100reps-003	<input type="checkbox"/>	Synchronized (IRT)	16.0	3.0
			32.0	
			64.0	

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Adjust

Figure 64: Configuration > Stations-Timing > ,Updating time' to be adjusted, Example ,Synchronized (IRT)'

3. Adjust the values for **Updating time** manually or via **Adjust**.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0
comx100reps-001	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0
comx100reps-002	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0
comx100reps-003	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Adjust

Figure 65: Configuration > Stations-Timing > ,Updating time' adjusted, ,Synchronized (IRT)'

4. Adjust the values for **Watchdog time** manually.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	4.0	24.0
comx100reps-001	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0
comx100reps-002	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0
comx100reps-003	<input type="checkbox"/>	Synchronized (IRT)	4.0	12.0

[Adjust](#)

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 66: Configuration > Stations-Timing > ,Watchdog' to be adjusted, Example ,Synchronized (IRT)'

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
comx100reps	<input type="checkbox"/>	Synchronized (IRT)	4.0	24.0
comx100reps-001	<input type="checkbox"/>	Synchronized (IRT)	4.0	24.0
comx100reps-002	<input type="checkbox"/>	Synchronized (IRT)	4.0	24.0
comx100reps-003	<input type="checkbox"/>	Synchronized (IRT)	4.0	24.0

[Adjust](#)

Sync domain settings

Sync domain name:

Basic send-clock: ms

Figure 67: Configuration > Stations-Timing > ,Watchdog' adjusted, Example ,Synchronized (IRT)'

5. Apply all settings or complete the configuration via **OK**.

5.11.2.3 Example ‚Synchronized (IRT)‘, Isochronous mode

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 0.25 ms

Figure 68: Configuration > Stations-Timing, Example ‚Synchronized (IRT)‘, Isochronous mode

1. For each PROFINET IO-Device station select the **Basic send-clock** factor.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Figure 69: Configuration > Stations-Timing > Send-Clock, Example ‚Synchronized (IRT)‘, Isochronous mode



Important: By changing the 'Basic send-clock' factor invalid values for the cycle time ('Updating time') of PROFINET IO-Devices can be generated. Values which are marked with a red exclamation mark, result in an invalid configuration and must be adjusted before the configuration is complete.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	3.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	1.0	3.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Figure 70: Configuration > Stations-Timing > 'Updating time' to be adjusted, Example 'Synchronized (IRT)', Isochronous mode

2. Adjust the values for **Updating time** manually or via **Adjust**.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Figure 71: Configuration > Stations-Timing > 'Updating time' adjusted, Example 'Synchronized (IRT)', Isochronous mode

3. Adjust the values for **Watchdog time** manually.

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	24.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	12.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Figure 72: Configuration > Stations-Timing > ,Watchdog' to be adjusted, Example ,Synchronized (IRT)', Isochronous mode

Stations Timing

Station global settings

Name of station	Isochro...	RT mode	Updating time [ms]	Watchdog time [ms]
sinamics-s120-cu320-2pn	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	24.0
sinamics-s120-cu320-2pn-001	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	24.0
sinamics-s120-cu320-2pn-002	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	24.0
sinamics-s120-cu320-2pn-003	<input checked="" type="checkbox"/>	Synchronized (IRT)	4.0	24.0

Adjust

Sync domain settings

Sync domain name: default-sync-domain

Basic send-clock: 4.0 ms

Figure 73: Configuration > Stations-Timing > ,Watchdog' adjusted, Example ,Synchronized (IRT)', Isochronous mode

4. Apply all settings or complete the configuration via **OK**.

5.12 Controller Settings

At the **Controller Settings** pane device related settings can be made. These settings only become active after the configuration was downloaded to the device.



Information about the download you find in section *Download Configuration* on page 125).

Controller Settings

Start of bus communication —————

☒ Automatically by device

☐ Controlled by application

Application monitoring —————

Watchdog time: ms

Port Settings —————

Port 1:

Port 2:

Figure 74: Configuration > Controller Settings



Note: The setting options at the dialog pane **Controller Settings** for client specific variants of the configuration software can differ from the setting options displayed here.

5.12.1 Start of Bus Communication

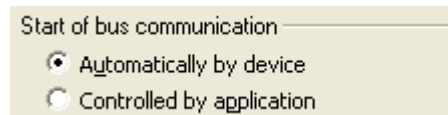


Figure 75: Controller Settings > Start of Bus Communication

If **Automatically by device** is selected, the PROFINET IO-Controller device will start with the data exchange on the bus after the initialization has been ended.

When **Controlled by application** is selected, the application program must activate the data exchange on the bus.



Note: The setting options under **Start of Bus Communication** for client specific variants of the configuration software can differ from the setting options displayed here.

5.12.2 Application Monitoring

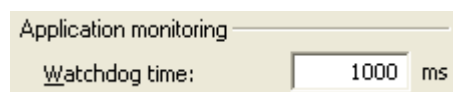


Figure 76: Controller Settings > Application Monitoring

The **Watchdog time** determines the time within which the device watchdog must be re-triggered from the application program while the application program monitoring is activated. When the watchdog time value is equal to 0 the watchdog is deactivated and the application program monitoring is deactivated too.

The permissible range of values of the watchdog time is 20 to 65535. By default the watchdog time value equals to 1000 ms.

Watchdog time	Range of Value / Default Value
Permissible range of values	20 ... 65535 ms
Default	1000 ms
The software watchdog is deactivated.	0 ms

Table 27: Range of Value / Value for the Watchdog time



Note: The setting options under **Application Monitoring** for client specific variants of the configuration software can differ from the setting options displayed here.

5.12.3 Port Settings

For each port must be configured, whether the PROFINET IO-Controller device should establish the connection automatically (setting: „*AUTO*“) or whether fixed parameters are to be used (setting: „*100BASETXFD*“).

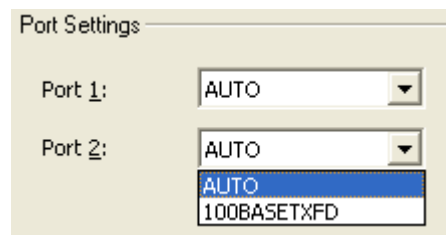


Figure 77: Controller Settings > Port Settings

Parameter	Meaning	Range of Value / Value
Port Settings Port 1, Port 2	<p>Port Settings is to be set for each port (Port 1, Port 2) of the PROFINET IO-Controller separately.</p> <p>„<i>AUTO</i>“: For this setting, the connection between adjacent Devices is negotiated automatically. It may take 2-3 seconds for the physical connection is established.</p> <p>„<i>100BASETXFD</i>“ [4]: For this setting, the between connection adjacent Devices is fixed with 100 MBit /Full duplex.</p>	<i>AUTO</i> , <i>100BASETXFD</i>

Table 28: Parameters Port Settings



Important for Hardware Wiring!

- (1) Make wiring only between ports with the same port setting. Otherwise no connection can be established between the Devices or only in half duplex mode.
- (2) Connect only ports with each other, which have different cross-over settings. Otherwise a connection between the devices can not be established. Refer to the manual of the end device manufacturer to get information which crossover settings are set on the used device. Respectively use crossover cables.



Note: The setting options under **Port Settings** for client specific variants of the configuration software can differ from the setting options displayed here.

6 Online Functions

Getting Access to SYCON.net Online Functions



Note! If under 'Configuration' > 'Master Settings' > 'Start of bus communication' > 'Controlled by application' is selected, after 'Power on Reset' the Master device is in 'Offline' state! In this state you can not use the SYCON.net online function 'Network Scan'. To get access to this online function in case the Master device is used together with an application program, you must make sure that the application program will start the communication. Alternatively you can start the communication manually from the context menu 'Start communication' of the the Master device.

6.1 Connecting/Disconnecting Device



Note: Several PROFINET IO-Controller DTM functions e. g. **Diagnosis** or the configuration download in the FDT Framework require an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device.

Connecting Device

The following steps are needed to establish a connection from the PROFINET IO-Controller DTM to a PROFINET IO-Controller device:

Under **Settings** in the **Driver** pane:

1. Verify that the default driver is checked and respectively check another or multiple drivers.
2. Configure the driver if necessary.

Under **Settings** in the **Device Assignment** pane:

3. Scan for the devices (with or without firmware).
4. Select the device (with or without firmware) and apply the selection.



Before you download the firmware adhere to the necessary safety precautions to prevent personnel injury and property damage. For more refer to section *Safety Messages on Firmware or Configuration Download* on page 28.

Under **Settings** in the **Firmware Download** pane if not yet a firmware was loaded to the device:

5. Select and download the firmware.

Under **Settings** in the **Device Assignment** pane if not yet a firmware was loaded to the device:

6. Scan for the device (with firmware) once more.
7. Select the device (with firmware) once more.



An overview of the descriptions for these steps you find in the section *Overview Settings* on page 29.

8. In the DTM interface dialog select the **OK** button, to apply the selection and to close the DTM interface dialog.
 9. Put a right-click on the PROFINET IO-Controller device icon.
 10. Select the **Connect** command from the context menu.
- ⇒ The PROFINET IO-Controller device now is connected to the PROFINET IO-Controller DTM via an online connection. In the network view the device description at the device icon of the Controller is displayed with a green colored background.

Disconnecting Device

To disconnect an online connection from the PROFINET IO-Controller device to a PROFINET IO-Controller DTM take the following steps:

1. In the DTM interface dialog select the **OK** button, to close the DTM interface dialog.
 2. Right-click on the PROFINET IO-Controller device icon.
 3. Select the **Disconnect** command from the context menu.
- ⇒ In the network view the device description at the device icon of the Controller is not any more displayed with a green colored background. Now the PROFINET IO-Controller device is disconnected from the DTM.

6.2 'Network Scan' and 'Upload'

With the function **Network Scan...** of the PROFINET IO-Controller DTM you can find out automatically which PROFINET IO-Devices are attached to the PROFINET IO-Controller device and how these devices are configured. During the network scan the Controller device requests the ident codes of the Device devices found at the bus. For each connected Device device its ident code is read out.

In the **Scan Response** dialog of the Controller DTM, the assigned device description files or DTM devices are displayed. Exactly one ident code is assigned to each device description file and to each DTM device. Different versions (also language versions) of the same device description file are defined by the same ident code. For every identified device you can select the assigned DTM device according to the firmware loaded in that Device device. Via **Create Devices** for each Device device the selected DTM device is created. The IP settings of the Device device can be set manually in the Controller DTM if necessary.



Note: The IP settings of the Device device must be downloaded to the Controller device, before uploading the module configuration is started.

The configuration is uploaded after a network scan. Via the **Upload** function of the PROFINET IO-Device DTM, data for module configuration can be uploaded from the individual PROFINET IO-Device devices via the PROFINET IO-Controller device and the PROFINET IO-Controller DTM into the PROFINET IO-Device DTMs.

Requirements

The PROFINET IO-Controller device must be configured.



Important: The configuration of the Controller device must be downloaded in the Controller device. For more see section *Configuration Steps* on page 23.

Overview of the Steps

1. Start the **Network Scan** function of the Controller DTM.
2. Make settings in the **Scan Response** dialog of the Controller DTM.
3. Click **Create Devices**.
4. Use the **Download** function of the Controller DTM to download the IP settings of the Device device to the Controller device.
5. Use the **Upload** function to upload the device configuration of each Device device to the Device DTM.
6. Use the **Download** function of the Controller DTM to download the device configuration of the Device devices to the Controller device.

6.2.1 Starting 'Network Scan'

1. Start the **Network Scan** function of the Controller DTM.

- In netDevice: right-click on the device symbol of the PROFINET IO-Controller DTM.
- Select **Network Scan...** from the context menu.

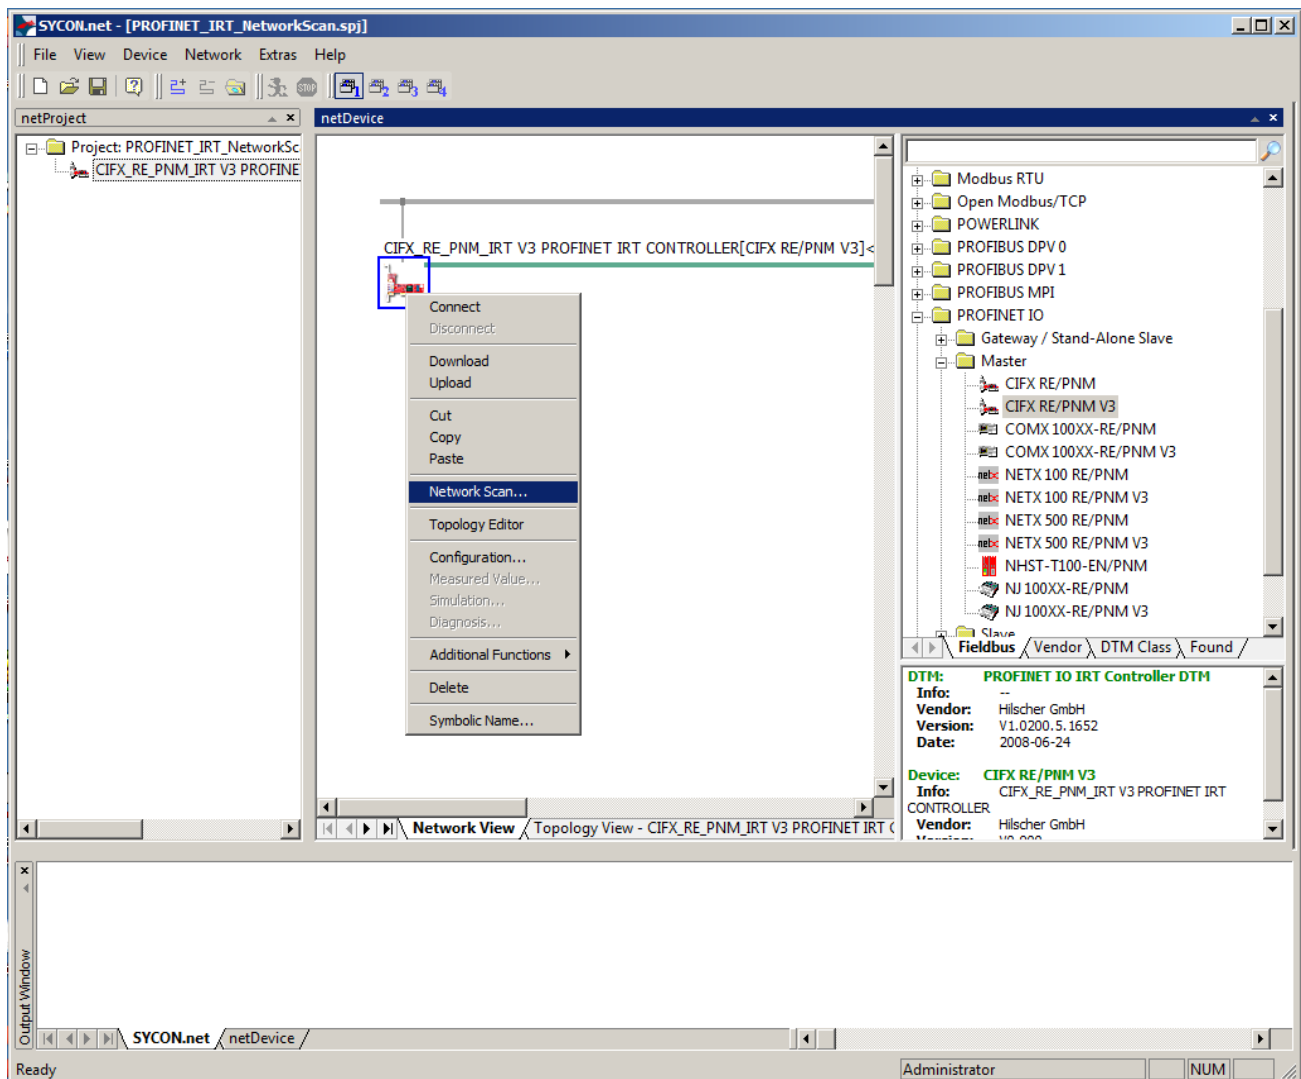


Figure 78: Starting 'Network Scan' (Example)

- Wait for a short time.



Note: It can last some seconds, until the **Network Scan...** dialog is displayed.

Via **Network Scan...** an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device is established. The configuration software scans, which PROFINET IO-Devices are attached to the PROFINET network or to the PROFINET IO-Controller device.

➤ The **Scan Response** dialog of the Controller DTM is displayed.

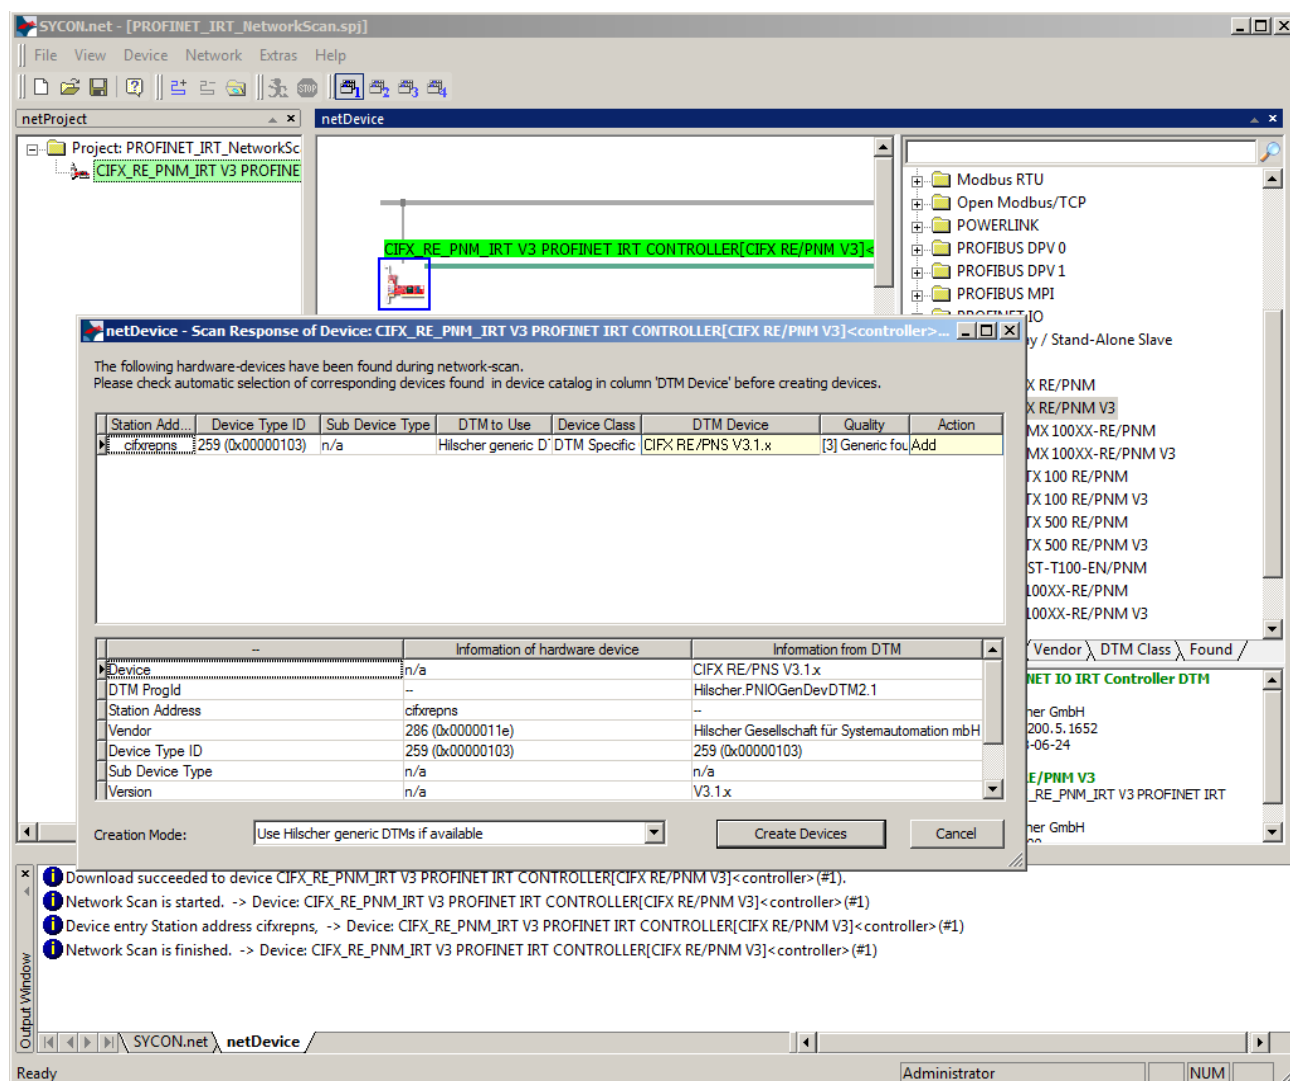


Figure 79: Scan Response dialog of the Controller DTM (Example)

6.2.2 Settings in the Scan Response Dialog of the Controller DTM

2. Make settings in the **Scan Response** dialog of the Controller DTM.

➤ In the **DTM to Use** column the DTM devices assigned to the found ident codes appear.

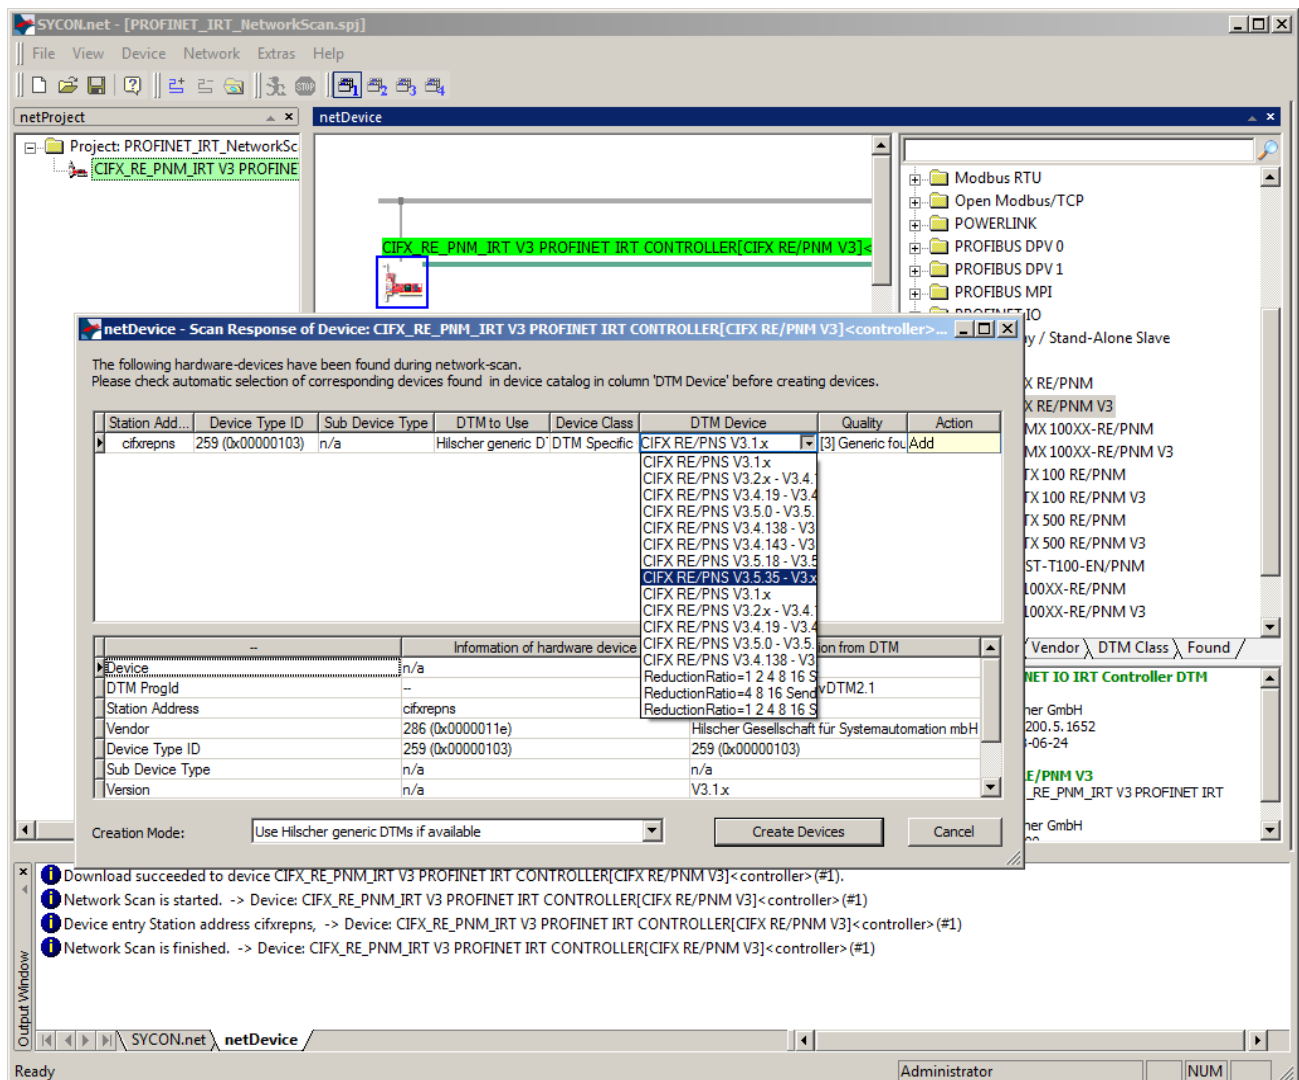


Figure 80: Scan Response dialog of the Controller DTM (Example)

- In the **DTM Device** column, select for every identified device the DTM device corresponding to the firmware loaded in this Device device.
- If in the **DTM Device** column no DTM device or a DTM device not desired is displayed, add the required DTM devices to the device catalog.
- or adapt the creation mode under **Creation Mode**.
- In the **Action** column select, whether the found DTM device shall be:
 - *added* or *skipped*.
(if a device is not yet present in the project),
 - *replaced* or *skipped*.
(if a device is already present in the project)

6.2.3 Description on the Scan Response dialog of the Controller DTM

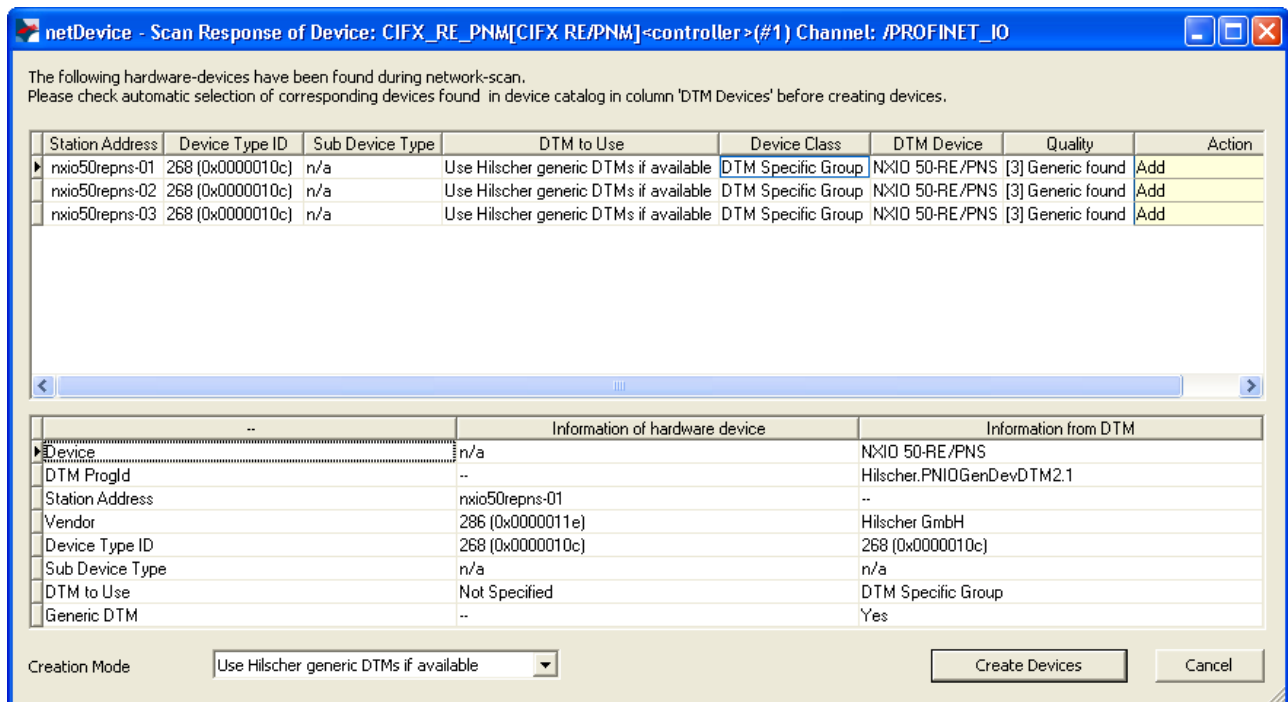


Figure 81: Scan Response dialog of the Controller DTM (Example)

In the following table you find a description about the **Scan Response** dialog of the Controller DTM.

Column	Description
Title Bar	With the text: <i>Symbolic Name of the Controller Device [Device Description] <Device Address> (#Network ID) channel/PROFINET_IO.</i>
Instruction	In the Network Scan window the instruction text is displayed: The following hardware-devices have been found during network scan. Please check automatic selection of corresponding devices found in device catalog in column 'DTM Devices' before creating devices.
Station Address	PROFINET IO station address, which displays the logical sequence of the devices within a PROFINET network.
Colors	Meaning of colors in the Scan Response dialog of the Controller DTM: <div style="display: flex; align-items: center;"> <div style="width: 30px; height: 20px; background-color: red; margin-right: 5px;"></div> Red If a field marked in red appears in column Station address, the respective DTM device is already present on the network. </div> <div style="display: flex; align-items: center; margin-top: 5px;"> <div style="width: 30px; height: 20px; background-color: yellow; margin-right: 5px;"></div> Yellow If a field appears marked in yellow, a selection can be made by a combo box. </div>
Device Type ID	Identification (ID): Ident code read out from each device (Unique Identifier)
Sub Device Type	Sub type of the device type, if applicable
DTM to Use	Display of the DTM devices, which are assigned to the ident codes found during scanning: If <u>Use Hilscher generic DTM's if available</u> is displayed <i>without color marking</i> , there is no selection possibility. If <u>Use Hilscher generic DTM's if available</u> is displayed <i>marked in yellow</i> , the following selection can be made: <div style="border: 1px solid black; padding: 2px; margin: 5px 0;"> Use Hilscher generic DTM's if available [v] Use Hilscher generic DTM's if available Use vendors DTM's if available </div> (In the figure shown example DTM's are displayed.) A selection will only be displayed if under Creation Mode > Choose for each device was selected and if another DTM has been found for the respective device.
Device Class	Device class of the PROFINET IO-Device device.


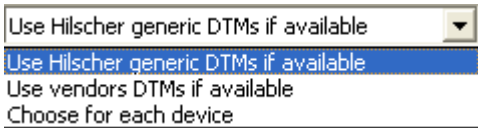
Column	Description
DTM Device	<p>Found Device-DTM (the device name as taken from the DTM)</p> <p>Only the device description files or DTM devices can be displayed within the column DTM Devices:</p> <ul style="list-style-type: none"> Which are available in the device catalog for the scanned ident code, Respectively, which belong to the selection made under Creation Mode and which belong to the selection made under Creation Mode > Choose for each device under DTM to create. <p>For each device type ID in the column DTM Device the following is displayed:</p> <ul style="list-style-type: none"> <u>no</u> device, <u>one</u> single device or <u>multiple</u> devices (within a combobox). <p>This means, within the device catalog of netDevice for the found ident code and the selected Creation Mode these alternatives are available:</p> <ul style="list-style-type: none"> no DTM A device description file or a DTM device of the manufacturer One or more device description files or DTM devices of a manufacturer
Quality	<p>Associated quality information</p> <p>Display: [1] DTM found, [3] Generic found</p>
Action	<p>The action to be performed with the corresponding device during the process of device creation.</p> <ul style="list-style-type: none"> If no device is present within the current project, the selection Add/Skip will appear. If there is already a device present within the current project, the selection Replace/Skip will appear. <p>Add adds a new instance for the selected DTM during the process of creation of a device.</p> <p>Skip skips the process of creation of a device for the respective device address.</p> <p>Replace erases the instance of the DTM currently located at this address during the process of creation of a device, and replaces it with the instance of the chosen DTM.</p>
Table below	<p>The lower table in the Scan Response dialog of the Controller DTM shows a comparison of possible differences in device information taken from:</p> <ul style="list-style-type: none"> The hardware device (displayed in central column of 3) and the DTM (displayed in right column of 3) <p>The left column contains which information is compared between the information sources 'Hardware Device' and 'DTM'.</p> <p> Note: If a field contains the text 'n/a', the corresponding information is not applicable in the current context (fieldbus).</p>
Creation Mode	<p>Under Creation Mode one of the following options can be selected:</p> <ul style="list-style-type: none"> User Hilscher generic DTM if available Use vendors DTMs if available Choose for each device <div data-bbox="379 1541 858 1668">  </div> <p><i>Scan Response dialog of the Controller DTM > 'Creation Mode'</i></p>
Create Devices	<p>About Create Devices ...</p> <ul style="list-style-type: none"> for each Device device the previously selected DTM device is created. an upload of the Device configuration can be proceeded.
Cancel	Click Cancel to leave the dialog without creating a device.

Table 29: Description on the Scan Response dialog of the Controller DTM

6.2.4 Creating Devices

3. Click **Create Devices**

➤ In the **Scan Response** dialog of the Controller DTM click **Create Devices**.

➤ The dialog **Devices Network Scan - Creating Device** appears. The dialog shows the progress of the device creation process.



Note: Depending on the device manufacturer, a different dialog may also be displayed.

➤ The question appears **“The current module and submodule configuration of the connected device will be read out now. Do you want to apply the read-out module and submodule configuration?”**
“Yes”/“No”

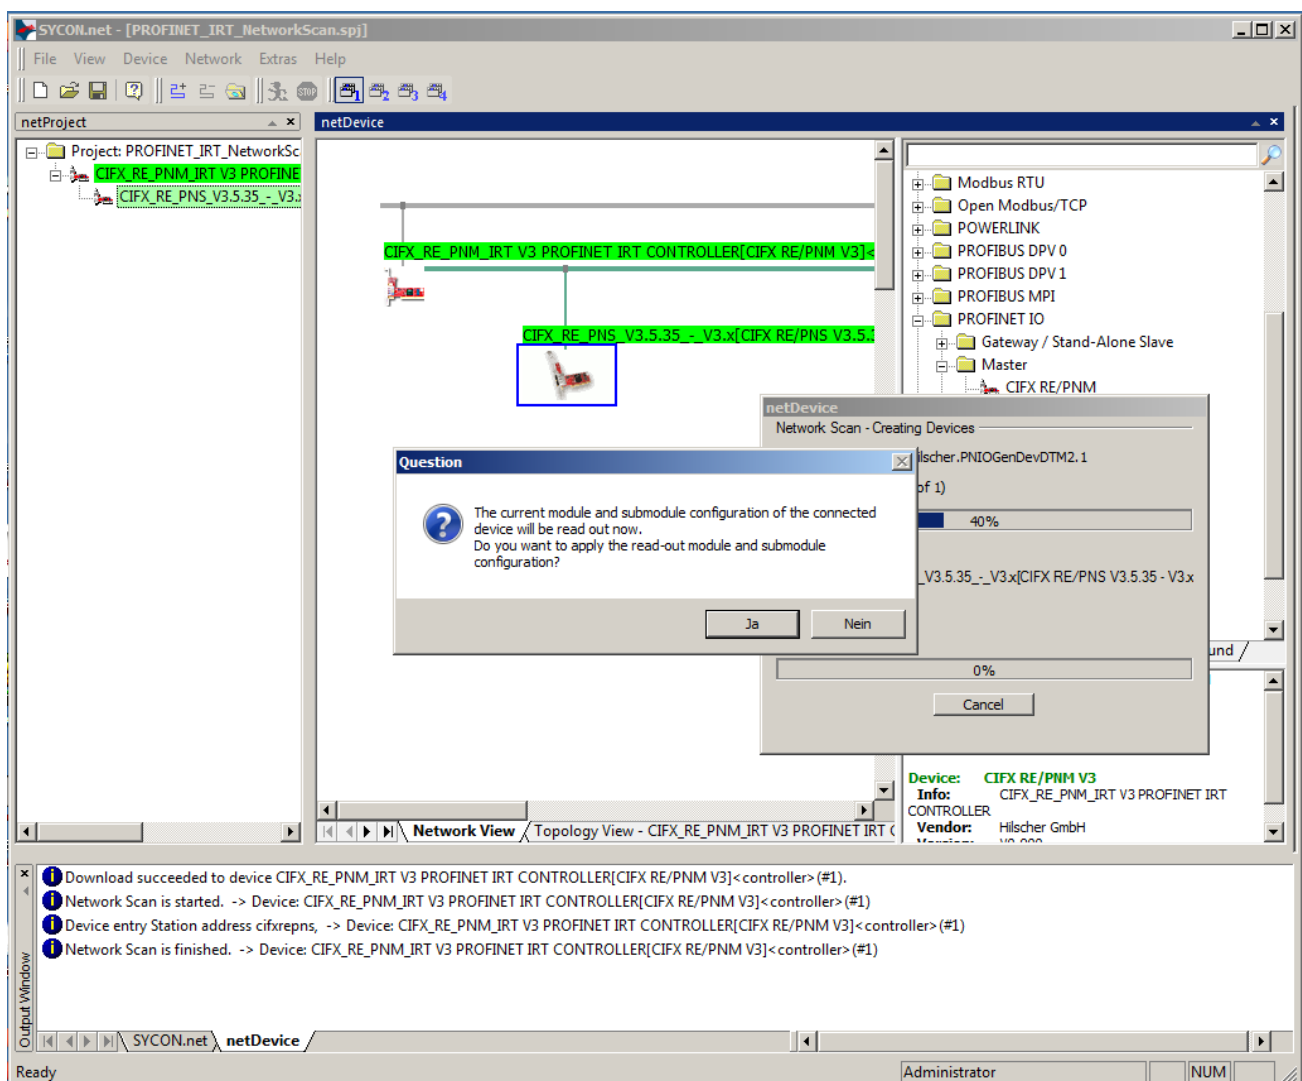


Figure 82: Query for generating the module configuration (Example)

➤ Click **“No”**.

➤ For each Device device the previously selected DTM device is created.

6.2.5 Download to the PROFINET IO-Controller Device



Adhere to the necessary safety precautions to prevent personnel injury and property damage. For more refer to section *Safety Messages on Firmware or Configuration Download* on page 28.

4. Use the **Download** function of the Controller DTM to download the IP settings of the Device device to the Controller device.
 - In **netDevice**: right-click on the device symbol of the PROFINET IO-Controller DTM.
 - Select **Download** from the context menu.

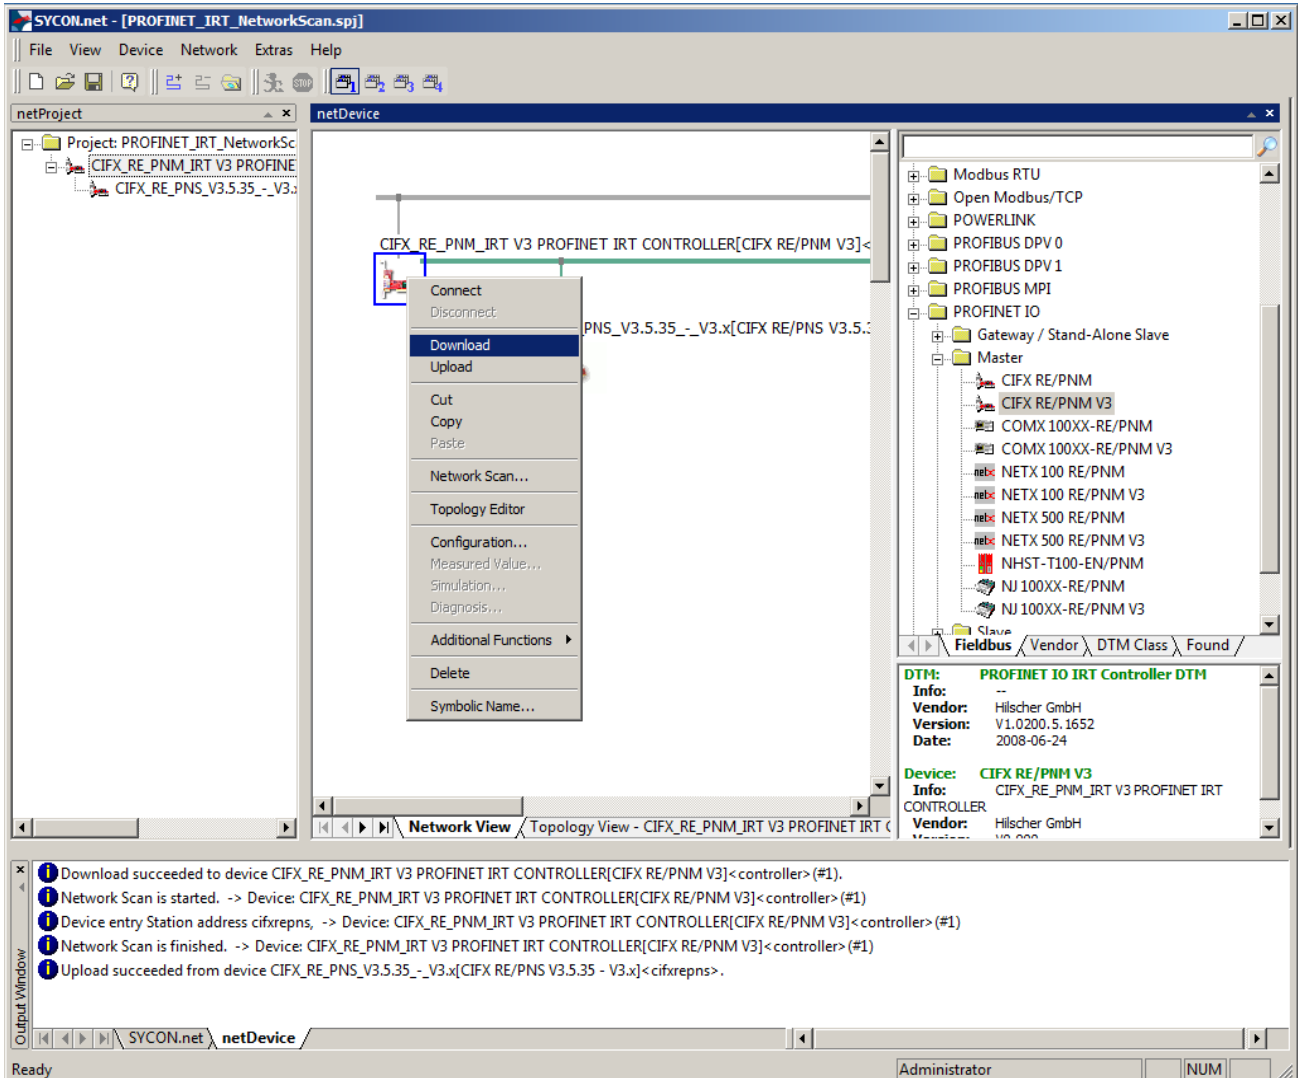


Figure 83: 'Download' current Configuration to PROFINET IO-Controller (Example)

- The Dialog **netDevice - Download** appears:

If you attempt to download during bus operation, communication between master and slaves is stopped.

Do you really want to download?

- Click **Yes**.

- The dialog **netDevice** appears showing the progress bar **Download active, device performs initialisation...**

- The **netDevice** window shows the message (example): **Download succeeded to device CIFS_RE_PNM[CIFS RE/PNM]<# 1>**.

6.2.6 Running 'Upload' and generating Module Configuration

5. Use the **Upload** function to upload the device configuration of each Device device to the Device DTM.
- In **netDevice**: right-click on the device symbol of the PROFINET IO-Device DTM.
 - Select **Upload** from the context menu.

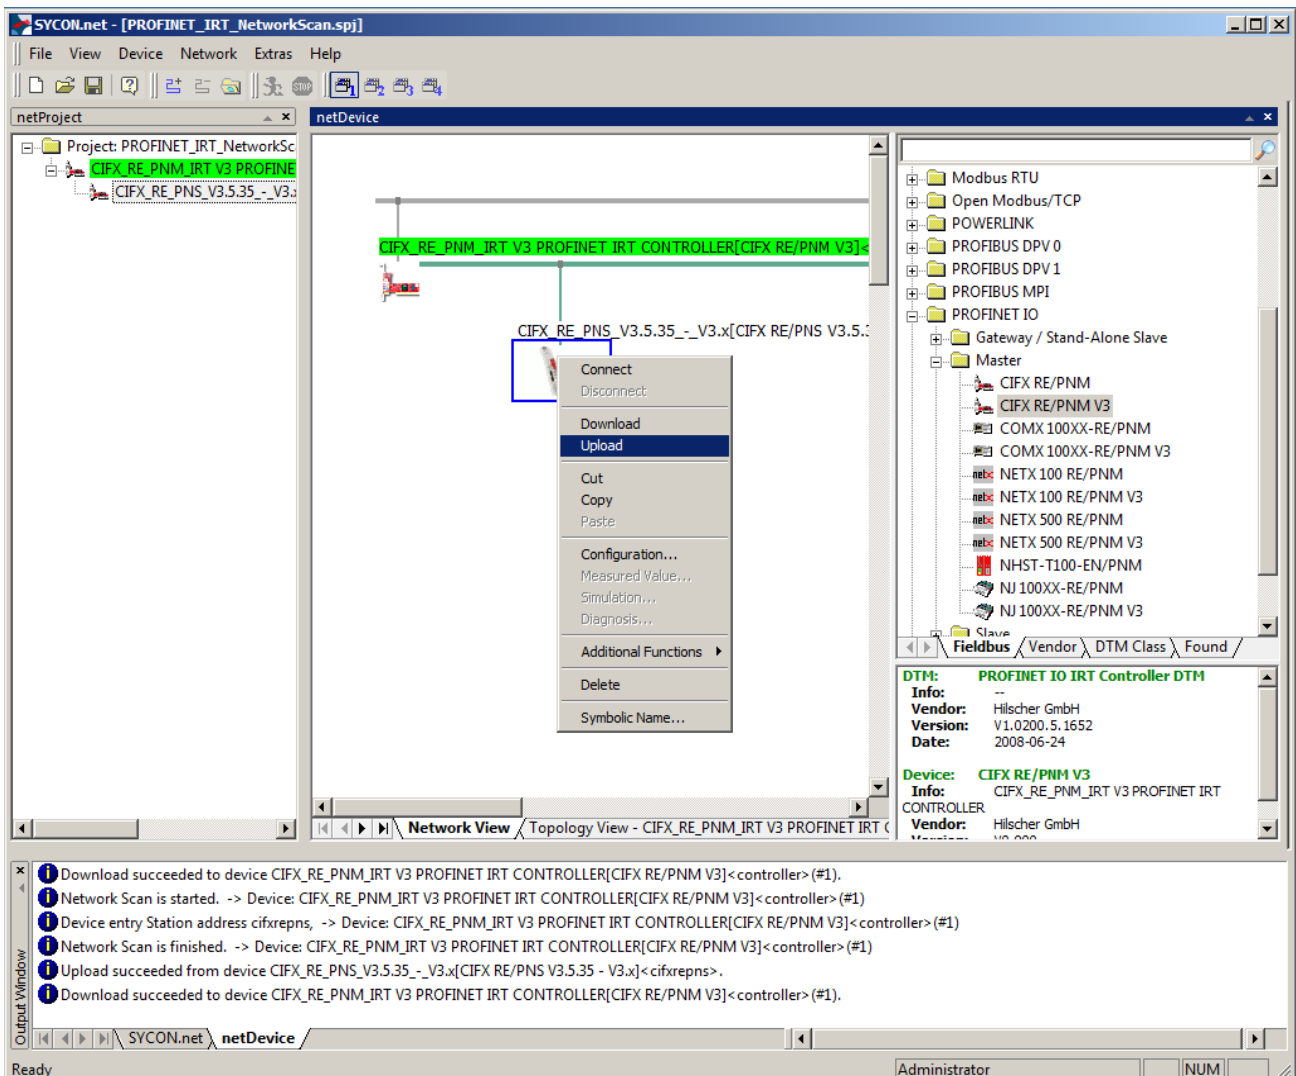


Figure 84: 'Upload' the Device Configuration (Example)

- The dialog **Devices Symbolic Name of the Controller Device [Device Description] <Device Address> Starting Upload ...** appears. The dialog shows the progress of the upload process.



Note: Depending on the device manufacturer, a different dialog may also be displayed.

- The question appears **"The current module and submodule configuration of the connected device will be read out now. Do you want to apply the read-out module and submodule configuration?"**

“Yes”/“No”

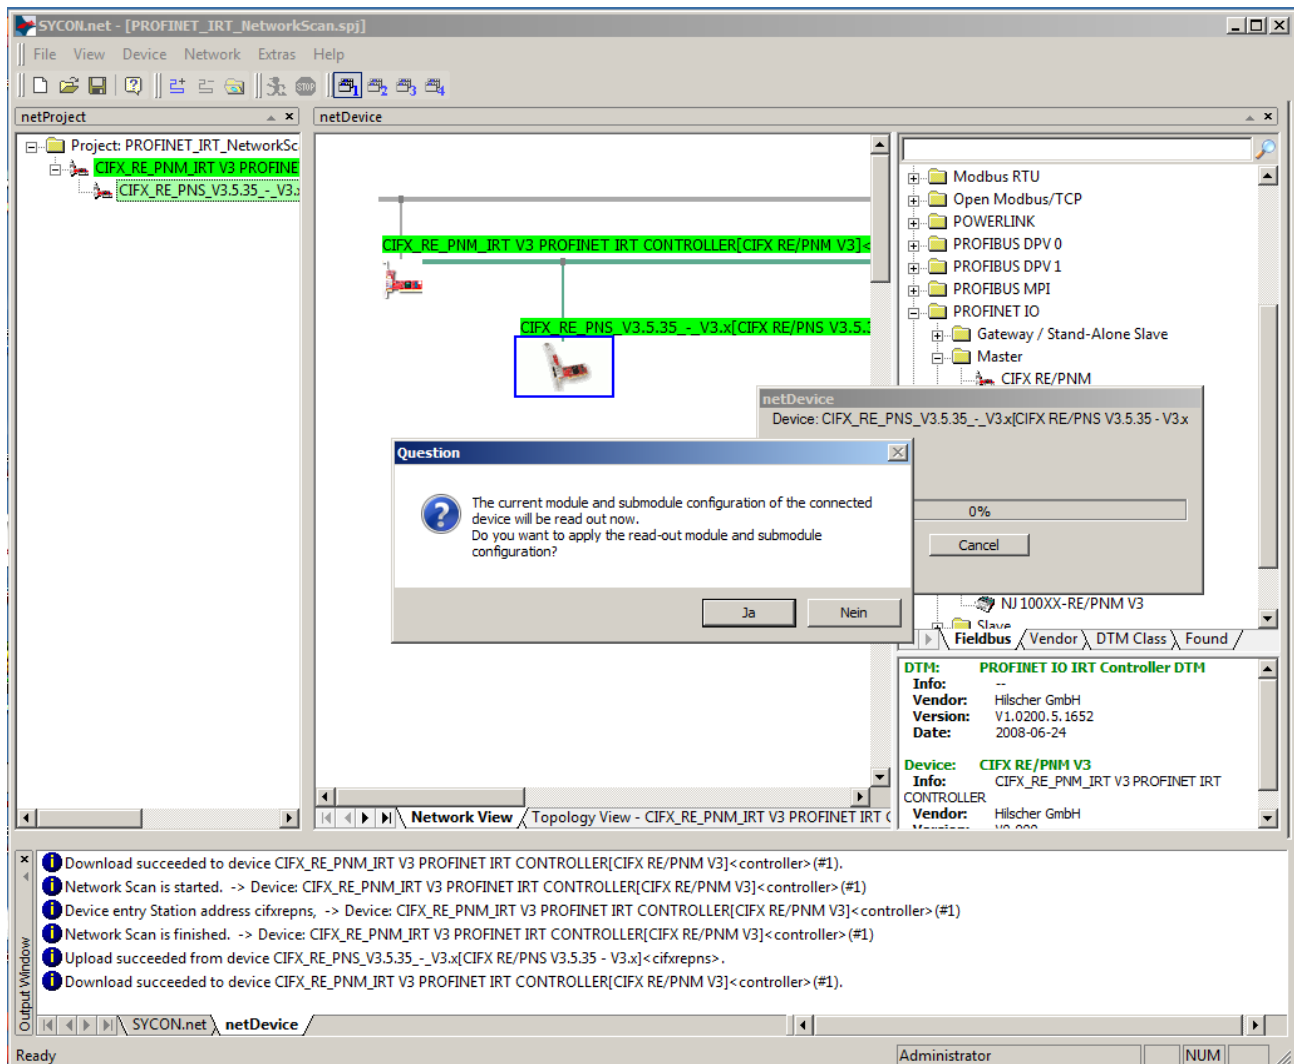


Figure 85: Query for generating the module configuration (Example)

- Click “Yes”.
- For the Device its current configuration is uploaded via the Controller device and the Controller DTM to the Device DTM.
- The successful progress for the upload procedure is reported in the output window.



Note: If you start the **Upload** function and you have not yet assigned the IP address to a reinstalled Device, you will receive the following error message: **Upload failed from device**. For further information on this, refer to section *Upload failed from device* on page 124.

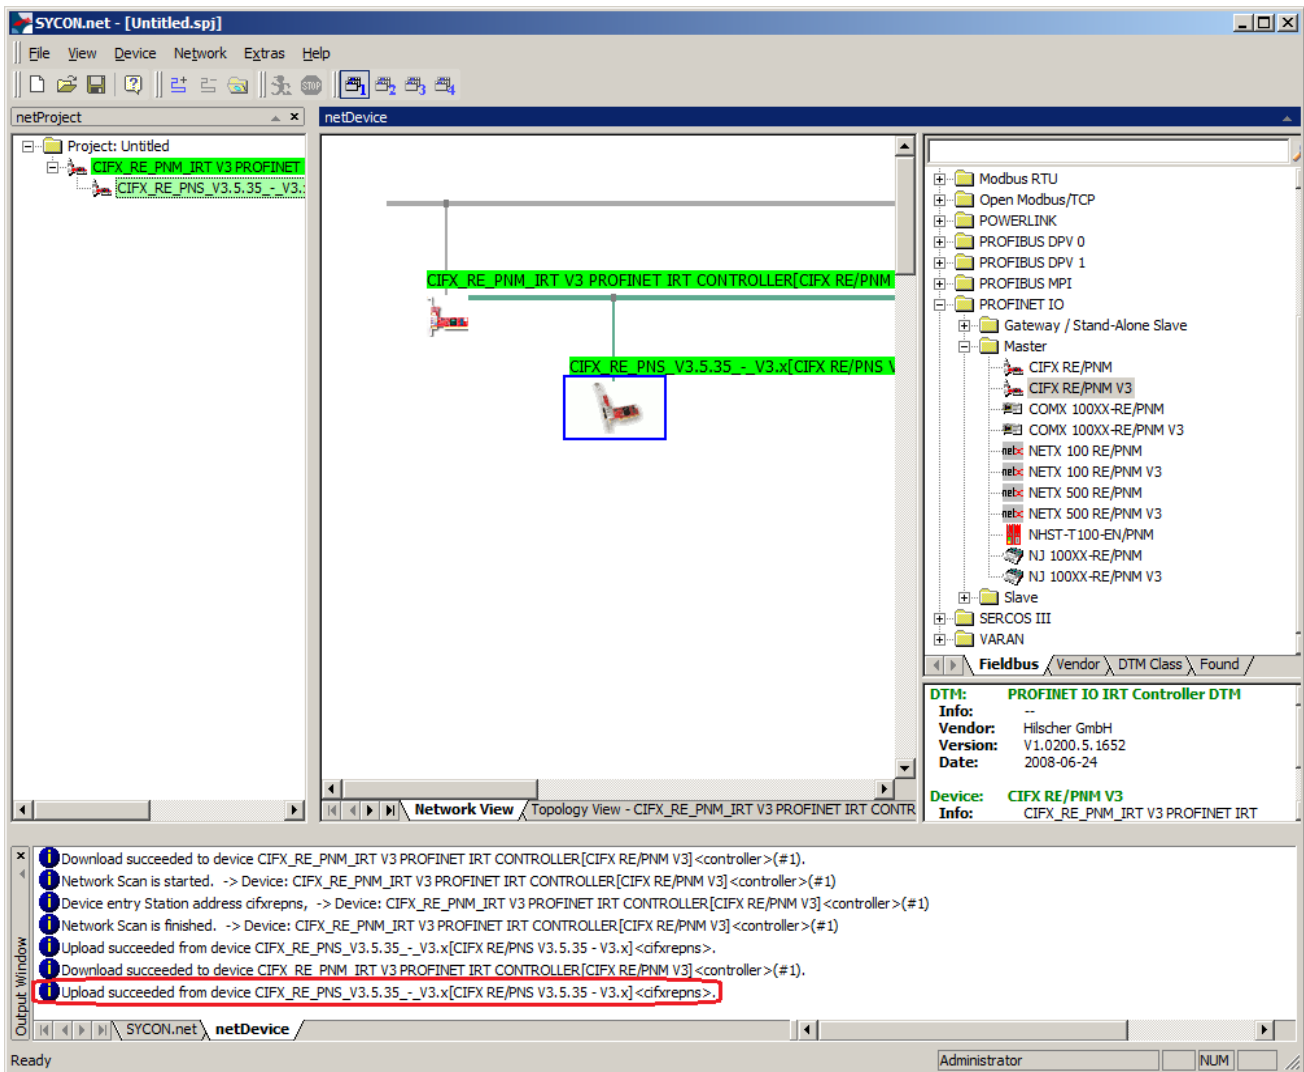


Figure 86: Upload succeeded (Example)

After the module configuration of the PROFINET IO-Device has been created, you can display the uploaded modules by double-clicking the Device symbol.

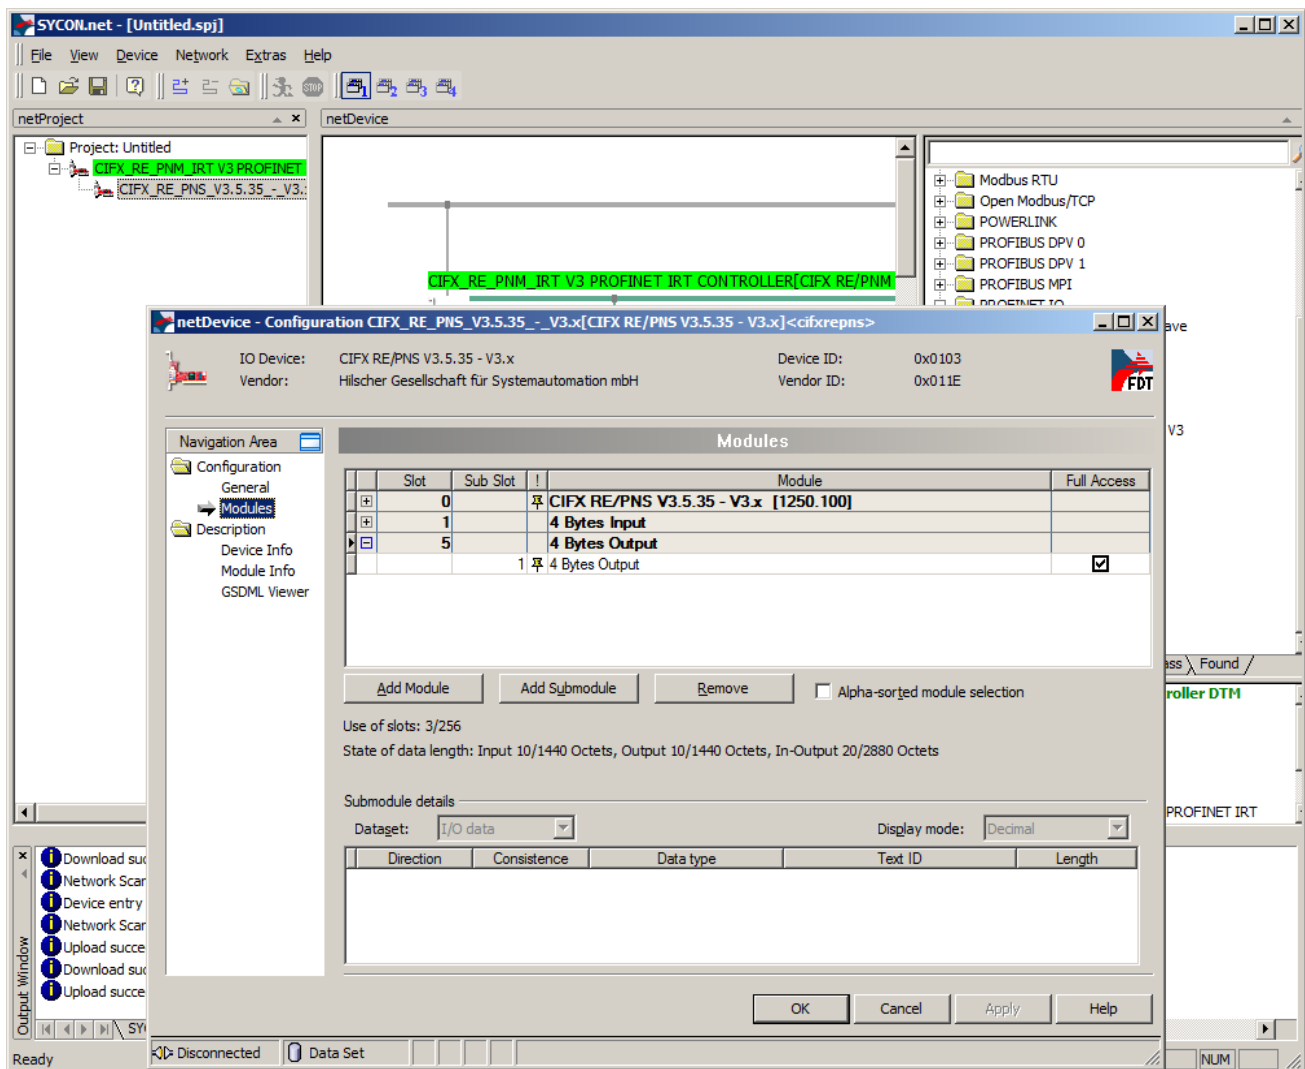


Figure 87: Uploaded Modules (Example)

6.2.7 Download to the PROFINET IO-Controller Device



Adhere to the necessary safety precautions to prevent personnel injury and property damage. For more refer to section *Safety Messages on Firmware or Configuration Download* on page 28.

6. Use the **Download** function of the Controller DTM to download the device configuration of the Device devices to the Controller device.

- In netDevice: right-click on the device symbol of the PROFINET IO-Controller DTM.
- Select **Download** from the context menu.
- The Dialog **netDevice - Download** appears:
If you attempt to download during bus operation, communication between master and slaves is stopped.
Do you really want to download?
- Click **Yes**.
- The dialog **netDevice** appears showing the progress bar **Download active, device performs initialisation...**
- The **netDevice** window shows the message (example): **Download succeeded to device CFX_RE_PNM[CFX RE/PNM]<>(# 1).**

6.2.8 Upload failed from device

- If you start the **Upload** function and you have not yet assigned the IP address to a reinstalled Device, you receive the following error message: **Upload failed from device** *Symbolic Name of the Device* [Device Description] <Device Address> You might find additional information in the output window.

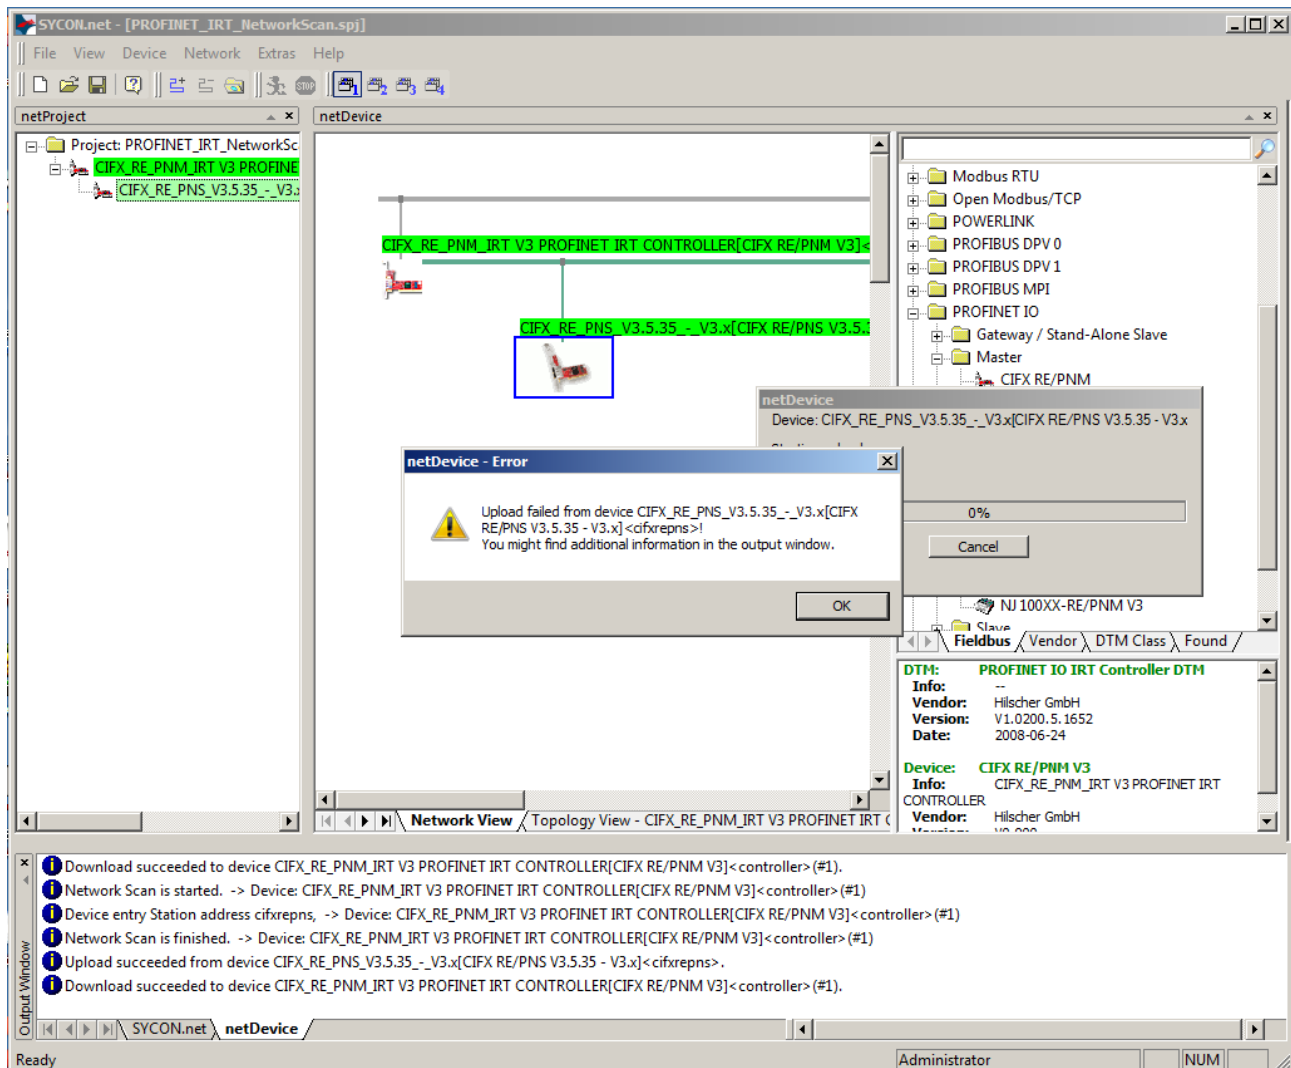


Figure 88: Upload failed from device (Example)

- In this case assign the IP settings.
- Then download the current configuration to the Controller device and
- restart the **Upload** function.

6.3 Download Configuration

The device configuration is created *offline* in the DTM (application program). A download to the device is required, to transfer the configuration with the parameter data to the device.



Note: To download configuration parameter data to the PROFINET IO-Controller device an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device is required. Further information can be found in the *Connecting/Disconnecting Device* section on page 109.

Safety Precautions

If you plan to perform a configuration download via the PROFINET IO-Controller DTM be aware of the following:

⚠ WARNING

Communication Stop due to Configuration Download, Faulty System Operation possible or Loss of Device Parameters

Before you initiate a configuration download process, while the bus is still in operation status:

- Stop the application program.
- Make sure that all network devices are placed in a fail-safe condition.

⚠ WARNING

Mismatching System Configuration, faulty System or Device Operation possible

- In the device use only a configuration suitable for the system.

NOTICE

Loss of Parameters caused by Power Disconnect during Configuration Download

- During configuration download process, do not interrupt the power supply to the PC, or to the device and do not perform a reset to the device!

For more see next page.

Download Steps

To transfer the configuration with the corresponding parameter data to the PROFINET IO-Controller device you download the data using the frame application of the configuration software.

For netDevice the download is made via **Device > Download** or use the context menu with **Download**.

1. Select **Download** in the context menu of the device.

⇒ If the download is started as long as the Slave devices are connected to the Master device, the following message is displayed: 'If you attempt to download during bus operation, communication between Master and Slaves is stopped. Do you really want to download?'

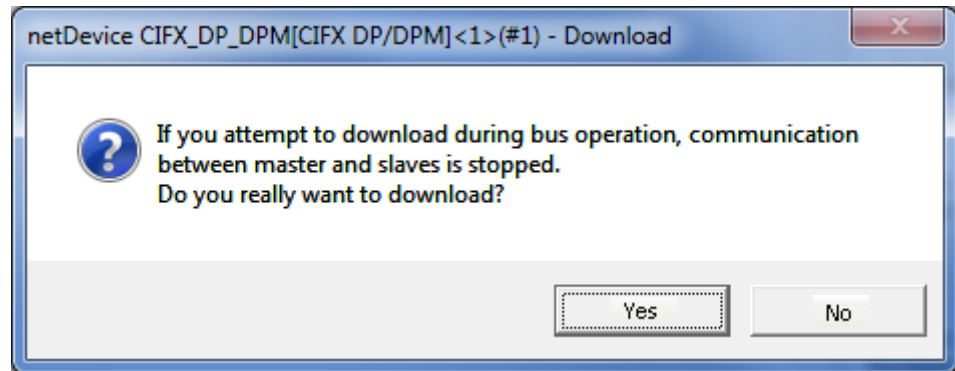


Figure 89: netDevice Message: Download



Important: If the communication between the Master and the Slave devices is stopped, the data exchange between the Master device and the Slave devices is stopped.

2. Click to **Yes** if you intend to download the configuration.

⇒ Then the current configuration in the application program is downloaded to the device.

3. Otherwise click to **No**.

6.4 Start /Stop Communication

You can manually start or stop the communication between a PROFINET IO-Controller device and PROFINET IO-Device devices.

- **Start Communication** can be enabled if the communication was stopped before or if the configuration requires this (Controlled release of communication).
 - **Stop Communication** can be enabled if the communication was started.
- To start or to stop the communication, proceed as follows:

Start Communication

1. Connecting device:



Note: To start the communication of the device at the bus manually, an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device is required. Further information can be found in the *Connecting/Disconnecting Device* section on page 109.

2. Select **Additional Functions > Service > Start Communication** from the context menu (right mouse click).
- The device communicates at the bus.

Stop Communication

WARNING

Faulty System Operation possible, Overwriting of Firmware or Loss of Device Parameters

Before you stop the communication:

- Stop the application program.
 - Make sure that all network devices are placed in a fail-safe condition.
1. Select **Additional Functions > Service > Stop Communication** from the context menu (right mouse click).
- The communication of the device at the bus is stopped.

6.5 Licenses

Using the license dialog, you can order licenses for **Master protocols** or **Utilities** and download them to your device.

6.5.1 Open License Dialog

You first open the **License** window.



Note: You first need to assign the Controller device to the DTM. Only then, the device data and the licenses already present in the device are displayed in the **License** dialog.

How to proceed:

A.) Assigning the Controller device to the DTM

1. Open the DTM configuration dialog.
 - In the FDT container **netDevice** double click to the device icon.
2. Select one or several drivers.
 - Select **Settings > Driver**.
 - Check the drivers.
3. Configure the driver if necessary.
 - Select **Settings > Driver > [Name of the assigned driver]**.
 - Configure the driver settings.
4. Scan for and select the devices.
 - Select **Settings > Device Assignment**.
 - Under **Device selection** select *suitable only* or *all* and then **Scan**.
 - In the table, check the required devices.
 - Select **Apply**.
5. Close the DTM configuration dialog via **OK**.



For details to the device assignment, refer to section *Device Assignment* in this manual.

B.) Open the License pane

- In the FDT container **netDevice** right click to the device icon.
- From the context menu select **Additional Functions > License**.
- The **License pane** opens.

6.5.2 License Dialog

In the **License**¹ pane you can:

- check, which licenses for Master protocols or Utilities are present in the device (Position ① in the figure below),
- order licenses (Positions ② to ⑪),
- transfer licenses to the device ⑫.

License Type

	Existing	Order
Master protocols		
One General Master License	NO	<input type="checkbox"/>
Two General Master Licenses	NO	<input type="checkbox"/>
PROFIBUS Master	YES	<input type="checkbox"/>
CANopen Master	YES	<input type="checkbox"/>
DeviceNet Master	YES	<input type="checkbox"/>
AS-Interface Master	YES	<input type="checkbox"/>
PROFINET IO RT Controller	YES	<input type="checkbox"/>

Request Form, please fill out

Name	Value
License type	User Single Device License
Manufacturer*	0x0001
Article number*	1251100
Serial number*	20007
Chiptype*	0x00000001
Step*	0x00000000
Romcode revision*	0x00000000

Fields marked with "*" are mandatory.

Buttons: ④, ⑤ E-mail..., ⑥ Print Fax Form..., ⑦ Telephone..., ⑧ Export License Request..., ⑨, ⑩, ⑪, ⑫ Download License, Close, Help

Figure 90: License Pane



Note: To display further entries under **License Type**, move the scroll box ① downwards or upwards. To display further entries under **Request Form, please fill out**, move the scroll box ② downwards or upwards.

¹ The title bar contains the notation of the **device description**:
Symbolic Name [Device Description] <Station Address> (#Network ID).

6.5.3 Which Licenses are present in the Device?

Check, which licenses are present in the device.

How to proceed:

- Open the **License** pane as described.



Figure 91: License Pane - License Type

- Under **License Type** click at **Master protocols**.

➤ The **Master protocols** overview opens:

	Existing	Order
One General Master License	NO	<input type="checkbox"/>
Two General Master Licenses	NO	<input type="checkbox"/>
PROFIBUS Master	YES	<input type="checkbox"/>
CANopen Master	YES	<input type="checkbox"/>
DeviceNet Master	YES	<input type="checkbox"/>
AS-Interface Master	YES	<input type="checkbox"/>
PROFINET IO RT Controller	YES	<input type="checkbox"/>

Figure 92: License Pane – License Type / Master protocols

- Or click at **Utilities**.

➤ The **Utilities** overview opens:

	Existing	Order
OPC Server	NO	<input type="checkbox"/>
SYCON.net	NO	<input type="checkbox"/>
QVis Minimum Size	NO	<input type="checkbox"/>
QVis Standard Size	NO	<input type="checkbox"/>
QVis Maximum Size	NO	<input type="checkbox"/>
CoDeSys Minimum Size	NO	<input type="checkbox"/>

Figure 93: License Pane – License Type / Utilities

➤ The column **Existing** indicates which licenses are present in the device.

Yes = License is present in the device.

No = License is not present in the device.



Note: In newer versions of the present configuration software under **License Type** may be displayed additional licenses or other protocols that can be ordered later.

6.5.3.1 License for Master Protocols

One General Master License:

On the device maximally 1 communication protocol with master function can be implemented.

Two General Master Licenses:

On the device maximally 2 communication protocols with master function can be implemented.

The license includes the following Master protocols:

- AS-Interface Master
- CANopen Master
- DeviceNet Master
- EtherCat Master
- EtherNet/IP Scanner
- PROFIBUS Master
- PROFINET IO RT Controller
- Sercos Master

6.5.3.2 License for Utilities

- SYCON.net
- OPC Server
- QVis Minimum Size
- QVis Standard Size
- QVis Maximum Size
- CoDeSys Minimum Size
- CoDeSys Standard Size
- CoDeSys Maximum Size

For the utilities QVis and CoDeSys, only one license each may be chosen alternatively as:

- *Minimum Size,*
- *Standard Size or*
- *Maximum Size.*

6.5.4 How to order a License


To order a license, proceed as follows:

	<i>Refer to Section:</i>	<i>Page</i>
1. Open the license dialog.	<i>Open License Dialog</i>	128
2. Select the required licenses.	<i>Selecting License</i>	132
3. Enter the ordering data.	<i>Ordering Data</i>	133
4. Place your order.	<i>Ordering the License</i>	135


6.5.5 Selecting License(s)

You can select licenses for Master protocols and / or utilities.

1. Selecting license(s) for Master protocol(s):

- Under **License Type** click  at **Master protocols** in the **License** pane.
- Under **Order** check as many licenses must run simultaneously on your device:
One General Master License or
Two General Master Licenses.

2. And/or select license(s) for utility(utilities):

- In the **License** pane under **License Type** click  at **Utilities**.
- Under **Order** check the required utility(utilities) (*single or several*)²:
 - SYCON.net
 - OPC Server
 - QVis Minimum Size*
 - QVis Standard Size*
 - QVis Maximum Size*
 - CoDeSys Minimum Size**
 - CoDeSys Standard Size**
 - CoDeSys Maximum Size**

2 For *) and **) minimum size, standard size or maximum size can be selected only as an alternative.

6.5.6 Ordering Data

1. Device Information

➤ The *Device Information* required for the order are read from the device and automatically filled in the order.

2. Ordering Data

Enter the *Ordering Data* into the **License** pane.

➤ Enter the **Data to manage the Order**.

6.5.6.1 Device Information (Ordering data read from the Device)

The following ordering data are read from the device and displayed in the **License** pane:

- Manufacturer
- Device number
- Serial number
- Chiptype
- Step (chip revision)
- Romcode revision
- Checksum (checksum of the device data)

➤ The gray fields under **Request Form, please fill out** contain the ordering data read from the device:

Request Form, please fill out

Name	Value
Manufacturer*	0x0001
Article number*	1251100
Serial number*	20007
Chiptype*	0x00000001
Step*	0x00000000
Romcode revision*	0x00000000
Checksum*	G

Fields marked with '*' are mandatory.

Figure 94: License Pane - Request Form, please fill out / Device Information

➤ These ordering data read out from the device are displayed automatically from the device.

6.5.6.2 Data to manage the Order (License Information)

For your order you must enter the following data to the **License** pane:

1. License Type (User Single Device License).

Name	Value
License type	User Single Device License

Figure 95: License Pane - Request Form, please fill out / License Type

- Select the license type under **Request Form, please fill out > Value**, (for future application, currently only *User Single Device License* can be selected).
- 2. Mandatory data to the order request (editable fields):
 - First Name
 - Surname
 - E Mail (address, to which the license download link shall be send.)
 - Telephone
 - Company
 - Address
 - Country
 - City, State, Zip

Name	Value
First name*	John
Surname*	Doe
E-Mail*	License@doe.com
Telephone*	0011223344-55
Fax	0011223344-100
Customer number	123456789
Company*	Doe Example LTD

Fields marked with '*' are mandatory.

Figure 96: License Pane - Request Form, please fill out / Mandatory data

- Enter all mandatory fields under **Request Form, please fill out > Value** (marked with*).
- 3. Additional order data, not mandatory (editable fields):
 - Fax
 - Customer Number
 - Order Number
 - Value added tax identification number
- Under **Request Form, please fill out > Value** enter all fields for the additional data, which are not mandatory.

6.5.7 Ordering the License

Place your order in the **License** pane. Therefore:



Figure 97: License Pane – Selecting the Subsidiary / Ordering / Contacts

1. Select the **Subsidiary** (4), to which the order shall be send.
2. Place the order:

- | | <i>Refer to Section:</i> | <i>Page</i> |
|---|---|-------------|
| • by E-Mail (5), | <i>Ordering the License <u>by E Mail</u></i> | 136 |
| • or by Fax (6)
or by Telephone (7), | <i>Ordering the License <u>by Fax or by Telephone</u></i> | 137 |
| • or in a File (8). | <i><u>Exporting License Request to a File</u></i> | 139 |
- The **Contact Data** of the selected subsidiary are displayed under Position (9), (10) and (11).

6.5.7.1 Ordering the License by E Mail

You can place your order by e-mail.



Figure 98: License Pane – placing the order by E-mail

- Click **E-mail...** 5.
- The order E-mail **License request** opens:

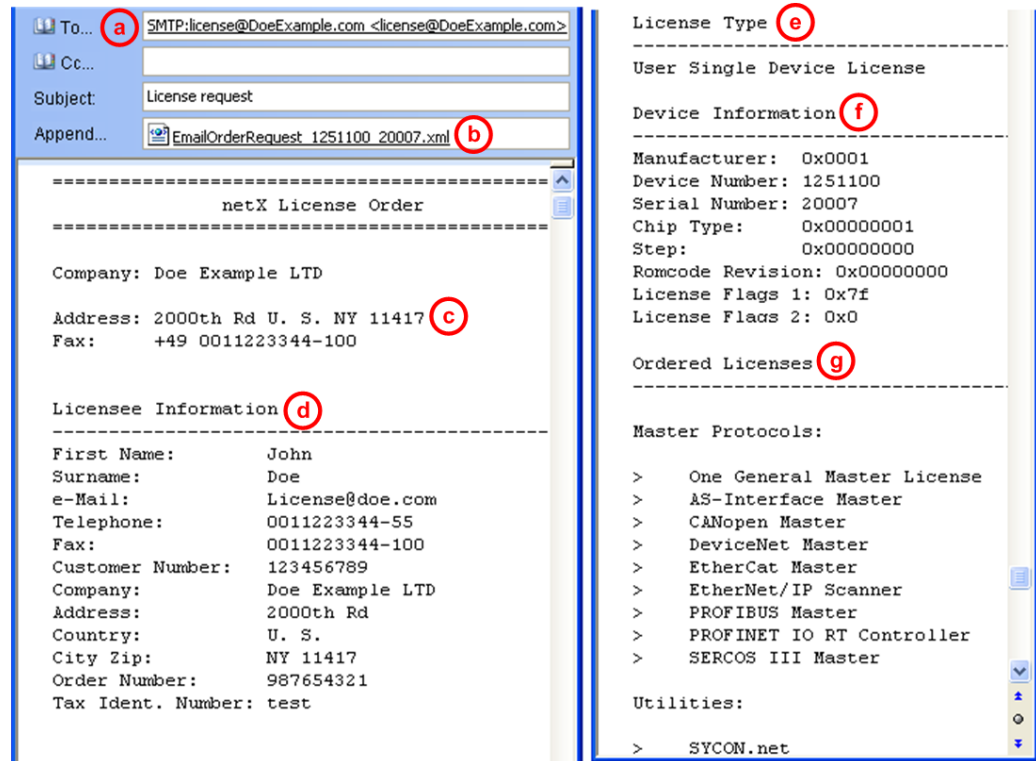


Figure 99: Example: Order E-Mail License request

- The order e-mail **License request** contains:
 - the **E-mail...** of the selected subsidiary a,
 - the automatically generated **XML file** b *EmailOrderRequest_[Devicenumbrer]_[Serialnumber].xml* with a summary info of the **order information**,
 - the **Order Address** c,
 - the **License Information** d,
 - the **License Type** e,
 - the **Device Data** f,
 - the **ordered Licenses** g.
- Send the order e-mail **License request**.
- The order process is complete.

6.5.7.2 Ordering the License by Fax or by Telephone

You can place your order by Fax or by Telephone.



Figure 100: License Pane - placing the order by Fax or by Telephone

- Click **Print Fax Form** ⑥ or **Telephone...** ⑦.
- The summary of the ordering data *PrintOrderRequest_[Devicenum-ber]_[Serialnumber].html* is opened in a browser window.



Note: If your browser does not display the order data or the window **Move Element** or **Copy Element** are displayed, check the safety settings of your system.

netX License Order Form

Doe Example LTD
2000th Rd
NY 11417
U. S.
fax: +11223344-100

Licensee Information ④

<i>First Name:</i>	John
<i>Surname:</i>	Doe
<i>e-Mail:</i>	License@doe.com
<i>Telephone:</i>	0011223344-55
<i>Fax:</i>	0011223344-100
<i>Customer No:</i>	123456789
<i>Company:</i>	Doe Example LTD
<i>Address:</i>	2000th Rd
<i>Country:</i>	U. S.
<i>City Zip:</i>	NY 11417
<i>Order Number:</i>	987654321
<i>Tax Ident. Number:</i>	test

License Type ⑤

User Single Device License

Device Information ⑥

<i>Manufacturer:</i>	0x0001
<i>Device Number:</i>	1251100
<i>Serial Number:</i>	20007
<i>Chip Type:</i>	0x00000001
<i>Step:</i>	0x00000000
<i>Romcode Revision:</i>	0x00000000
<i>License Flags 1:</i>	0x7f
<i>License Flags 2:</i>	0x0

Ordered Licenses ⑧

Master Protocols

- One General Master License
- Sercos III Master

Utilities

- SYCON.net

Date: _____

Signature: _____

Figure 101: Example: Order Data Form PrintOrderRequest

- The order data form contains:
- the **Order Address** ^c,
- the **License Information** ^d,
- the **License Type** ^e,
- the **Device Data** ^f,
- the **ordered Licenses** ^g.
- Print the order data form, sign it and send it by Fax.



Figure 102: License Pane – Fax Number of the selected Subsidiary

- Use the Fax number ¹⁰, which is displayed after the subsidiary was selected in the **License** pane.

Or:

- Keep ready the order data form and communicate the order data via telephone.

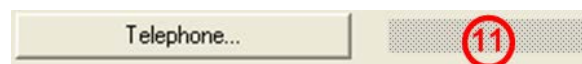


Figure 103: License Pane – Telephone Number of the selected Subsidiary

- Use the telephone number ¹¹, which is displayed after the subsidiary was selected in the **License** pane.
- The order process is complete.

6.5.7.3 Exporting License Request to a File

If you are working on a process computer without an e-mail client, you can export your order information to a file, save the file to a removable disk and place your order manually via e-mail from a different PC.



Figure 104: License Pane - Ordering by exported File and E-Mail

- Click **Export License Request...** 8.
- The window **Browse For Folder** is displayed.
- Choose for or create a new folder on a removable disk.
- Save the automatically generated **XML file** *EmailOrderRequest_- [Devicenumbr]_[Serialnumber].xml* with a summary info of the **order information** to this folder.
- Send this file from a PC with an e-mail client manually via e-mail.
- Therefore, use an e-mail address, which is displayed after the subsidiary was selected in the **License** pane (see Position 9 Figure *License Pane*).
- The order process is complete.

6.5.8 How to get the License and transfer it to the Device



Note: License files can only be delivered via e-mail. The e-mail contains a link to download the license file.

According to the license you ordered, you will receive an e-mail containing a **Link to download the License File**. This leads to a server PC on which the license file is provided. Using the received link you will have to save the license file on your PC and then transfer the license to your device. If your e-mail client is on another PC as your device, you must save your license file e. g. to an USB stick.

Steps how to proceed


1. Save the license file to a PC or a disk.
 - Click to the **Link to download the License File** in the e-mail.
 - Save the license file *.nxl to a PC or a removable disk.
2. Download the license file to the device.
 - Respectively connect the removable disk with the license file to the PC, which is connected to your device.
 - Click **Download License**  in the **License** pane in the configuration software.



Figure 105: License Pane - Download License

- The File selection window **Open** is displayed.
 - Therein select the license file *netX License Files (*.nxl)*.
 - Click **Open**.
 - The license file is transferred to the device.
 - After this the license is present in the device and is activated with the next device reset.
3. Activate Device Reset



Hint: To activate the license in the first device, a device reset is required.

- To check whether the license has been activated, follow the steps in section *Which Licenses are present in the Device?*

7 Diagnosis

7.1 Overview Diagnosis

The dialog **Diagnosis** serves to diagnose the device behavior and communication errors. For diagnosis the device must reside in online state.

Diagnosis Panes

The table below gives an overview for the individual **Diagnosis** dialog panes descriptions:

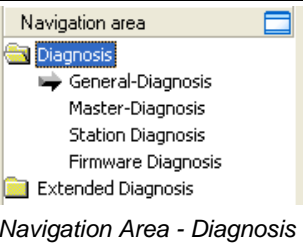
PROFINET IO-Controller DTM	Folder Name / Section	Manual Page
	<i>General Diagnosis</i>	142
	<i>Master Diagnosis</i>	144
	<i>Station Diagnosis</i>	145
	<i>Firmware Diagnosis</i>	146

Table 30: Descriptions of the Diagnosis Panes

Online Connection to the Device



Note: Accessing the **Diagnosis** panes of the PROFINET IO Controller DTM requires an online connection from the PROFINET IO Controller DTM to the PROFINET IO Controller device. For further information refer to section *Connecting/Disconnecting Device* on page 109.

How to proceed

1. In the Controller DTM diagnosis dialog check whether the communication is OK:

Diagnosis > General Diagnosis > Device status "Communication" must be green!

2. **"Communication"** is green: Open the **IO Monitor** and test the input or output data..
3. **"Communication"** is not green: Use **Diagnosis** and **Extended diagnosis** for troubleshooting.

Extended Diagnosis

The **Extended Diagnosis** helps to find communication and configuration errors, when default diagnosis fails. For further information refer to section *Overview Extended Diagnosis* on page 147.

7.2 General Diagnosis

Information regarding the Device State and other general diagnosis parameters are displayed in the **General Diagnosis** dialog.

General Diagnosis

Device state

- ☐ Communication
- ☒ Run
- ☐ Ready
- ☐ Error

Network state

- ☒ Operate
- ☐ Idle
- ☐ Stop
- ☐ Offline

Configuration state













- ☐ Configuration locked
- ☐ New configuration pending
- ☐ Reset required
- ☒ Bus ON

Communication error:

Watchdog time:

Error count:

Figure 106: General Diagnosis

LED	Meaning	Color	State
Device State			
Communication	Shows whether the PROFINET IO device executes the network communication.	 (green)	In COMMUNICATION state
		 (gray)	Not in COMMUNICATION state
Run	Shows whether the PROFINET IO device has been configured correctly.	 (green)	Configuration OK
		 (gray)	Configuration not OK
Ready	Shows whether the PROFINET IO device has been started correctly. The PROFINET IO device waits for a configuration.	 (yellow)	Device READY
		 (gray)	Device not READY
Error	Shows whether the PROFINET IO device records a device status error. For further information about the error characteristics and the number of counted errors refer to the extended diagnosis.	 (red)	ERROR
		 (gray)	No ERROR
Network State			
Operate	Shows whether the PROFINET IO device is in data exchange. In a cyclic data exchange the input data or the output data of the PROFINET IO Controller are transmitted to the PROFINET IO Device.	 (green)	In OPERATION state
		 (gray)	Not in OPERATION state
Idle	Shows whether the PROFINET IO device is in idle state.	 (yellow)	In IDLE state
		 (gray)	Not in IDLE state













LED	Meaning	Color	State
Stop	Shows whether the PROFINET IO device is in Stop state: There is no cyclic data exchange at the PROFINET IO network. The PROFINET IO device was stopped by the application program or it changed to the Stop state because of a bus error.	 (red)	In STOP state
		 (gray)	Not in STOP state
Offline	The PROFINET IO Controller is offline as long as it does not have a valid configuration.	 (yellow)	In OFFLINE state
		 (gray)	Not in OFFLINE state
Configuration State			
Configuration locked	Shows whether the PROFINET IO device configuration is locked, to avoid the configuration data are typed over.	 (yellow)	Configuration LOCKED
		 (gray)	Configuration not LOCKED
New Configuration pending	Shows whether a new PROFINET IO device configuration is available.	 (yellow)	New Configuration pending
		 (gray)	No new Configuration pending
Reset required	Shows whether a firmware reset is required as a new PROFINET IO device configuration has been loaded into the device.	 (yellow)	RESET required
		 (gray)	No RESET required
Bus ON	Shows whether the bus communication was started or stopped. I. e., whether the device is active on the bus or no bus communication to the device is possible and no response telegrams are sent.	 (green)	Bus ON
		 (gray)	Bus OFF

Table 31: Indication General Diagnosis

Parameter	Meaning
Communication Error	Shows the name of the communication error. If the cause of error is resolved, the value will be set to zero again.
Watchdog time	Shows the watchdog time in ms.
Error Count	This field holds the total number of errors detected since power-up, respectively after reset. The protocol stack counts all sorts of errors in this field no matter whether they were network related or caused internally.

Table 32: Parameter General Diagnosis

7.3 Master Diagnosis



Note: The PROFINET IO specification defines the designations "Controller" instead of "Master" and "Device" instead of "Slave". The master diagnosis is a general diagnostic function by the configuration software and therefore uses the designations "Master" and "Slave".

Information regarding the Slave State, slave errors and slaves configured, active or in diagnostic are displayed in the **Master Diagnosis** dialog.

Master Diagnosis	
Slave state	failed
Slave error log indicator	available
Configured slaves	2
Active slaves	0
Slaves with diagnostic	2

Figure 107: Master Diagnosis

Parameter	Meaning	Range of Value / Default Value
Slave state	Shows whether slave state is ok or not. The Slave state field for Master diagnosis shows whether the Master is in cyclic data exchange to all configured slaves. In case there is at least one slave missing or if the slave has a diagnostic request pending, the status will be set to FAILED. For protocols that support non-cyclic communication only, the slave state is set to OK as soon as a valid configuration is found.	UNDEFINED, OK, FAILED
Slave error log indicator	Shows whether the Slave Error Log Indicator is available. The error log indicator field holds the number of entries in the internal error log. If all entries are read from the log, the field will be set to zero.	EMPTY, AVAILABLE
Configured slaves	Shows number of configured slaves. Number of configured slaves in the network according to the slave list derived from the configuration database created by the configuration software. The list includes the slaves to which the Master has to open a connection.	
Active slaves	Shows number of active slaves. Number of slaves in data exchange mode. The list includes the slaves to which the Master has successfully opened a connection.	
Slaves with diagnostic	Shows number of slaves with diagnostic. Number of Slaves with diagnosis or error slaves.	

Table 33: Parameter Master Diagnosis

7.4 Station Diagnosis

In the Station diagnosis all disposal PROFINET stations (1 ... 128) and their states are shown. If the device is connected, the DTM will update this display cyclically.

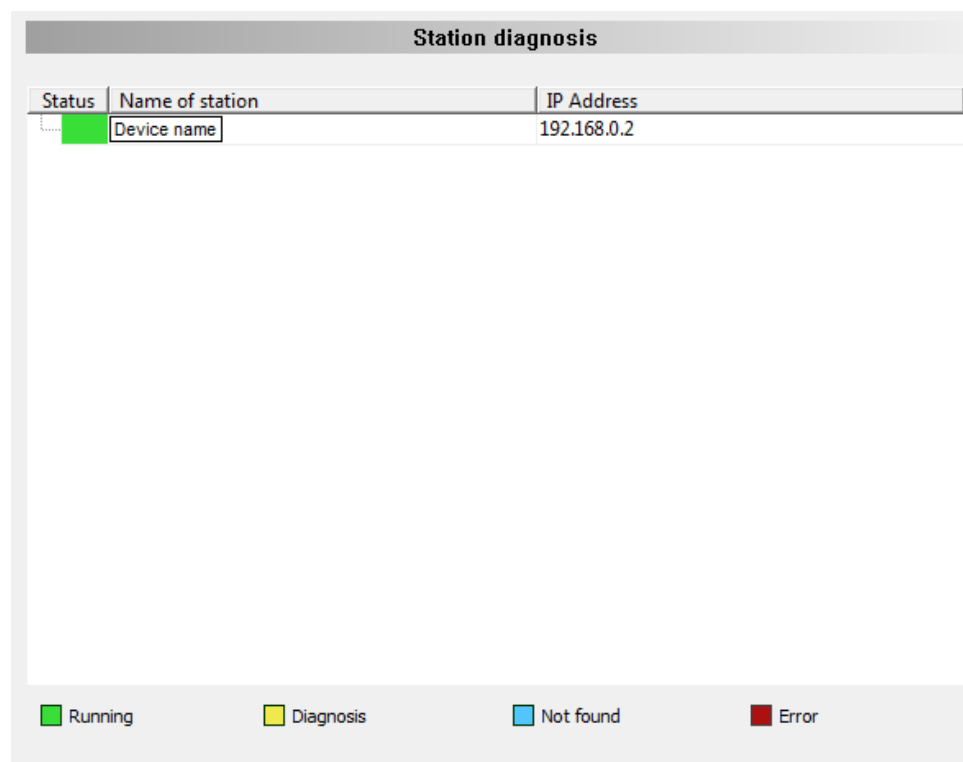


Figure 108: Station diagnosis

Parameter	Meaning	Range of Value / Default Value
Status	Indication of whether the device connected to this station address is running, whether diagnostic data are pending, whether the device was not found or whether there is an error message for this device.	Running, Diagnosis, Not found, Error
Name of stations	Network name of the PROFINET IO-Device station.	1 - 240 characters
IP Address	The IP address of the PROFINET IO-Device station. If the device was not found, or if a diagnosis or an error message for the device is pending, no IP address appears.	Valid IP address

Table 34: Parameters for Station diagnosis

The legend below describes the possible values for the state of a device, which is assigned to a station address.

Color	Name	Meaning
green	Running	The device associated with this station address is running.
yellow	Diagnosis	Diagnosis is available for the device associated with this station address.
blue	Not found	The device associated with this station address was parameterized, but not found.
red	Error	An error message is available for the device associated with this station address. For the status, 'error' additionally a textual error messages can appear.

Table 35: Possible Values for the Status

7.5 Firmware Diagnosis

In the dialog **Firmware Diagnosis** the current task information of the firmware is displayed.

Under **Firmware** or **Version** the name of the firmware and version (including the date) are indicated.

Firmware Diagnosis

Firmware:

PROFINET IO Controller

Version:

2.6.0 (Build 5)

Date:

3.2.2012

Task information:

Task	Name of task	Version	Prio...	Description	State
0	RX_IDLE	1.0	63	RX IDLE Task.	Task Status ok. (0x00000000)
1	RX_TIMER	1.0	1	rcX Timer.	Task Status ok. (0x00000000)
2	RX_SYSTEM	1.16	32	Middleware Syste...	Task Status ok. (0x00000000)
3	DPM_COMO...	1.0	50	TLR-Router DPM.	Task Status ok. (0x00000000)
4	DPM_COMO...	1.0	51	TLR-Router DPM.	Task Status ok. (0x00000000)
5	TlrTimer	0.0	17	The task identifier ...	Task Status ok. (0x00000000)
6	MARSHALLER	2.0	59	Marshaller: Main T...	Task Status ok. (0x00000000)
7	T_PNIO_EDD	1.0	16	PROFINET IO EDD...	Task Status ok. (0x00000000)
8	T_PNIO_ACP	1.0	18	PROFINET IO ACP...	Task Status ok. (0x00000000)
9	T_PNIO_DCP	1.0	19	PROFINET IO DCP...	Task Status ok. (0x00000000)
10	T_PNIO_MGT	1.0	20	PROFINET IO Man...	Task Status ok. (0x00000000)
11	TCP_UDP	2.16	21	TCPUDP task (TCP...	Task Status ok. (0x00000000)
12	T_RPC	4.0	22	RPC Task.	Task Status ok. (0x00000000)
13	T_PNIO_CM...	1.0	23	PROFINET IO-Con...	Task Status ok. (0x00000000)
14	T_PNIO_AP...	1.0	24	PROFINET IO-Con...	Task Status ok. (0x00000000)
15	T_PNIO_AP...	1.0	25	PROFINET IO-Con...	Task Status ok. (0x00000000)
16	SNMP-Server	4.1	29	SNMP Server Task.	Task Status ok. (0x00000000)
17	Mib-Database	4.1	30	MIB Database for ...	Task Status ok. (0x00000000)
18	LLDP-Task	4.2	27	LLDP protocol task	Task Status ok. (0x00000000)
19	PACKET_RO...	2.0	60	Marshaller: Packet...	Task Status ok. (0x00000000)

Figure 109: Firmware Diagnosis (Example)

Task Information:

The table **Task Information** is listing the task information of the single firmware tasks.

Column	Meaning
Task	Task number
Name of task	Name of the task
Version	Version number of the task
Prio	Priority of the task
Description	Description of the task
Status	Current status of the task

Table 36: Description Table Task Information

8 Extended Diagnosis

8.1 Overview Extended Diagnosis

The **Extended Diagnosis** of the PROFINET IO-Controller DTM helps to find communication and configuration errors. Therefore it contains a list of diagnosis structures as online counter, states and parameters.

Dialog Panes “Extended Diagnosis”

The table below gives an overview for the **Extended Diagnosis** dialog panes descriptions:

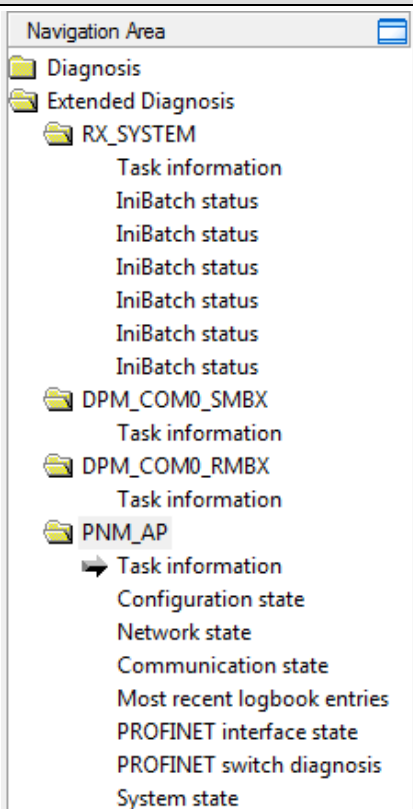
PROFINET IO-Controller DTM	Folder Name in the Navigation Area	Dialog Pane	Manual Page
 Navigation Area - Extended Diagnosis	RX-SYSTEM	Task Information	148
		IniBatch Status	149
	DPM_COMO_SMBX	Task Information	148
	DPM_COMO_RMBX	Task Information	148
	MARSHALLER	Task Information	148
	PNM_AP	Task Information	148
		Configuration Stat	150
		Network State	151
		Communication State	152
		Most recent Logbook Entries	153
		PROFINET Interface State	154
		PROFINET Switch Diagnosis	155
		System State	155

Table 37: Descriptions of the Dialog Panes Extended Diagnosis

Online Connection to the Device



Note: Accessing the **Extended Diagnosis** dialog panes of the PROFINET IO-Controller DTM requires an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device. For further information refer to section *Connecting/Disconnecting Device* on page 109.

8.2 Task Information

Task information		
Task states		
Name	Value	
Identifier	0x00010001	Example The displayed values depend from the corresponding task.
Major version	1	
Minor version	16	
Maximum packet size	2048	
Default queue	0x80064F00	
Unique identifier	{00000001-0001-0003-0000-000000000000}	
Init result	0	

Figure 110: Extended Diagnosis > [Folder Name] > Task Information Example Display

Name	Description
Identifier	Identification number of the task
Major version	Task version, contains incompatible changes
Minor version	Task version, contains compatible changes
Maximum packet size	Maximum packet size, which the task sends
Default queue	Queue handle, which is accessible via DPM by mailbox.
UUID	Unique user ID, 16 Byte indicator used for task identification and its affiliation e. g. to a stack (therein different identification data are coded in).
Init result	Error Code, 0= no Error The description of the error codes can be found in this manual or in the corresponding software reference manuals.

Table 38: Extended Diagnosis > [Folder Name] > Task Information

8.3 IniBatch Status

IniBatch status	
Task states	
Name	Value
Communication channel	0
Current state	Error
IniBatch result	No DBM file
Open DBM result	0x00006201
Send packet result	0x00000000
Confirmation result	0x00000000
Last packet number	0
Last packet command	0x00000000
Last packet length	0
Last packet destination	0x00000000

Figure 111: Extended Diagnosis > [Folder Name] > IniBatch Status Example Display

Name	Description
Communication channel	Number of the communication channel used by the device.
Current state	Idle; IniBatch packets in progress; Retrying to send last packet; Error
IniBatch result	Ok; No DBM file; No packet table; No data set available; Data set is shorter than packet length; Packet buffer is shorter than packet length; Invalid packet destination; Logical queue not defined Send packet failed; Too many retries; Error in confirmation packet status
Open DBM result	Error when opening the IniBatch data base Under "Open DBM result" the error code is typed in, when "IniBatch result" == "No DBM file" (1) is.
Send packet result	Error when sending a packet Under "Send packet result" the error code is typed in, when "IniBatch result" == "send packet failed" (8) is.
Confirmation result	Confirmation error when sending packets Under "Confirmation result" the packet specific error code from the ulSta is typed in, when "IniBatch result" == "Error in confirmation packet status" (10) is.
Last packet number	Value depends by the communication system.
Last packet command	Value depends by the communication system.
Last packet length	Value depends by the communication system.
Last packet destination	Value depends by the communication system.

Table 39: Extended Diagnosis > [Folder Name] > IniBatch Status

The task status "Confirmation result" is bus specific. The other task states are rcx-related error codes.

8.4 PNM_AP

8.4.1 Configuration State

Configuration state	
Task states	
Name	Value
Last configuration error code	0x00000000
Handle of element with configuration error	0
Configuration state of device handle 1	Configured for RT
Configuration state of device handle 2	Not configured
Configuration state of device handle 3	Not configured
Configuration state of device handle 4	Not configured
Configuration state of device handle 5	Not configured
Configuration state of device handle 6	Not configured
Configuration state of device handle 7	Not configured
Configuration state of device handle 8	Not configured
Configuration state of device handle 9	Not configured
Configuration state of device handle 10	Not configured
Configuration state of device handle 11	Not configured
Configuration state of device handle 12	Not configured
Configuration state of device handle 13	Not configured
Configuration state of device handle 14	Not configured
Configuration state of device handle 15	Not configured
Configuration state of device handle 16	Not configured
Configuration state of device handle 17	Not configured
Configuration state of device handle 18	Not configured
Configuration state of device handle 19	Not configured
Configuration state of device handle 20	Not configured
Configuration state of device handle 21	Not configured
Configuration state of device handle 22	Not configured
Configuration state of device handle 23	Not configured
Configuration state of device handle 24	Not configured
Configuration state of device handle 25	Not configured
Configuration state of device handle 26	Not configured
Configuration state of device handle 27	Not configured
Configuration state of device handle 28	Not configured
Configuration state of device handle 29	Not configured

Figure 112: Extended Diagnosis > PNM_AP > Configuration State

For each Slave device (1 to 128) possible in the PROFINET network a device handle is passed to the firmware, including information about the Slave configuration status.

Name	Meaning	Range of Value / Default Value
Last configuration error code	Error code indicating which error occurred in the last misconfigured device handle.	Refer to chapter <i>Error codes</i>
Handle of element with configuration error	Displays the station address of the PROFINET IO-IRT-Device that was detected at last as faulty configured.	1 ... 128
Configuration state of device handle [1 ... 128]	Each device handle passes, the information to the firmware, whether a Slave is configured for RT or IRT. Also an information is passed when a Slave is not available or if no Slave has been configured (not configured) or when the Slave has been switched off.	Not available, Not configured, Deactivated, Configured for RT, Configured for IRT

Table 40: Extended Diagnosis > PNM_AP > Configuration State

The displayed device handles match to the file handles of the acyclic services. A file handle is an addressing of file operations.

8.4.2 Network State

Network state	
Task states	
Name	Value
Name of station	controller
IP address	192.168.0.1
IP network mask	255.255.255.0
IP gateway address	0.0.0.0
Bus state	On
Address conflict detection	No conflict
Conflicting Name of station MAC address	00-00-00-00-00-00
Conflicting IP MAC address	00-00-00-00-00-00

Figure 113: Extended Diagnosis > PNM_AP > Network State

Name	Meaning	Range of Value / Default Value
Name of station	Network name of the PROFINET IO-Device station.	1 - 240 characters
IP address	IP address of the PROFINET IO-Device station.	Valid IP address
IP network mask	Network mask of the PROFINET IO-Device station.	Valid IP network mask
IP gateway address	Gateway address of the PROFINET IO-Device station.	Valid IP gateway address
Bus state	Shows the current state on the bus (DPM bus state) for the states if the bus is not in operation (Off), if the communication is started on the bus (Startup), if the bus is in operation (On) and if the communication is stopped and the bus is shut down (shutdown).	Off, Startup, On, Shutdown
Adress conflict detection	The firmware checks in cyclic intervals if a conflict exists and displays the result. Address conflicts can occur for the name of station or the IP address or for both.	No conflict, Name of station conflict, IP adress conflict, Name of station conflict, IP address conflict
Conflicting name of station MAC address	If a name of station conflict is detected, the MAC address of the station with the same name of station is displayed.	00-00-00-00-00-00 ... FF-FF-FF-FF-FF-FF
Conflicting IP MAC address	If an IP address conflict is detected, the MAC address of the station with the same IP address is displayed.	00-00-00-00-00-00 ... FF-FF-FF-FF-FF-FF

Table 41: Extended Diagnosis > PNM_AP > Network State

8.4.3 Communication State

Communication state	
Task states	
Name	Value
Communication state of device handle 1	In data exchange
Communication state of device handle 2	Not configured
Communication state of device handle 3	Not configured
Communication state of device handle 4	Not configured
Communication state of device handle 5	Not configured
Communication state of device handle 6	Not configured
Communication state of device handle 7	Not configured
Communication state of device handle 8	Not configured
Communication state of device handle 9	Not configured
Communication state of device handle 10	Not configured
Communication state of device handle 11	Not configured
Communication state of device handle 12	Not configured
Communication state of device handle 13	Not configured
Communication state of device handle 14	Not configured
Communication state of device handle 15	Not configured
Communication state of device handle 16	Not configured
Communication state of device handle 17	Not configured
Communication state of device handle 18	Not configured
Communication state of device handle 19	Not configured
Communication state of device handle 20	Not configured
Communication state of device handle 21	Not configured
Communication state of device handle 22	Not configured
Communication state of device handle 23	Not configured
Communication state of device handle 24	Not configured
Communication state of device handle 25	Not configured
Communication state of device handle 26	Not configured
Communication state of device handle 27	Not configured
Communication state of device handle 28	Not configured
Communication state of device handle 29	Not configured
Communication state of device handle 30	Not configured
Communication state of device handle 31	Not configured

Figure 114: Extended Diagnosis > PNM_AP > Communication State

Name	Meaning	Range of Value / Default Value
Communication state of device handle [1 ... 128]	Each device handle passes the information to the firmware in which communication state, the respective Slave is.	Not available Not configured Deactivated No link Connecting - Startup Connecting - Parameterization Connecting - Waiting for ready In data exchange In data exchange, Configuration mismatch In data exchange, Diagnosis available In data exchange, Configuration mismatch, Diagnosis available

Table 42: Extended Diagnosis > PNM_AP > Communication State

8.4.4 Most recent Logbook Entries

Most recent logbook entries	
Task states	
Name	Value
Time since device start	4458 seconds
Entry 0 time	4191 seconds
Entry 0 device handle	0x0001
Entry 0 event	Connection established
Entry 0 detail	0x00000000
Entry 1 time	4148 seconds
Entry 1 device handle	0x0000
Entry 1 event	Bus state changed
Entry 1 detail	0x00000002
Entry 2 time	4143 seconds
Entry 2 device handle	0x0000
Entry 2 event	Memory usage
Entry 2 detail	0x002D248C
Entry 3 time	4143 seconds
Entry 3 device handle	0x0000
Entry 3 event	Bus state changed
Entry 3 detail	0x00000001
Entry 4 time	4143 seconds
Entry 4 device handle	0x0000
Entry 4 event	Configuration changed
Entry 4 detail	0x00000002
Entry 5 time	4143 seconds
Entry 5 device handle	0x0000
Entry 5 event	Configuration changed
Entry 5 detail	0x00000001
Entry 6 time	4143 seconds
Entry 6 device handle	0x0000
Entry 6 event	Configuration changed
Entry 6 detail	0x00000000
Entry 7 time	4143 seconds
Entry 7 device handle	0x0000
Entry 7 event	Memory usage
Entry 7 detail	0x00000144

Figure 115: Extended Diagnosis > PNM_AP > Most recent Logbook Entries

In the global logbook general alarms are displayed, such as disconnections. The last 24 history entries are held in a ring buffer. Each entry includes a timestamp, the affected device handle, the event and details about the event in the form of an error code. Moreover, a personal logbook is firmware internally performed for each device.

Name	Meaning	Range of Value / Default Value
Time since device start	Time since boot in seconds.	0 ...
Entry [0 ... 23] time	Intelligent timestamp: Same events are detected. The time stamp is updated.	0 ...
Entry [0 ... 23] device Handle	Affected device handle	0x0001 bis 0x0128
Entry [0 ... 23] event	Possible event type	Unused, Configuration changed, Configuration locked, Low priority alarm, High priority alarm, RPC read failed, Connection not established, Connection established,

Name	Meaning	Range of Value / Default Value
		Memory usage, Connection aborted, Host interface watchdog error, RPC write failed, Bus state changed
Entry [0 ... 23] detail	Error code indicating which error occurred respectively for the events in the logbook.	Refer to chapter error codes. In addition, error codes can be displayed which come directly from the bus. These are 32-bit values described in the PROFINET specification.

Table 43: Extended Diagnosis > PNM_AP > Most recent Logbook Entries

8.4.5 PROFINET Interface State

PROFINET interface state	
Task states	
Name	Value
Local port diagnosis port 1	OK
Remote port diagnosis port 1	OK
RTC3 port state port 1	Off
Local port diagnosis port 2	OK
Remote port diagnosis port 2	OK
RTC3 port state port 2	Off

Figure 116: Extended Diagnosis > PNM_AP > PROFINET Interface State

If the firmware gets neighborhood information by a topology configuration, the PROFINET interface status shows the evaluation of the checks carried out by the PROFINET IO IRT Controller for proximity detection.

Name	Meaning	Range of Value / Default Value
Local port diagnosis port 1 (or 2)	Indicates whether to the appropriate port - an error was detected or - that the port is not connected, - the wrong MAUType or - the wrong cable delay.	OK, No link, Wrong MAUType, Wrong cable delay
Remote port diagnosis port 1 (or 2)	Indicates whether to the corresponding neighboring port - an error was detected or - no or a wrong neighbor station, - the incorrect port or - the wrong MAUType, - the wrong media redundancy domain or - the wrong cable delay.	OK, No peer detected, Wrong peer, Wrong peer port, Wrong MAUType, Wrong MRP domain, Wrong cable delay
RTC3 port state port 1 (or 2)	Displays the RTC3 port state for IRT configurations. In the 'Startup' state, the PROFINET IO-Device devices still send their frames unsynchronized to the PROFINET IO-Controller device.	Off, Up (sending in red), Run (sending and receiving in red)

Table 44: Extended Diagnosis > PNM_AP > PROFINET Interface State

8.4.6 PROFINET Switch Diagnosis

PROFINET switch diagnosis	
Task states	
Name	Value
Received data port 1	92422270 Byte
Sent data port 1	92037674 Byte
Discarded receive data port 1	10 Packets
Discarded send data port 1	0 Packets
Receive errors port 1	0 Packets
Send errors port 1	0 Packets
Received data port 2	0 Byte
Sent data port 2	0 Byte
Discarded receive data port 2	0 Packets
Discarded send data port 2	1402 Packets
Receive errors port 2	0 Packets
Send errors port 2	0 Packets

Figure 117: Extended Diagnosis > PNM_AP > PROFINET Switch Diagnosis

Name	Meaning
[Service]	Diagnosis counter. Indicates the services processed. (The services of the single packets are described in the API manual.)

Table 45: Extended Diagnosis > PNM_AP > PROFINET Switch Diagnosis

8.4.7 System State

System state	
Task states	
Name	Value
Available RAM memory	6938292 Bytes
Used RAM memory	2957796 Bytes
CPU load	6 %

Figure 118: Extended Diagnosis > PNM_AP > System State

The diagnostic system status shows the total available RAM memory and the currently used RAM in bytes as well as the CPU usage in%.

9 Tools

9.1 Overview Tools

Under **Tools** the Packet Monitor and the IO Monitor are provided for test and diagnosis purposes.

Tools Panes

The table below gives an overview for the individual **Tools** dialog panes descriptions:

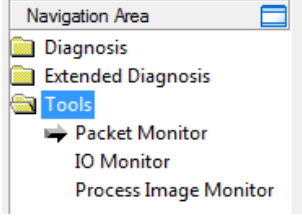
PROFINET IO-Controller DTM	Folder Name / Section	Manual Page
 <i>Navigation Area - Tools</i>	<i>Packet Monitor</i>	157
	<i>IO Monitor</i>	160
	<i>Process Image Monitor</i>	161

Table 46: Descriptions of the Diagnosis Panes

Online Connection to the Device



Note: Accessing the **Tools** dialog panes of the PROFINET IO-Controller DTM requires an online connection from the PROFINET IO-Controller DTM to the PROFINET IO-Controller device. For further information refer to section *Connecting/Disconnecting Device* on page 109.

9.2 Packet Monitor

The **Packet Monitor** serves for test and diagnosis purposes.

Data packets, i. e. messages are self-contained blocks of defined data length. The packets are used to communicate with the firmware and they are exchanged between the application (configuration software) and the firmware in the device. Packets can be sent once or cyclically to the connected device controlled by the user and packets received can be displayed.

Data packets comprise from a **Packet Header** and the **Send Data** or from a **Packet Header** and the **Receive Data**. The packet header can be evaluated by the receiver of the packet and contain the sender and receiver address, the data length, an ID number, status and error messages and the command or response code. The minimum packet size amounts 40 Byte for the packet header. The sending and receiving data are added.



For further information to the packet description refer to the *Protocol API Manual*.

- Open the **Packet Monitor** via **Tools > Packet Monitor**.

Figure 119: Packet Monitor

Display Mode switches the representation of the send and reception data between decimal and hexadecimal.

- Select **Reset Counter** to reset the packet counter.

9.2.1 Sending Packet

Figure 120: Send > Packet Header and Send Data

Packet Header

Under **Send > Packet Header** the elements of the packet header of the sending packet are displayed, which is transmitted from the application (configuration software) to the device. The packet header of the sending packets contain the elements described in the following table.

Element	Description	
Dest	Destination Queue Handle	Contains the identifier of the receiver for the packet (destination task queue of the firmware).
Src	Source Queue Handle	Contains the identifier of the sender of the packet (sending task).
Dest ID	Destination Queue Reference	Contains an identifier for the receiver of unsolicited sent packets from the firmware to the application (configuration software).
Src ID	Source Queue Reference	Contains an identifier of the sender.
Len	Packet Data Length (in Bytes)	Length of the send respectively receive data.
ID	Packet Identification As Unique Number	Identifies identical data packets among each other.
State	Status / Error Code	Transmits status or error codes to the packet sender.
Cmd	Command / Response Code	Command or respond code.
Ext	Extension	Field for extensions (reserved).
Rout	Routing Information	Internal value of the firmware.

Table 47: Descriptions Packet Header

- Under **Dest** select the receiver (*destination task queue*).
- Under **Cmd** select the command identification (*Request*).

Auto Increment ID is an increment for the identifier of the data packets and increments the ID by 1 for each newly sent packet.

Send Data

- Under **Send > Send data** enter the send data of the packet, which shall be transmitted from the application (configuration software) to the mailbox of the device. The meaning of the transmitted data depends on the command or response code.

Sending Packets once or cyclic

- To send packet once, select **Put packet**.
- To send packet cyclic, select **Put cyclic**.

9.2.2 Receiving Packet

The screenshot shows a software interface for receiving packets. On the left, under 'Receive', is the 'Packet header' section with fields for:

- Dest: 00000001
- Src: 00000000
- Dest ID: 00000000
- Src ID: 00000000
- Len: 00000012
- ID: 0000003E
- State: 00000000
- Cmd: 00002F01
- Ext: 00000000
- Rout: 00000000

 On the right, under 'Receive data:', is a table with 10 columns (0-9) and a 'Counter: 0' label. The data is as follows:

	0	1	2	3	4	5	6	7	8	9
0	00	00	00	00	00	00	00	00	00	04
10	00	00	01	00	01	00	00	00		
20										
30										
40										
50										
60										

Figure 121: Packet Header and Receive Data

Packet Header

Under **Receive > Packet Header** the elements of the packet header of the receiving packet are displayed, which are transmitted back from the device to the application (configuration software). The packet header of the receiving packets contain the elements described in the following table.

Element		Description
Dest	Destination Queue Handle	Contains the identifier of the receiver for the packet (destination task queue of the firmware).
Src	Source Queue Handle	Contains the identifier of the sender of the packet (sending task).
Dest ID	Destination Queue Reference	Contains an identifier for the receiver of unsolicited sent packets from the firmware to the application (configuration software).
Src ID	Source Queue Reference	Contains an identifier of the sender.
Len	Packet Data Length (in Bytes)	Length of the send respectively receive data.
ID	Packet Identification As Unique Number	Identifies identical data packets among each other.
State	Status / Error Code	Transmits status or error codes to the packet sender.
Cmd	Command / Response Code	Command or respond code.
Ext	Extension	Field for extensions (reserved).
Rout	Routing Information	Internal value of the firmware.

Table 48: Descriptions Packet Header

Receive Data

Under **Receive > Receive Data** the receiving data of the packet, which is transmitted back from the device to the application (configuration software) are displayed.

9.3 IO Monitor

The **IO Monitor** serves for test and diagnosis purposes. It provides to view data of the process data image and to change output data easily. The display is always in a Byte manner.



Note: Only change and write output data if you know that no plant disturbances are caused by this. All output data written by the IO Monitor are transmitted at the bus and have effect on subordinate drives, IO etc.

IO Monitor

Columns: 10 Display mode: Decimal

Input data

Offset: 0 Go

	0	1	2	3	4	5	6	7	8	9
0	227	207	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0	0
30	0	0	0	0	0	0	0	0	0	0
40	0	0	0	0	0	0	0	0	0	0
50	0	0	0	0	0	0	0	0	0	0
60	n	n	n	n	n	n	n	n	n	n

Output data

Offset: 0 Go

	0	1	2	3	4	5	6	7	8	9
0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0	0
30	0	0	0	0	0	0	0	0	0	0
40	0	0	0	0	0	0	0	0	0	0
50	0	0	0	0	0	0	0	0	0	0
60	n	n	n	n	n	n	n	n	n	n

Update

Figure 122: IO Monitor

Columns switches the number of columns.

Display mode switches the representation of the input and output data between decimal and hexadecimal.

Offset / Go moves the indication of the data to the entered offset value.

➤ Enter the output value and select **Update**.

➤ Always the data of the process image are displayed, also when these Bytes have not been reserved by the configuration.

9.4 Process Image Monitor

The window **Process Image Monitor** lists the Device devices connected to the Controller, as well as the configured modules or input or output signals of the devices. This makes visible the fieldbus structure and the data structure of the device's input and output data transmitted at the bus. Furthermore the values of the signal data provided to the OPC server are displayed here.

➤ Open **Tools > Process Image Monitor**.

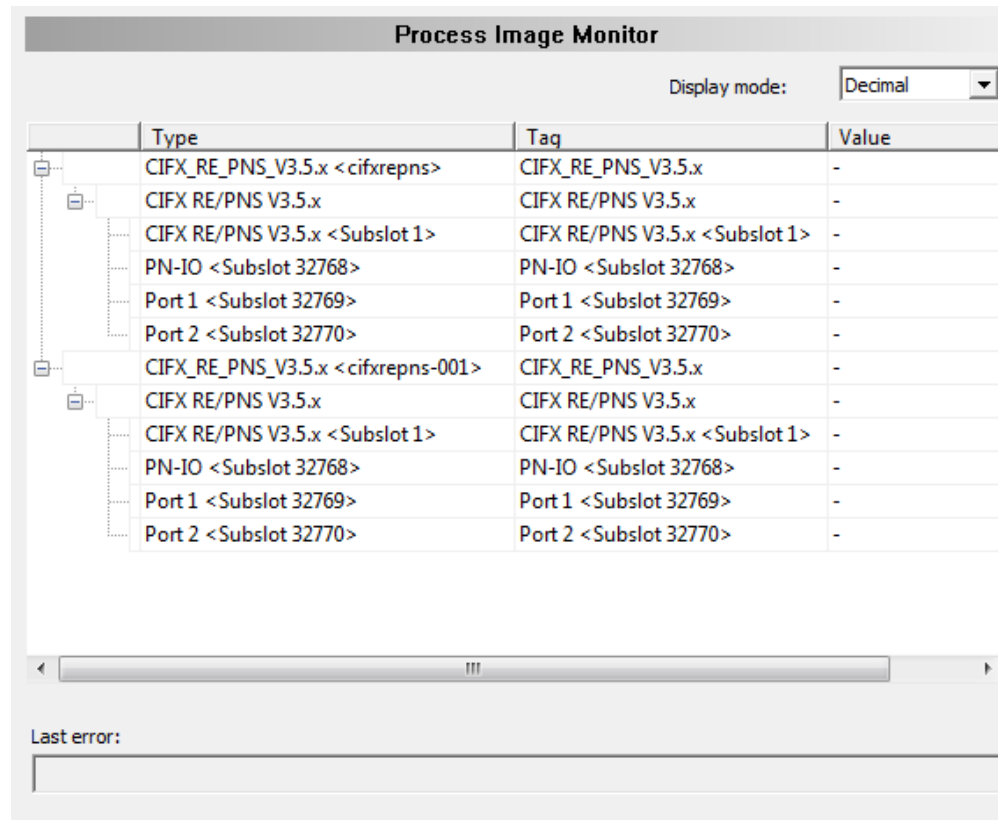


Figure 123: Window 'Process Image Monitor'

Parameter	Meaning	Range of Value / Value
Display Mode	Display of the values in the column Value in decimal or hexadecimal mode.	Decimal (Default), Hexadecimal
	The tree shows the structure of the devices (1), modules (2) and the input data (3) and output data (4).	
	Display when the input and output data are not completely read and analyzed.	
	Display when the input and output data are not valid.	
	Display when the input and output data are valid.	
Typ	Device labeling provided by the hardware: Also description of the modules or input or output signals configured to the device.	
TAG	Device name provided by the hardware (not changeable in the FDT container) or symbolic name for the modules configured to the device or for the input or output signals (changeable in the window Configuration > Process Data).	

Parameter	Meaning	Range of Value / Value
Value	Display of the valid input and output data values.	
Last Error	Last occurred error (Description see appropriate Application Programming Manual)	

Table 49: Notes to the Window 'Process Image Monitor'

10 Error Codes

10.1 Error Code Definition

For COM based application, like the ODM Server and ODM drivers, a common error definition is used, similar to the Microsoft Windows® HRESULT definition.

Error Code Structure:

COM Errors are HRESULTs, which are 32 bit values using the following layout:

```

3 3 2 2 2 2 2 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1
1 0 9 8 7 6 5 4 3 2 1 0 9 8 7 6 5 4 3 2 1 0
+---+---+---+---+---+---+---+---+---+---+
|Sev|C|R|      Facility      |      Code      |
+---+---+---+---+---+---+---+---+---+---+

```

where

Sev - is the severity code:

00 - Success

01 - Informational

10 - Warning

11 - Error

C - is the Customer code flag

R - is a reserved bit

Facility - is the facility code

Code - is the facility's status code

In this common error definition, several error code regions are already reserved by Windows® itself, the ODM and some other modules.

10.2 Overview Error Codes

Overview Error Codes	Range
General Hardware Errors RCX Operating System	<i>RCX General Task</i> : 0xC02B0001 to 0xC02B4D52
	<i>RCX Common Status & Errors Codes</i> : 0x00000000 to 0xC002000C
	<i>RCX Status & Error Codes</i> : 0x00000000 to 0xC0000008
PROFIENT IO-Controller V3 Task	<i>PROFINET IO-Controller V3 Task Error Codes</i> 0xC0CB0001L to 0xC0CB006BL
ODM Server	<i>General ODM Error Codes</i> : 0x8004C700 to 0x8004C761
	<i>General ODM Driver Error Codes</i> : 0x8004C7A0 to 0x8004C7C2
ODM Drivers	<i>cifX Driver Specific ODM Error</i> : 0x8004C001 to 0x8004C0A4
cifX Device Driver and netX Driver	<i>Generic Error</i> : 0x800A0001 to 0x800A0017
	<i>Generic Driver Error</i> : 0x800B0001 bis 0x800B0042
	<i>Generic Device Error</i> : 0x800C0010 bis 0x800C0041
netX Driver	<i>CIFX API Transport</i> : 0x800D0001 to 0x800D0013
	<i>CIFX API Transport Header State Error</i> : 0x800E0001 to 0x800E000B
DBM	<i>ODM Error Codes</i> : 0xC004C810 to 0xC004C878

Table 50: Overview Error Codes and Ranges



Further fieldbus specific error codes are described in the manuals of the corresponding protocol tasks.

10.3 General Hardware Error Codes

10.3.1 RCX General Task Errors

Error Code (Definition)	Value	Description
RCX_E_QUE_UNKNOWN	0xC02B0001	Unknown Queue
RCX_E_QUE_INDEX_UNKNOWN	0xC02B0002	Unknown Queue Index
RCX_E_TASK_UNKNOWN	0xC02B0003	Unknown Task
RCX_E_TASK_INDEX_UNKNOWN	0xC02B0004	Unknown Task Index
RCX_E_TASK_HANDLE_INVALID	0xC02B0005	Invalid Task Handle
RCX_E_TASK_INFO_IDX_UNKNOWN	0xC02B0006	Unknown Index
RCX_E_FILE_XFR_TYPE_INVALID	0xC02B0007	Invalid Transfer Type
RCX_E_FILE_REQUEST_INCORRECT	0xC02B0008	Invalid File Request
RCX_E_TASK_INVALID	0xC02B000E	Invalid Task
RCX_E_SEC_FAILED	0xC02B001D	Security EEPROM Access Failed
RCX_E_EEPROM_DISABLED	0xC02B001E	EEPROM Disabled
RCX_E_INVALID_EXT	0xC02B001F	Invalid Extension
RCX_E_SIZE_OUT_OF_RANGE	0xC02B0020	Block Size Out Of Range
RCX_E_INVALID_CHANNEL	0xC02B0021	Invalid Channel
RCX_E_INVALID_FILE_LEN	0xC02B0022	Invalid File Length
RCX_E_INVALID_CHAR_FOUND	0xC02B0023	Invalid Character Found
RCX_E_PACKET_OUT_OF_SEQ	0xC02B0024	Packet Out Of Sequence
RCX_E_SEC_NOT_ALLOWED	0xC02B0025	Not Allowed In Current State
RCX_E_SEC_INVALID_ZONE	0xC02B0026	Security EEPROM Invalid Zone
RCX_E_SEC_EEPROM_NOT_AVAIL	0xC02B0028	Security EEPROM Eeprom Not Available
RCX_E_SEC_INVALID_CHECKSUM	0xC02B0029	Security EEPROM Invalid Checksum
RCX_E_SEC_ZONE_NOT_WRITEABLE	0xC02B002A	Security EEPROM Zone Not Writeable
RCX_E_SEC_READ_FAILED	0xC02B002B	Security EEPROM Read Failed
RCX_E_SEC_WRITE_FAILED	0xC02B002C	Security EEPROM Write Failed
RCX_E_SEC_ACCESS_DENIED	0xC02B002D	Security EEPROM Access Denied
RCX_E_SEC_EEPROM_EMULATED	0xC02B002E	Security EEPROM Emulated
RCX_E_INVALID_BLOCK	0xC02B0038	Invalid Block
RCX_E_INVALID_STRUCT_NUMBER	0xC02B0039	Invalid Structure Number
RCX_E_INVALID_CHECKSUM	0xC02B4352	Invalid Checksum
RCX_E_CONFIG_LOCKED	0xC02B4B54	Configuration Locked
RCX_E_SEC_ZONE_NOT_READABLE	0xC02B4D52	Security EEPROM Zone Not Readable

Table 51: RCX General Task Errors

10.3.2 RCX Common Status & Errors Codes

Error Code (Definition)	Value	Description
RCX_S_OK	0x00000000	Success, Status Okay
RCX_E_FAIL	0xC0000001	Fail
RCX_E_UNEXPECTED	0xC0000002	Unexpected
RCX_E_OUTOFMEMORY	0xC0000003	Out Of Memory
RCX_E_UNKNOWN_COMMAND	0xC0000004	Unknown Command
RCX_E_UNKNOWN_DESTINATION	0xC0000005	Unknown Destination
RCX_E_UNKNOWN_DESTINATION_ID	0xC0000006	Unknown Destination ID
RCX_E_INVALID_PACKET_LEN	0xC0000007	Invalid Packet Length
RCX_E_INVALID_EXTENSION	0xC0000008	Invalid Extension
RCX_E_INVALID_PARAMETER	0xC0000009	Invalid Parameter
RCX_E_WATCHDOG_TIMEOUT	0xC000000C	Watchdog Timeout
RCX_E_INVALID_LIST_TYPE	0xC000000D	Invalid List Type
RCX_E_UNKNOWN_HANDLE	0xC000000E	Unknown Handle
RCX_E_PACKET_OUT_OF_SEQ	0xC000000F	Out Of Sequence
RCX_E_PACKET_OUT_OF_MEMORY	0xC0000010	Out Of Memory
RCX_E_QUE_PACKETDONE	0xC0000011	Queue Packet Done
RCX_E_QUE_SENDPACKET	0xC0000012	Queue Send Packet
RCX_E_POOL_PACKET_GET	0xC0000013	Pool Packet Get
RCX_E_POOL_GET_LOAD	0xC0000015	Pool Get Load
RCX_E_REQUEST_RUNNING	0xC000001A	Request Already Running
RCX_E_INIT_FAULT	0xC0000100	Initialization Fault
RCX_E_DATABASE_ACCESS_FAILED	0xC0000101	Database Access Failed
RCX_E_NOT_CONFIGURED	0xC0000119	Not Configured
RCX_E_CONFIGURATION_FAULT	0xC0000120	Configuration Fault
RCX_E_INCONSISTENT_DATA_SET	0xC0000121	Inconsistent Data Set
RCX_E_DATA_SET_MISMATCH	0xC0000122	Data Set Mismatch
RCX_E_INSUFFICIENT_LICENSE	0xC0000123	Insufficient License
RCX_E_PARAMETER_ERROR	0xC0000124	Parameter Error
RCX_E_INVALID_NETWORK_ADDRESS	0xC0000125	Invalid Network Address
RCX_E_NO_SECURITY_MEMORY	0xC0000126	No Security Memory
RCX_E_NETWORK_FAULT	0xC0000140	Network Fault
RCX_E_CONNECTION_CLOSED	0xC0000141	Connection Closed
RCX_E_CONNECTION_TIMEOUT	0xC0000142	Connection Timeout
RCX_E_LONELY_NETWORK	0xC0000143	Lonely Network
RCX_E_DUPLICATE_NODE	0xC0000144	Duplicate Node
RCX_E_CABLE_DISCONNECT	0xC0000145	Cable Disconnected
RCX_E_BUS_OFF	0xC0000180	Network Node Bus Off
RCX_E_CONFIG_LOCKED	0xC0000181	Configuration Locked
RCX_E_APPLICATION_NOT_READY	0xC0000182	Application Not Ready
RCX_E_TIMER_APPL_PACKET_SENT	0xC002000C	Timer App Packet Sent

Table 52: RCX Common Status & Errors Codes

10.3.3 RCX Status & Error Codes

Error Code (Definition)	Value	Description
RCX_S_OK	0x00000000	SUCCESS, STATUS OKAY
RCX_S_QUE_UNKNOWN	0xC02B0001	UNKNOWN QUEUE
RCX_S_QUE_INDEX_UNKNOWN	0xC02B0002	UNKNOWN QUEUE INDEX
RCX_S_TASK_UNKNOWN	0xC02B0003	UNKNOWN TASK
RCX_S_TASK_INDEX_UNKNOWN	0xC02B0004	UNKNOWN TASK INDEX
RCX_S_TASK_HANDLE_INVALID	0xC02B0005	INVALID TASK HANDLE
RCX_S_TASK_INFO_IDX_UNKNOWN	0xC02B0006	UNKNOWN INDEX
RCX_S_FILE_XFR_TYPE_INVALID	0xC02B0007	INVALID TRANSFER TYPE
RCX_S_FILE_REQUEST_INCORRECT	0xC02B0008	INVALID FILE REQUEST
RCX_S_UNKNOWN_DESTINATION	0xC0000005	UNKNOWN DESTINATION
RCX_S_UNKNOWN_DESTINATION_ID	0xC0000006	UNKNOWN DESTINATION ID
RCX_S_INVALID_LENGTH	0xC0000007	INVALID LENGTH
RCX_S_UNKNOWN_COMMAND	0xC0000004	UNKNOWN COMMAND
RCX_S_INVALID_EXTENSION	0xC0000008	INVALID EXTENSION

Table 53: RCX Status & Error Codes

10.3.3.1 RCX Status & Error Codes Slave State

Error Code (Definition)	Value	Description
RCX_SLAVE_STATE_UNDEFINED	0x00000000	UNDEFINED
RCX_SLAVE_STATE_OK	0x00000001	OK
RCX_SLAVE_STATE_FAILED	0x00000002	FAILED (at least one slave)

Table 54: RCX Status & Error Codes Slave State

10.4 PROFINET IO-Controller V3 Task Error Codes

Error Code (Definition)	Value	Description
PNM_AP_CFG_INVALID_PARAMETER	0xC0CB0001L	Invalid parameter
PNM_AP_CFG_INVALID_STRUCT_VERSION	0xC0CB0002L	Invalid structure version
PNM_AP_CFG_INVALID_IDENTIFIER	0xC0CB0003L	Invalid identifier
PNM_AP_CFG_INVALID_DEVICE_HANDLE	0xC0CB0004L	Invalid device handle
PNM_AP_CFG_INVALID_SEND_CLOCK_FACTOR	0xC0CB0005L	Invalid PROFINET send clock factor
PNM_AP_CFG_INVALID_REDUCTION_RATIO	0xC0CB0006L	Invalid PROFINET reduction ratio
PNM_AP_CFG_INVALID_DATA_HOLD_FACTOR	0xC0CB0007L	Invalid PROFINET data hold factor
PNM_AP_CFG_INVALID_PHASE	0xC0CB0008L	Invalid PROFINET phase
PNM_AP_CFG_INVALID_FRAME_SEND_OFFSET	0xC0CB0009L	Invalid PROFINET frame send offset
PNM_AP_CFG_INVALID_DOMAIN_NAME	0xC0CB000AL	Invalid domain name
PNM_AP_CFG_INVALID_UUID	0xC0CB000BL	Invalid UUID (Universally Unique Identifier)
PNM_AP_CFG_INVALID_NUMBER_OF_ENTRIES	0xC0CB000CL	Invalid number of entries
PNM_AP_CFG_INVALID_PORT_NUM	0xC0CB000DL	Invalid port number
PNM_AP_CFG_INVALID_STATION_NAME	0xC0CB000EL	Invalid station name
PNM_AP_CFG_INVALID_PORT_NAME	0xC0CB000FL	Invalid Ethernet port name
PNM_AP_CFG_INVALID_IP_ADDRESS	0xC0CB0010L	Invalid IP address
PNM_AP_CFG_INVALID_IOCR_HANDLE	0xC0CB0011L	Invalid PROFINET IOC-R Handle Ungültiger PROFINET-IOCR-Identifikator
PNM_AP_CFG_INVALID_IOCR_TYPE	0xC0CB0012L	Invalid PROFINET IOC-R type
PNM_AP_CFG_INVALID_IOCR_PROP	0xC0CB0013L	Invalid PROFINET IOC-R properties
PNM_AP_CFG_INVALID_IOCR_DATA_LENGTH	0xC0CB0014L	Invalid PROFINET IOC-R data length
PNM_AP_CFG_INVALID_DPM_OFFSET	0xC0CB0015L	Invalid DPM offset
PNM_AP_CFG_OVERLAPPING_DPM_OFFSET	0xC0CB0016L	Overlapping DPM data area
PNM_AP_CFG_INVALID_SUBMODULE_HANDLE	0xC0CB0017L	Invalid submodule handle
PNM_AP_CFG_INVALID_SUBMODULE_TYPE	0xC0CB0018L	Invalid submodule type
PNM_AP_CFG_INVALID_INPUT_DATA_LENGTH	0xC0CB001AL	Invalid submodule input data length
PNM_AP_CFG_INVALID_INPUT_FRAME_OFFSET	0xC0CB001BL	Invalid submodule input data offset
PNM_AP_CFG_OVERLAPPING_INPUT_FRAME_OFFSET	0xC0CB001CL	Overlapping submodule input data areas
PNM_AP_CFG_INVALID_INPUT_IOC-S-OFFSET	0xC0CB001DL	Invalid submodule input IOC-S offset (IOC-S = Input/Output Consumer Status)
PNM_AP_CFG_OVERLAPPING_INPUT_IOC-S-OFFSET	0xC0CB001EL	Overlapping submodule input IOC-S
PNM_AP_CFG_INVALID_OUTPUT_DATA_LENGTH	0xC0CB001FL	Invalid submodule output data length
PNM_AP_CFG_INVALID_OUTPUT_FRAME_OFFSET	0xC0CB0020L	Invalid submodule output data offset
PNM_AP_CFG_OVERLAPPING_OUTPUT_FRAME_OFFSET	0xC0CB0021L	Overlapping submodule output data areas
PNM_AP_CFG_INVALID_OUTPUT_IOC-S-OFFSET	0xC0CB0022L	Invalid submodule output IOC-S offset
PNM_AP_CFG_OVERLAPPING_OUTPUT_IOC-S-OFFSET	0xC0CB0023L	Overlapping submodule output IOC-S
PNM_AP_CFG_INVALID_PLL_WINDOW	0xC0CB0024L	Invalid PROFINET IRT PLL window

Error Code (Definition)	Value	Description
PNM_AP_CFG_INVALID_PTCTP_TIMEOUT	0xC0CB0025L	Invalid PROFINET IRT Synchronization timeout (PTCP Timeout)
PNM_AP_CFG_INVALID_TAKEOVER_TIMEOUT	0xC0CB0026L	Invalid PROFINET IRT Takeover timeout
PNM_AP_CFG_INVALID_PTCP_STARTUP_TIME	0xC0CB0027L	Invalid PROFINET IRT PTCP startup time
PNM_AP_CFG_INVALID_PTCP_MASTER_PRIO	0xC0CB0028L	Invalid PROFINET IRT synchronization master priority
PNM_AP_CFG_INVALID_NUM_IRT_PHASES	0xC0CB0029L	Invalid PROFINET IRT phase count
PNM_AP_CFG_INVALID_NUM_IRT_FRAMES	0xC0CB002AL	Invalid PROFINET IRT frame count
PNM_AP_CFG_INVALID_GREEN_PERIOD_BEGIN	0xC0CB002CL	Invalid PROFINET IRT green period begin
PNM_AP_CFG_INVALID_ORANGE_PERIOD_BEGIN	0xC0CB002EL	Invalid PROFINET IRT orange period begin
PNM_AP_CFG_INVALID_FRAME_LENGTH	0xC0CB002FL	Invalid PROFINET IRT frame length
PNM_AP_CFG_INVALID_LINE_DELAY	0xC0CB0030L	Invalid PROFINET IRT line delay
PNM_AP_CFG_INVALID_PREAMBLE_LENGTH	0xC0CB0031L	Invalid PROFINET frame preamble length
PNM_AP_CFG_INVALID_PARAMETER_FLAG	0xC0CB0032L	Invalid parameter enable flag value
PNM_AP_CFG_INVALID_PARAMETER_TYPE	0xC0CB0033L	Invalid parameter type
PNM_AP_CFG_INVALID_FSU_MODE	0xC0CB0034L	Invalid Fast Startup Mode
PNM_AP_CFG_INVALID_FS_HELLO_INTERVAL	0xC0CB0035L	Invalid Fast Startup Hello telegram interval
PNM_AP_CFG_INVALID_FS_HELLO_RETRY	0xC0CB0036L	Invalid Fast Startup Hello telegram retry
PNM_AP_CFG_INVALID_FS_HELLO_DELAY	0xC0CB0037L	Invalid Fast Startup Hello delay
PNM_AP_CFG_INVALID_SYNC_MODE	0xC0CB0038L	Invalid synchronization mode
PNM_AP_CFG_INVALID_MAUTYPE_MODE	0xC0CB0039L	Invalid mau type mode
PNM_AP_CFG_INVALID_DOMAIN_BOUNDARY	0xC0CB003AL	Invalid domain boundary value
PNM_AP_CFG_INVALID_DCP_BOUNDARY	0xC0CB003BL	Invalid DCP boundary value
PNM_AP_CFG_INVALID_PEERTOPEER_BOUNDARY	0xC0CB003CL	Invalid peer to peer boundary value
PNM_AP_CFG_INVALID_MULTIPLE_INTERFACE_MODE	0xC0CB003DL	Invalid multiple interface mode value
PNM_AP_CFG_INVALID_MRP_INSTANCE	0xC0CB003EL	Invalid mrp instance
PNM_AP_CFG_INVALID_MRP_CHECK	0xC0CB003FL	Invalid mrp check value
PNM_AP_CFG_INVALID_MRP_ROLE	0xC0CB0040L	Invalid mrp role
PNM_AP_CFG_INVALID_MRP_PARAMETERS	0xC0CB0041L	Invalid mrp parameter
PNM_AP_CFG_INVALID_MRP_MANAGER_PRIO	0xC0CB0042L	Invalid mrp manager priority
PNM_AP_CFG_INVALID_MRP_TOPO_CHANGE_INTERVAL	0xC0CB0043L	Invalid mrp topology change frame interval value
PNM_AP_CFG_INVALID_MRP_TOPO_REPEAT_COUNT	0xC0CB0044L	Invalid mrp topology change frame repeat value
PNM_AP_CFG_INVALID_MRP_SHORT_TEST_INTERVAL (0xC0CB0045L)		Invalid mrp short test frame interval value
PNM_AP_CFG_INVALID_MRP_DEFAULT_TEST_INTERVAL	0xC0CB0046L	Invalid mrp default test frame interval value
PNM_AP_CFG_INVALID_MRP_TEST_MONITOR_COUNT	0xC0CB0047L	Invalid mrp test monitor countvalue.
PNM_AP_CFG_INVALID_MRP_LINK_DOWN_INTERVAL	0xC0CB0048L	Invalid mrp link down frame interval
PNM_AP_CFG_INVALID_MRP_LINK_UP_INTERVAL	0xC0CB0049L	Invalid mrp link up frame interval
PNM_AP_CFG_INVALID_MRP_LINK_CHANGE_COUNT	0xC0CB004AL	Invalid mrp link change repeat value
PNM_AP_CFG_INVALID_FIBEROPTIC_PARAMETERS	0xC0CB004BL	Invalid fiber optic parameter value

Error Code (Definition)	Value	Description
PNM_AP_CFG_DUPLICAT_UUID	0xC0CB004CL	Doubly used UUID value
PNM_AP_CFG_DUPLICAT_NAME_OF_STATION	0xC0CB004DL	Doubly used PROFINET Name Of Station value
PNM_AP_CFG_DUPLICAT_IP_ADDRESS	0xC0CB004EL	Doubly used IPv4 network address
PNM_AP_CFG_INVALID_RTA_TIMEOUT_FACTOR	0xC0CB004FL	Invalid value for alarm frame timeout
PNM_AP_CFG_INVALID_RTA_RETRIES	0xC0CB0050L	Invalid value for alarm frame retry
PNM_AP_CFG_INVALID_MAX_ALARM_DATA_LENGTH	0xC0CB0051L	Invalid value for alarm data length
PNM_AP_CFG_AR_TYPE_NOT_SUPPORTED	0xC0CB0052L	Unsupported application relation type
PNM_AP_CFG_INVALID_AR_TYPE	0xC0CB0053L	Invalid application relation type
PNM_AP_CFG_INVALID_SLOT	0xC0CB0054L	Invalid module slot number
PNM_AP_CFG_INVALID_MODULE_IDENT	0xC0CB0055L	Invalid module id number
PNM_AP_CFG_INVALID_SUBSLOT	0xC0CB0056L	Invalid submodule subslot number
PNM_AP_CFG_NO_PORT_SUBMODULE	0xC0CB0057L	The specified submodule is not a port submodule
PNM_AP_CFG_INVALID_MAX_BRIDGE_DELAY	0xC0CB0058L	Invalid maximum ethernet bridge delay
PNM_AP_CFG_INVALID_MAX_PORT_TX_DELAY	0xC0CB0059L	Invalid maximum port tx delay
PNM_AP_CFG_INVALID_MAX_PORT_RX_DELAY	0xC0CB005AL	Invalid maximum port rx delay
PNM_AP_CFG_INVALID_MAX_LINE_DELAY	0xC0CB005BL	Invalid maximum line delay
PNM_AP_CFG_INVALID_YELLOW_TIME	0xC0CB005CL	Invalid length of yellow interval
PNM_AP_CFG_INVALID_FRAME_DATA_PROP	0xC0CB005DL	Invalid frame data properties
PNM_AP_CFG_INVALID_FRAME_ID	0xC0CB005EL	Invalid frame id value
PNM_AP_CFG_INVALID_FRAME_DETAIL_SYNC_FRAME_MASK	0xC0CB005FL	Invalid framedetails sync frame mask
PNM_AP_CFG_INVALID_FRAME_DETAIL_FRAME_SEND_OFFSET	0xC0CB0060L	Invalid framedetails send offset
PNM_AP_CFG_INVALID_NUM_IRT_ASSIGNMENT	0xC0CB0061L	Invalid number of IRT phase assignments
PNM_AP_CFG_DUPLICAT_SYNC_MASTER	0xC0CB0062L	More than one synchronization master defined
PNM_AP_CFG_INVALID_NUMBER_OF_PORTS	0xC0CB0063L	Invalid number of ports
PNM_AP_CFG_TOPO_PORT_ALREADY_CONFIGURED	0xC0CB0064L	The referenced port's topology is already configured
PNM_AP_CFG_TOPO_INFO_MISMATCH	0xC0CB0065L	Inconsistent topology configured
PNM_AP_CFG_INVALID_CONFIG_STATE	0xC0CB0066L	Wrong configuration state
PNM_AP_CFG_MISSING_IOCR	0xC0CB0067L	IOCR missing in configuration
PNM_AP_CFG_MAX_NUMBER_IOCR_EXCEEDED	0xC0CB0068L	Maximum possible number of IOC Rs exceeded
PNM_AP_CFG_INVALID_DAP_CONFIGURATION	0xC0CB0069L	Invalid configuration of a device access point (DAP)
PNM_AP_CFG_INVALID_DROP_BUDGET	0xC0CB006AL	Invalid value for network switch drop budget
PNM_AP_CFG_INVALID_REDORANGE_PERIOD_BEGIN	0xC0CB006BL	Invalid value for PROFINET IRT red period begin

Table 55: PROFIENT IO-Controller V3 Task Error Codes

10.5 ODM Error Codes

10.5.1 General ODM Error Codes

Error Code (Definition)	Value	Description
CODM3_E_INTERNALERROR	0x8004C700	Internal ODM Error
ODM3_E_DESCRIPTION_NOTFOUND	0x8004C701	Description not found in ODM database
CODM3_E_WRITEREGISTRY	0x8004C710	Error writing to the registry
CODM3_E_BAD_REGULAR_EXPRESSION	0x8004C711	Invalid regular expression
CODM3_E_COMCATEGORIE_MANAGER_FAILED	0x8004C712	Component Category Manager could not be instantiated
CODM3_E_COMCATEGORIE_ENUMERATION_FAILED	0x8004C713	Driver could not be enumerated by the Category Manager
CODM3_E_CREATE_LOCAL_BUFFER	0x8004C714	Error creating local buffers
CODM3_E_UNKNOWNHANDLE	0x8004C715	Unknown handle
CODM3_E_QUEUE_LIMIT_REACHED	0x8004C717	Queue size limit for connection reached
CODM3_E_DATASIZE_ZERO	0x8004C718	Zero data length passed
CODM3_E_INVALID_DATA	0x8004C719	Invalid data content
CODM3_E_INVALID_MODE	0x8004C71A	Invalid mode
CODM3_E_DATABASE_READ	0x8004C71B	Error reading database
CODM3_E_CREATE_DEVICE_THREAD	0x8004C750	Error creating device thread
CODM3_E_CREATE_DEVICE_THREAD_STOP_EVENT	0x8004C751	Error creating device thread stop event
CODM3_E_CLIENT_NOT_REGISTERED	0x8004C752	Client is not registered at the ODM
CODM3_E_NO_MORE_CLIENTS	0x8004C753	Maximum number of clients reached
CODM3_E_MAX_CLIENT_CONNECTIONS_REACHED	0x8004C754	Maximum number of client connections reached
CODM3_E_ENTRY_NOT_FOUND	0x8004C755	Driver/device not found
CODM3_E_DRIVER_NOT_FOUND	0x8004C757	The requested driver is unknown to the ODM
CODM3_E_DEVICE_ALREADY_LOCKED	0x8004C758	Device is locked by another process
CODM3_E_DEVICE_UNLOCKED_FAILED	0x8004C759	Device could not be unlocked, lock was set by another process
CODM3_E_DEVICE_LOCK_NECESSARY	0x8004C75A	Operation requires a device lock to be set
CODM3_E_DEVICE_SUBSCRIPTIONLIMIT	0x8004C75B	Maximum number of servers registered for this device reached
CODM3_E_DEVICE_NOTSUBSCRIBED	0x8004C75C	Process is not registered as a server on this device
CODM3_E_DEVICE_NO_MESSAGE	0x8004C75D	No message available
CODM3_E_TRANSFERTIMEOUT	0x8004C760	Message transfer timeout
CODM3_E_MESSAGE_INSERVICE	0x8004C761	Message in service

Table 56: ODM Error Codes - General ODM Error Codes

10.5.2 General ODM Driver Error Codes

Error Code (Definition)	Value	Description
CODM3_E_DRV_OPEN_DEVICE	0x8004C7A0	Packet type unsupported by driver
CODM3_E_DRV_INVALID_IDENTIFIER	0x8004C7A1	Invalid device identifier
CODM3_E_DRV_DEVICE_PARAMETERS_MISMATCH	0x8004C7A3	Parameters differ from requested device
CODM3_E_DRV_BROWSE_NO_DEVICES	0x8004C7A4	No devices found
CODM3_E_DRV_CREATE_DEVICE_INST	0x8004C7A5	Device instance could not be created
CODM3_E_DRV_DEVICE_NOMORE_TX	0x8004C7A6	Device connection limit reached
CODM3_E_DRV_DEVICE_DUPLICATE_TX	0x8004C7A7	Duplicate transmitter ID
CODM3_E_DRV_DEVICE_NOT_CONFIGURED	0x8004C7A8	Device is not configured
CODM3_E_DRV_DEVICE_COMMUNICATION	0x8004C7A9	Device communication error
CODM3_E_DRV_DEVICE_NO_MESSAGE	0x8004C7AA	No message available
CODM3_E_DRV_DEVICE_NOT_READY	0x8004C7AB	Device not ready
CODM3_E_DRV_INVALIDCONFIGURATION	0x8004C7AC	Invalid driver configuration
CODM3_E_DRV_DLINVALIDMODE	0x8004C7C0	Invalid download mode
CODM3_E_DRV_DLINPROGRESS	0x8004C7C1	Download is active
CODM3_E_DRV_ULINPROGRESS	0x8004C7C2	Upload is active

Table 57: ODM Error Codes - General ODM Driver Error Codes

10.5.3 cifX Driver Specific ODM Error Codes

cifX Driver Specific ODM Error Codes		
Error Code (Definition)	Value	Description
DRV_E_BOARD_NOT_INITIALIZED	0x8004C001	DRIVER Board not initialized
DRV_E_INIT_STATE_ERROR	0x8004C002	DRIVER Error in internal init state
DRV_E_READ_STATE_ERROR	0x8004C003	DRIVER Error in internal read state
DRV_E_CMD_ACTIVE	0x8004C004	DRIVER Command on this channel is active
DRV_E_PARAMETER_UNKNOWN	0x8004C005	DRIVER Unknown parameter in function
DRV_E_WRONG_DRIVER_VERSION	0x8004C006	DRIVER Version is incompatible with DLL
DRV_E_PCI_SET_CONFIG_MODE	0x8004C007	DRIVER Error during PCI set configuration mode
DRV_E_PCI_READ_DPM_LENGTH	0x8004C008	DRIVER Could not read PCI dual port memory length
DRV_E_PCI_SET_RUN_MODE	0x8004C009	DRIVER Error during PCI set run mode
DRV_E_DEV_DPM_ACCESS_ERROR	0x8004C00A	DEVICE Dual port ram not accessible(board not found)
DRV_E_DEV_NOT_READY	0x8004C00B	DEVICE Not ready (ready flag failed)
DRV_E_DEV_NOT_RUNNING	0x8004C00C	DEVICE Not running (running flag failed)
DRV_E_DEV_WATCHDOG_FAILED	0x8004C00D	DEVICE Watchdog test failed
DRV_E_DEV_OS_VERSION_ERROR	0x8004C00E	DEVICE Signals wrong OS version
DRV_E_DEV_SYSERR	0x8004C00F	DEVICE Error in dual port flags
DRV_E_DEV_MAILBOX_FULL	0x8004C010	DEVICE Send mailbox is full
DRV_E_DEV_PUT_TIMEOUT	0x8004C011	DEVICE PutMessage timeout
DRV_E_DEV_GET_TIMEOUT	0x8004C012	DEVICE GetMessage timeout
DRV_E_DEV_GET_NO_MESSAGE	0x8004C013	DEVICE No message available
DRV_E_DEV_RESET_TIMEOUT	0x8004C014	DEVICE RESET command timeout
DRV_E_DEV_NO_COM_FLAG	0x8004C015	DEVICE COM-flag not set. Check if Bus is running
DRV_E_DEV_EXCHANGE_FAILED	0x8004C016	DEVICE I/O data exchange failed
DRV_E_DEV_EXCHANGE_TIMEOUT	0x8004C017	DEVICE I/O data exchange timeout
DRV_E_DEV_COM_MODE_UNKNOWN	0x8004C018	DEVICE I/O data mode unknown
DRV_E_DEV_FUNCTION_FAILED	0x8004C019	DEVICE Function call failed
DRV_E_DEV_DPMSIZE_MISMATCH	0x8004C01A	DEVICE DPM size differs from configuration
DRV_E_DEV_STATE_MODE_UNKNOWN	0x8004C01B	DEVICE State mode unknown
DRV_E_DEV_HW_PORT_IS_USED	0x8004C01C	DEVICE Output port already in use
DRV_E_USR_OPEN_ERROR	0x8004C01E	USER Driver not opened (device driver not loaded)
DRV_E_USR_INIT_DRV_ERROR	0x8004C01F	USER Can't connect to device
DRV_E_USR_NOT_INITIALIZED	0x8004C020	USER Board not initialized (DevInitBoard not called)
DRV_E_USR_COMM_ERR	0x8004C021	USER IOCTL function failed
DRV_E_USR_DEV_NUMBER_INVALID	0x8004C022	USER Parameter DeviceNumber invalid
DRV_E_USR_INFO_AREA_INVALID	0x8004C023	USER Parameter InfoArea unknown
DRV_E_USR_NUMBER_INVALID	0x8004C024	USER Parameter Number invalid
DRV_E_USR_MODE_INVALID	0x8004C025	USER Parameter Mode invalid
DRV_E_USR_MSG_BUF_NULL_PTR	0x8004C026	USER NULL pointer assignment
DRV_E_USR_MSG_BUF_TOO_SHORT	0x8004C027	USER Message buffer too small

cifX Driver Specific ODM Error Codes		
Error Code (Definition)	Value	Description
DRV_E_USR_SIZE_INVALID	0x8004C028	USER Parameter Size invalid
DRV_E_USR_SIZE_ZERO	0x8004C02A	USER Parameter Size with zero length
DRV_E_USR_SIZE_TOO_LONG	0x8004C02B	USER Parameter Size too long
DRV_E_USR_DEV_PTR_NULL	0x8004C02C	USER Device address null pointer
DRV_E_USR_BUF_PTR_NULL	0x8004C02D	USER Pointer to buffer is a null pointer
DRV_E_USR_SENDSIZE_TOO_LONG	0x8004C02E	USER Parameter SendSize too large
DRV_E_USR_RECVSIZE_TOO_LONG	0x8004C02F	USER Parameter ReceiveSize too large
DRV_E_USR_SENDBUF_PTR_NULL	0x8004C030	USER Pointer to send buffer is a null pointer
DRV_E_USR_RECVBUF_PTR_NULL	0x8004C031	USER Pointer to receive buffer is a null pointer
DRV_E_DMA_INSUFF_MEM	0x8004C032	DMA Memory allocation error
DRV_E_DMA_TIMEOUT_CH4	0x8004C033	DMA Read I/O timeout
DRV_E_DMA_TIMEOUT_CH5	0x8004C034	DMA Write I/O timeout
DRV_E_DMA_TIMEOUT_CH6	0x8004C035	DMA PCI transfer timeout
DRV_E_DMA_TIMEOUT_CH7	0x8004C036	DMA Download timeout
DRV_E_DMA_DB_DOWN_FAIL	0x8004C037	DMA Database download failed
DRV_E_DMA_FW_DOWN_FAIL	0x8004C038	DMA Firmware download failed
DRV_E_CLEAR_DB_FAIL	0x8004C039	DMA Clear database on the device failed
DRV_E_DEV_NO_VIRTUAL_MEM	0x8004C03C	DMA USER Virtual memory not available
DRV_E_DEV_UNMAP_VIRTUAL_MEM	0x8004C03D	DMA USER Unmap virtual memory failed
DRV_E_GENERAL_ERROR	0x8004C046	DRIVER General error
DRV_E_DMA_ERROR	0x8004C047	DRIVER General DMA error
DRV_E_WDG_IO_ERROR	0x8004C048	DRIVER I/O WatchDog failed
DRV_E_WDG_DEV_ERROR	0x8004C049	DRIVER Device Watchdog failed
DRV_E_USR_DRIVER_UNKNOWN	0x8004C050	USER Driver unknown
DRV_E_USR_DEVICE_NAME_INVALID	0x8004C051	USER Device name invalid
DRV_E_USR_DEVICE_NAME_UNKNOWN	0x8004C052	USER Device name unknown
DRV_E_USR_DEVICE_FUNC_NOTIMPL	0x8004C053	USER Device function not implemented
DRV_E_USR_FILE_OPEN_FAILED	0x8004C064	USER File could not be opened
DRV_E_USR_FILE_SIZE_ZERO	0x8004C065	USER File size zero
DRV_E_USR_FILE_NO_MEMORY	0x8004C066	USER Not enough memory to load file
DRV_E_USR_FILE_READ_FAILED	0x8004C067	USER File read failed
DRV_E_USR_INVALID_FILETYPE	0x8004C068	USER File type invalid
DRV_E_USR_FILENAME_INVALID	0x8004C069	USER Invalid filename
DRV_E_FW_FILE_OPEN_FAILED	0x8004C06E	USER Firmware file could not be opened
DRV_E_FW_FILE_SIZE_ZERO	0x8004C06F	USER Not enough memory to load firmware file
DRV_E_FW_FILE_NO_MEMORY	0x8004C070	USER Not enough memory to load firmware file
DRV_E_FW_FILE_READ_FAILED	0x8004C071	USER Firmware file read failed
DRV_E_FW_INVALID_FILETYPE	0x8004C072	USER Firmware file type invalid
DRV_E_FW_FILENAME_INVALID	0x8004C073	USER Firmware file name not valid
DRV_E_FW_DOWNLOAD_ERROR	0x8004C074	USER Firmware file download error
DRV_E_FW_FILENAME_NOT_FOUND	0x8004C075	USER Firmware file not found in the internal table
DRV_E_FW_BOOTLOADER_ACTIVE	0x8004C076	USER Firmware file BOOTLOADER active

cifX Driver Specific ODM Error Codes		
Error Code (Definition)	Value	Description
DRV_E_FW_NO_FILE_PATH	0x8004C077	USER Firmware file no file path
DRV_E_CF_FILE_OPEN_FAILED	0x8004C078	USER Configuration file could not be opened
DRV_E_CF_FILE_SIZE_ZERO	0x8004C079	USER Configuration file size zero
DRV_E_CF_FILE_NO_MEMORY	0x8004C07A	USER Not enough memory to load configuration file
DRV_E_CF_FILE_READ_FAILED	0x8004C07B	USER Configuration file read failed
DRV_E_CF_INVALID_FILETYPE	0x8004C07C	USER Configuration file type invalid
DRV_E_CF_FILENAME_INVALID	0x8004C07D	USER Configuration file name not valid
DRV_E_CF_DOWNLOAD_ERROR	0x8004C07E	USER Configuration file download error
DRV_E_CF_FILE_NO_SEGMENT	0x8004C07F	USER No flash segment in the configuration file
DRV_E_CF_DIFFERS_FROM_DBM	0x8004C080	USER Configuration file differs from database
DRV_E_DBM_SIZE_ZERO	0x8004C083	USER Database size zero
DRV_E_DBM_NO_MEMORY	0x8004C084	USER Not enough memory to upload database
DRV_E_DBM_READ_FAILED	0x8004C085	USER Database read failed
DRV_E_DBM_NO_FLASH_SEGMENT	0x8004C086	USER Database segment unknown
DEV_E_CF_INVALID_DESCRIPTOR_VERSION	0x8004C096	CONFIG Version of the descriptor table invalid
DEV_E_CF_INVALID_INPUT_OFFSET	0x8004C097	CONFIG Input offset is invalid
DEV_E_CF_NO_INPUT_SIZE	0x8004C098	CONFIG Input size is 0
DEV_E_CF_MISMATCH_INPUT_SIZE	0x8004C099	CONFIG Input size does not match configuration
DEV_E_CF_INVALID_OUTPUT_OFFSET	0x8004C09A	CONFIG Invalid output offset
DEV_E_CF_NO_OUTPUT_SIZE	0x8004C09B	CONFIG Output size is 0
DEV_E_CF_MISMATCH_OUTPUT_SIZE	0x8004C09C	CONFIG Output size does not match configuration
DEV_E_CF_STN_NOT_CONFIGURED	0x8004C09D	CONFIG Station not configured
DEV_E_CF_CANNOT_GET_STN_CONFIG	0x8004C09E	CONFIG Cannot get the Station configuration
DEV_E_CF_MODULE_DEF_MISSING	0x8004C09F	CONFIG Module definition is missing
DEV_E_CF_MISMATCH_EMPTY_SLOT	0x8004C0A0	CONFIG Empty slot mismatch
DEV_E_CF_MISMATCH_INPUT_OFFSET	0x8004C0A1	CONFIG Input offset mismatch
DEV_E_CF_MISMATCH_OUTPUT_OFFSET	0x8004C0A2	CONFIG Output offset mismatch
DEV_E_CF_MISMATCH_DATA_TYPE	0x8004C0A3	CONFIG Data type mismatch
DEV_E_CF_MODULE_DEF_MISSING_NO_SI	0x8004C0A4	CONFIG Module definition is missing,(no Slot/Idx)

Table 58: cifX Driver Specific ODM Error Codes

10.6 Error Codes cifX Device Driver and netX Driver

10.6.1 Generic Error Codes

Error Code (Definition)	Value	Description
CIFX_INVALID_POINTER	0x800A0001L	Invalid pointer (NULL) passed to driver
CIFX_INVALID_BOARD	0x800A0002L	No board with the given nameindex available
CIFX_INVALID_CHANNEL	0x800A0003L	No channel with the given index available
CIFX_INVALID_HANDLE	0x800A0004L	Invalid handle passed to driver
CIFX_INVALID_PARAMETER	0x800A0005L	Invalid parameter
CIFX_INVALID_COMMAND	0x800A0006L	Invalid command
CIFX_INVALID_BUFFERSIZE	0x800A0007L	Invalid buffer size
CIFX_INVALID_ACCESS_SIZE	0x800A0008L	Invalid access size
CIFX_FUNCTION_FAILED	0x800A0009L	Function failed
CIFX_FILE_OPEN_FAILED	0x800A000AL	File could not be opened
CIFX_FILE_SIZE_ZERO	0x800A000BL	File size is zero
CIFX_FILE_LOAD_INSUFF_MEM	0x800A000CL	Insufficient memory to load file
CIFX_FILE_CHECKSUM_ERROR	0x800A000DL	File checksum compare failed
CIFX_FILE_READ_ERROR	0x800A000EL	Error reading from file
CIFX_FILE_TYPE_INVALID	0x800A000FL	Invalid file type
CIFX_FILE_NAME_INVALID	0x800A0010L	Invalid file name
CIFX_FUNCTION_NOT_AVAILABLE	0x800A0011L	Driver function not available
CIFX_BUFFER_TOO_SHORT	0x800A0012L	Given buffer is too short
CIFX_MEMORY_MAPPING_FAILED	0x800A0013L	Failed to map the memory
CIFX_NO_MORE_ENTRIES	0x800A0014L	No more entries available
CIFX_CALLBACK_MODE_UNKNOWN	0x800A0015L	Unkown callback handling mode
CIFX_CALLBACK_CREATE_EVENT_FAILED	0x800A0016L	Failed to create callback events
CIFX_CALLBACK_CREATE_RECV_BUFFER	0x800A0017L	Failed to create callback receive buffer

Table 59: Generic Error Codes

10.6.2 Generic Driver Error Codes

Error Code (Definition)	Value	Description
CIFX_DRV_NOT_INITIALIZED	0x800B0001L	Driver not initialized
CIFX_DRV_INIT_STATE_ERROR	0x800B0002L	Driver init state error
CIFX_DRV_READ_STATE_ERROR	0x800B0003L	Driver read state error
CIFX_DRV_CMD_ACTIVE	0x800B0004L	Command is active on device
CIFX_DRV_DOWNLOAD_FAILED	0x800B0005L	General error during download
CIFX_DRV_WRONG_DRIVER_VERSION	0x800B0006L	Wrong driver version
CIFX_DRV_DRIVER_NOT_LOADED	0x800B0030L	CIFx driver is not running
CIFX_DRV_INIT_ERROR	0x800B0031L	Failed to initialize the device
CIFX_DRV_CHANNEL_NOT_INITIALIZED	0x800B0032L	Channel not initialized (xOpenChannel not called)
CIFX_DRV_IO_CONTROL_FAILED	0x800B0033L	IOControl call failed
CIFX_DRV_NOT_OPENED(0x800B0034L	Driver was not opened
CIFX_DRV_DOWNLOAD_STORAGE_UNKN OWN	0x800B0040L	Unknown download storage type (RAMFLASH based) found
CIFX_DRV_DOWNLOAD_FW_WRONG_CHA NNEL	0x800B0041L	Channel number for a firmware download not supported
CIFX_DRV_DOWNLOAD_MODULE_NO_BAS EOS	0x800B0042L	Modules are not allowed without a Base OS firmware

Table 60: Generic Driver Error Codes

10.6.3 Generic Device Error Codes

Error Code (Definition)	Value	Description
CIFX_DEV_DPM_ACCESS_ERROR	0x800C0010L	Dual port memory not accessible (board not found)
CIFX_DEV_NOT_READY	0x800C0011L	Device not ready (ready flag failed)
CIFX_DEV_NOT_RUNNING	0x800C0012L	Device not running (running flag failed)
CIFX_DEV_WATCHDOG_FAILED	0x800C0013L	Watchdog test failed
CIFX_DEV_SYSERR	0x800C0015L	Error in handshake flags
CIFX_DEV_MAILBOX_FULL	0x800C0016L	Send mailbox is full
CIFX_DEV_PUT_TIMEOUT	0x800C0017L	Send packet timeout
CIFX_DEV_GET_TIMEOUT	0x800C0018L	Receive packet timeout
CIFX_DEV_GET_NO_PACKET	0x800C0019L	No packet available
CIFX_DEV_MAILBOX_TOO_SHORT	0x800C001AL	Mailbox too short
CIFX_DEV_RESET_TIMEOUT	0x800C0020L	Reset command timeout
CIFX_DEV_NO_COM_FLAG	0x800C0021L	COM-flag not set
CIFX_DEV_EXCHANGE_FAILED	0x800C0022L	IO data exchange failed
CIFX_DEV_EXCHANGE_TIMEOUT	0x800C0023L	IO data exchange timeout
CIFX_DEV_COM_MODE_UNKNOWN	0x800C0024L	Unknown IO exchange mode
CIFX_DEV_FUNCTION_FAILED	0x800C0025L	Device function failed
CIFX_DEV_DPMSIZE_MISMATCH	0x800C0026L	DPM size differs from configuration
CIFX_DEV_STATE_MODE_UNKNOWN	0x800C0027L	Unknown state mode
CIFX_DEV_HW_PORT_IS_USED	0x800C0028L	Device is still accessed
CIFX_DEV_CONFIG_LOCK_TIMEOUT	0x800C0029L	Configuration locking timeout
CIFX_DEV_CONFIG_UNLOCK_TIMEOUT	0x800C002AL	Configuration unlocking timeout
CIFX_DEV_HOST_STATE_SET_TIMEOUT	0x800C002BL	Set HOST state timeout
CIFX_DEV_HOST_STATE_CLEAR_TIMEOUT	0x800C002CL	Clear HOST state timeout
CIFX_DEV_INITIALIZATION_TIMEOUT	0x800C002DL	Timeout during channel initialization
CIFX_DEV_BUS_STATE_ON_TIMEOUT	0x800C002EL	Set Bus ON Timeout
CIFX_DEV_BUS_STATE_OFF_TIMEOUT	0x800C002FL	Set Bus OFF Timeout
CIFX_DEV_MODULE_ALREADY_RUNNING	0x800C0040L	Module already running
CIFX_DEV_MODULE_ALREADY_EXISTS	0x800C0041L	Module already exists

Table 61: Generic Device Error Codes

10.7 Error Codes netX Driver

10.7.1 CIFS API Transport Error Codes

Error Code (Definition)	Value	Description
CIFS_TRANSPORT_SEND_TIMEOUT	0x800D0001L	Time out while sending data
CIFS_TRANSPORT_RECV_TIMEOUT	0x800D0002L	Time out waiting for incoming data
CIFS_TRANSPORT_CONNECT	0x800D0003L	Unable to communicate to the device no answer
CIFS_TRANSPORT_ABORTED	0x800D0004L	Transfer has been aborted due to keep alive timeout or interface detachment
CIFS_CONNECTOR_FUNCTIONS_READ_ERROR	0x800D0010L	Error reading the connector functions from the DLL
CIFS_CONNECTOR_IDENTIFIER_TOO_LONG	0x800D0011L	Connector delivers an identifier longer than 6 characters
CIFS_CONNECTOR_IDENTIFIER_EMPTY	0x800D0012L	Connector delivers an empty identifier
CIFS_CONNECTOR_DUPLICATE_IDENTIFIER	0x800D0013L	Connector identifier already used

Table 62: CIFS API Transport Error Codes

10.7.2 CIFS API Transport Header State Error Codes

Error Code (Definition)	Value	Description
CIFS_TRANSPORT_ERROR_UNKNOWN	0x800E0001L	Unknown error code in transport header
CIFS_TRANSPORT_CHECKSUM_ERROR	0x800E0002L	CRC16 checksum failed
CIFS_TRANSPORT_LENGTH_INCOMPLETE	0x800E0003L	Transaction with incomplete length detected
CIFS_TRANSPORT_DATA_TYPE_UNKNOWN	0x800E0004L	Device does not support requested data type
CIFS_TRANSPORT_DEVICE_UNKNOWN	0x800E0005L	Device not available unknown
CIFS_TRANSPORT_CHANNEL_UNKNOWN	0x800E0006L	Channel not available unknown
CIFS_TRANSPORT_SEQUENCE	0x800E0007L	Sequence error detected
CIFS_TRANSPORT_BUFFER_OVERFLOW	0x800E0008L	Buffer overflow detected
CIFS_TRANSPORT_RESOURCE	0x800E0009L	Device signals out of resources
CIFS_TRANSPORT_KEEPALIVE	0x800E000AL	Device connection monitoring error (Keep alive)
CIFS_TRANSPORT_DATA_TOO_SHORT	0x800E000BL	Received transaction data too short

Table 63: CIFS API Transport Header State Error Codes

10.8 ODM Error Codes DBM V4

ODM Error Codes DBM V4		
Error Code (Definition)	Value	Description
CDBM_E_MD5_INVALID	0XC004C810	Checksum invalid
CDBM_E_INTERNALERROR	0XC004C811	Internal Error
CDBM_W_WRITEREGISTRY	0X8004C812	Error writing to the registry
CDBM_E_UNEXPECTED_VALUE_IN_OLD_HEADER_FORMAT	0XC004C813	Error in a file containing the old DBM Header format.
CDBM_E_CHECKSUM_INVALID	0XC004C814	The Checksum of the old Header is invalid
CDBM_E_DB_ALREADY_LOADED_FORMAT	0XC004C815	A database is already loaded
CDBM_E_NO_VALID_TRANSACTION	0XC004C816	No valid transaction handle given
CDBM_E_STD_STRUCT_ERROR	0XC004C817	An error occurred during validation of data
CDBM_E_UNSUPPORTED_DATA_TYPE_FORMAT	0XC004C818	Unsupported DataType
CDBM_W_CLASS_DELETED_FORMAT	0X8004C819 (Warning)	Using an Object which is marked as deleted
CDBM_W_CLIENT_DISCONNECTED	0X8004C81A (Warning)	A Client has already an outstanding connection to a Table. The connection is now destroyed.
CDBM_E_STRUCTURE_DEFINITION_INVALID	0XC004C81B	A structure definition of an Element in a Table is invalid
CDBM_E_NO_DATA_AVAILABLE	0XC004C81C	No data available for this operation
CDBM_E_NO_VALID_STRUCTURE	0XC004C81D	No valid structure available for this operation
CDBM_E_NO_TOGGLE_STRING_FOUND	0XC004C81E	No Toggle string found for this number
CDBM_E_ELEMENT_OUT_OF_RANGE	0XC004C81F	An element wasn't found in the Record of a Table
CDBM_E_ELEMENT_NOT_IN_TABLE	0XC004C820	The element is not part of the Table
CDBM_E_CANNOT_CONVERT_INTO_CLIENT_TYPE	0XC004C821	The data can't be converted into the Client type
CDBM_E_TRANSACTION_ALREADY_OPEN	0XC004C822	A transaction is already open. Please close this one first before opening a new one.
CDBM_I_OLD_WITHOUT_HEADER	0X4004C823 (Informational)	Use of an old DBM file Format without Header
CDBM_E_HR_FROM	0XC004C824	An HRESULT was received from a Subroutine
CDBM_E_PARAMETER	0XC004C825	A Parameter is invalid
CDBM_E_NOTIMPL	0XC004C826	Method is currently not implemented
CDBM_E_OUTOFMEMORY	0XC004C827	Out of memory
CDBM_E_NO_OPEN_TRANSACTION	0XC004C828	No transaction open
CDBM_E_NO_CONTENTS	0XC004C829	No contents available
CDBM_REC_NO_NOT_FOUND	0XC004C82A	Record not found
CDBM_STRUCTURE_ELEMENT_NOT_FOUND	0XC004C82B	Element of the Structure not found
CDBM_E_NO_MORE_RECORDS_IN_TABTYPE	0XC004C82C	Table type 3 can contain only one record
CDBM_E_WRITE	0XC004C82D	The data in the VARIANT must be given in a SafeArray
CDBM_E_WRITE_NO_PARRAY	0XC004C82E	The VARIANT contains no valid [parray] element

ODM Error Codes DBM V4		
Error Code (Definition)	Value	Description
CDBM_E_WRITE_CANT_ACCESS_DATA	0XC004C82F	Unable to access SafeArray Data in the VARIANT
CDBM_E_WRITE_DATA	0XC004C830	To write the data of this Element it must be given as a BSTR, or as an Array of VT_UI1/VT_I1
CDBM_E_WRITE_BSTR_E1	0XC004C831	The BSTR string must have an even length.
CDBM_E_WRITE_BSTR_E2	0XC004C832	The BSTR string must contain only hex digits (0..9 and a/A..f/F).
CDBM_E_WRITE_CANT_INTERPRET_ARRAY	0XC004C833	Unable to interpret data in the SafeArray.
CDBM_E_WRITE_VT_ERROR	0XC004C834	Data type in the SafeArray is not VT_UI1 or VT_I1.
CDBM_E_WRITE_LENGTH	0XC004C835	Data length is invalid for write operation of this type.
CDBM_WRITE_ELEMENT	0XC004C836	Element not found in the Record of the Table
CDBM_MIN_MAX_ERROR	0XC004C837	Can't write data because of min underflow or max overflow
CDBM_TABLE_EXIST	0XC004C838	Table already exist in the database
CDBM_MIN_MAX_INVALID	0XC004C839	The Min value is greater than the Max Value
CDBM_DEF_MIN_MAX_INVALID	0XC004C83A	The Default Value is not in the range between the Min value and the Max Value
CDBM_CANT_CHANGE_STRUCTURE_WHILE_RECORDS_EXIST	0XC004C83B	It's not allowed to change the structure while Records exist in the Table
CDBM_NEW_STRUCT_NEEDS_TYPE	0XC004C83C	In a newly added structure the data type must be set also
CDBM_VALUE_ERROR	0XC004C83D	Range error while validating a value
CDBM_DATATYPE_UNSUPPORTED_IN_RCS	0XC004C83E	The data type is unsupported in the RCS file format
CDBM_I_COUNT_OF_TABLES_EXCEEDS_RCS_RANGE	0X4004C83F (Informational)	The count of Tables exceeds the RCS range of Tables. This can cause problems if the file is downloaded to RCS Systems
CDBM_I_COUNT_OF_TABLES_EXCEEDS_OLDDBM_RANGE	0X4004C840 (Informational)	The count of Tables exceeds the DBM32.DLL range of Tables. This can cause problems if the file is used with older Tools using the DBM32.DLL
CDBM_UNSUPPORTED_DATATYPE_IN_RCS_MODE	0XC004C841	The Data type is not compatible with the old database format
CDBM_WRITE_UNSTRUCTURED_1	0XC004C842	The data of an unstructured record can only be written with the 'Write' Method not with 'WriteElement'.
CDBM_READ_UNSTRUCTURED_1	0XC004C843	The data of an unstructured record can only be read with the 'Read' Method not with 'ReadElement'
CDBM_WRITE_DATA_LENGTH_INVALID	0XC004C844	The given data length doesn't correspond with the expected data length.
CDBM_UNKNOWN_VIEW_MODE	0XC004C845	The View Mode is unknown.
CDBM_E_DIAG_TABLE	0XC004C846	It doesn't make much sense to add or delete records from a diagnostic table because those changes are never saved.

ODM Error Codes DBM V4		
Error Code (Definition)	Value	Description
CDBM_E_ADR_STRING_ERROR	0XC004C847	The given Address string doesn't fit the required format of this type where all address bytes must be in the range between 0 and FF
CDBM_ERROR_FROM_VAR_CHANGE_TYPE	0XC004C848	Function VariantChangeType return an error when trying to convert the Parameter
CDBM_E_MINERROR	0XC004C849	Error while comparing the Value with the lower range
CDBM_E_MAXERROR	0XC004C84A	Error while comparing the Value with the upper range
CDBM_E_RANGE_ERROR	0XC004C84B	Value out of Range
CDBM_E_TABLE_TYPE1	0XC004C84C	Table type 1 doesn't have a unique record length over all records
CDBM_E_TABLE_TYPE3_ADDREC	0XC004C84D	Table type 3 doesn't allow to insert more than one Record
CDBM_E_TABTYPE1	0XC004C84E	It's not allowed to insert more Records than structure definitions in Table Type 1
CDBM_E_TOGGLE_NOT_FOUND	0XC004C84F	Could not find the string for this value in the list of valid toggle strings
CDBM_E_TOGGLE_VALUE_IS_EMPTY_STRING	0XC004C850	The toggle string for this value is empty.
CDBM_VARIANT2BYTEARRAY_ERROR	0XC004C851	Error during conversion of Variant to byte array
CDBM_E_SET_ELEM_PROP_DEPENDENCY	0XC004C852	The Toggle Type needs also the additional string and the additional number entries in the Method
CDBM_E_TABTYPE1_REC_DOESNT_CORRESPOND_WITH_ELEMENT	0XC004C853	When reading the records of Table type 1 elementwise the record number must correspond with the element number
CDBM_TABTYPE1_NO_DATA_FOUND_FOR_RECORD	0XC004C854	When reading the records of Table type 1 and structure definitions are present it's assumed that for each structure element a corresponding record must exist
CDBM_E_TABTYPE1_WRITE_ELEMENT_NE_RECORD	0XC004C855	When writing the records of Table type 1 elementwise and structure definitions are present it's only allowed to write the corresponding element number in each record
CDBM_E_TABTYPE1_WRITE_ELEMENT_NOT_FOUND	0XC004C856	When writing the records of Table type 1 with an array and structure definitions are present it's assumed that a corresponding element number of this record exist
CDBM_I_TABLE_NAME_EXCEEDS_RCS_RANGE	0X4004C857 (Informational)	The Table name exceeds the maximum length of RCS compatible Table names
CDBM_W_CUT_STRING	0X8004C858 (Warning)	The string exceeds the maximum length and will be limited to the maximum length
CDBM_I_STRING_TOO_SHORT	0X4004C859 (Informational)	The string is below the minimum length. The minimum length will be reduced.
CDBM_I_STRING_TOO_LONG	0X4004C85A (Informational)	The string is exceeding the maximum. The maximum length will be extended.
CDBM_E_STRING_TOO_SHORT	0XC004C85B (Error)	The string is below the minimum length.
CDBM_E_STRING_TOO_LONG	0XC004C85C (Error)	The string is exceeding the maximum length

ODM Error Codes DBM V4		
Error Code (Definition)	Value	Description
CDBM_E_WRONG_TYPE_FOR_WRITE	0XC004C85D	Writing on the Element type with the given Data type is not implemented
CDBM_E_NO_APPEND_IN_STRUCTURED_RECORDS	0XC004C85E	Method IDbmRecord::AppendData is not allowed for structured records
CDBM_E_DATA_UNAVAILABLE	0XC004C85F	No data available
CDBM_E_CANT_CONVERT_INTO	0XC004C860	Unable to convert the value into the Element type
CDBM_E_DBM_FILE_OVERFLOW	0XC004C861	You try to write a RCS like database which needs too much bytes
CDBM_E_PW_ERROR	0XC004C862	Password not correct
CDBM_E_FILELENGTH_CORRUPT	0XC004C863	The file length doesn't correspond to the length given in the Header.
CDBM_E_STRUCT_TYPE	0XC004C864	Error in the file.
CDBM_E_MD5SUM_INVALID	0XC004C865	MD5 sum invalid
CDBM_E_STRUCT_LENGTH	0XC004C866	Error in the expected and given structure length at a specific offset in the file.
CDBM_E_APPEND	0XC004C867	Append of data is only allowed if the Record contains only one data field and the field type will support this
CDBM_APPEND_NOT_SUPPORTED	0XC004C868	Append of Data not supported by this filed type
CDBM_DATA_TYPE_APPEND_ERROR	0XC004C869	Can't append Data of this type.
CDBM_E_UNSTRUCTURED_TABLE_DOESNT_SUPPORT_LENGTH	0XC004C86A	A Table without structure information doesn't support a record length
CDBM_E_DISABLED_WHILE_TRANSACTION_IS_OPEN	0XC004C86B	The Method is disabled while a transaction is open. Please close this one first and call the Method again.
CDBM_E_UNABLE_TO_CALL_READ_ON_LINKED_LIST	0XC004C86C	The Method is disabled on a LinkedList type. Please use the IRecordCollection on this type.
CDBM_E_ELEMENT_HAS_NO_SUBSTRUCTURE	0XC004C86D	An Element from a Table has no substructure
CDBM_STRUCT_ERROR_FROM_VAR_CHANGE_TYPE	0XC004C86E	Error from calling VariantChangeType
CDBM_E_FOREIGNKEY_DEF	0XC004C86F	The definition of a FOREIGNKEY must contain the name of the related Table in the description and this Table must exist at this time
CDBM_E_FOREIGNKEY_REF_TAB	0XC004C870	The description of a FOREIGNKEY must refer to a Table of type 'eDbmTableTypeLinkedList'
CDBM_E_KEY	0XC004C871	To create a Record Collection with a KEY it's necessary to have the data type KEY at the first position in all Records of the searched Table
CDBM_E_KEY_TABLE_TYPE	0XC004C872	This Method needs a Table of type 'eDbmTableTypeLinkedList'
CDBM_DATATYPE_NOT_IMPLEMENTED	0XC004C873	This data type is currently not implemented
CDBM_INSERT_POS_NOT_FOUND	0XC004C874	The position of the Record where the new one should be inserted wasn't found
CDBM_E_INSERT_REC_QI	0XC004C875	Error during insertion of a Record
CDBM_E_TAB_PROP	0XC004C876	Invalid Property in Table
CDBM_E_KEY_NOT_FOUND	0XC004C877	The KEY wasn't found in the Table

ODM Error Codes DBM V4		
Error Code (Definition)	Value	Description
CDBM_E_KEY_INVALID	0XC004C878	The KEY is invalid for this operation

Table 64: ODM Error Codes DBM V4

11 Appendix

11.1 User Rights

User-rights are set within the FDT-container. Depending on the level the configuration is accessible by the user or read-only.

To access the **Settings**, **Configuration** and **Diagnosis** panes of the PROFINET IO Controller DTM you do not need special user rights. Also all users can select the decimal or hexadecimal Display mode or sort table entries.



Note: To edit, set or configure the parameters of the **Settings** and **Configuration** panes, you need user rights for *Maintenance*, for *Planning Engineer* or for *Administrator*.

The following tables give an overview of the user right groups and which user rights you need to configure the single parameters.

11.1.1 Settings

	Observer	Operator	Maintenance	Planning Engineer	Administrator
<i>Driver</i>	D	D	X	X	X
<i>Verify or adapt Driver Settings</i>	-	-	X	X	X
<i>Configuring netX Driver</i>	-	-	X	X	X
<i>Device Assignment</i>	D	D	X	X	X
<i>Scanning for Devices</i>	-	-	X	X	X
<i>Selecting the Device (with or without firmware)</i>	-	-	X	X	X
<i>Selecting the Device once more (with Firmware)</i>	-	-	X	X	X
<i>Firmware Download</i>	D	D	X	X	X
<i>Ethernet Devices</i>	D	D	X	X	X

Table 65: Settings (D = Displaying, X = Editing, Configuring)

11.1.2 Configuration

	Observer	Operator	Maintenance	Planning Engineer	Administrator
<i>Controller Network Settings</i>	D	D	X	X	X
<i>Device Table</i>	D	D	X	X	X
<i>IP Address Table</i>	D	D	X	X	X
<i>Process Data</i>	D	D	X	X	X
<i>Address Table</i>	D	D	X	X	X
<i>FSU/Port-Settings</i>	D	D	X	X	X
<i>Stations Timing</i>	D	D	X	X	X
<i>Controller Settings</i>	D	D	X	X	X

Table 66: Configuration (D = Displaying, X = Editing, Configuring)

11.2 Name encoding

The name is an OctetString with 1 to 240 octets. A name can contain one or more labels separated by a dot [.].

The definition of IETF RFC 5890 and the following syntax applies:

- 1 or more labels, separated by [.]
- Total length is 1 to 240
- Label length is 1 to 63
- Labels consist of [a-z0-9-]
- Labels do not start with [-]
- Labels do not end with [-]
- Labels do not use multiple concatenated [-] except for IETF RFC 5890
- The first label does not have the form "port-xyz" or "port-xyz-abcde" with a, b, c, d, e, x, y, z = 0..9, to avoid wrong similarity with the field AliasNameValue
- Station names do not have the form a.b.c.d with a, b, c, d = 0...999

11.3 References

- [1] Device Type Manager (DTM) Style Guide, Version 1.0 ; FDT-JIG - Order No. <0001-0008-000>
- [2] PROFINET IO Controller V3.2.0 Protocol API Manual, Revision 6, Hilscher GmbH 2016
- [3] Application Layer protocol for decentralized periphery and distributed automation, Technical Specification for PROFINET, Version 2.3Ed2MU2, February 2015, Order No: 2.722, PROFIBUS Nutzerorganisation e.V., Karlsruhe
- [4] RFC 4836; ("Request For Comments"; <http://tools.ietf.org/rfc/rfc4836.txt>)

11.4 List of Figures

Figure 1: Dialog Structure of the PROFINET IO-Controller DTM	14
Figure 2: Navigation Area	15
Figure 3: Status Bar – Status Fields 1 to 6	18
Figure 4: Status Bar Display Examples	18
Figure 5: Default Driver ‚cifX Device Driver’ for PC cards cifX	32
Figure 6: Default Driver ‚cifX Device Driver’ for PC cards cifX (example)	32
Figure 7: Default Driver ‚netX Driver’ for Hilscher devices except for PC cards cifX (example)	32
Figure 8: Manual Selection of multiple drivers (Example)	33
Figure 9: netX Driver > USB/RS232 Connection	36
Figure 10: netX Driver > TCP Connection	39
Figure 11: Device Assignment - detected Devices (* The name of the device class is displayed.) – Example for a device without firmware	41
Figure 12: Device Assignment - detected Devices (* The name of the device class is displayed.) Example for Devices without Firmware	43
Figure 13: Device Assignment - Selecting the Device (* The name of the device class is displayed.) – Example for a device without firmware / one Device is selected	44
Figure 14: Device Assignment - Selecting the Device (* The name of the device class is displayed.) – Example for Devices with and without Firmware / one Device is selected	45
Figure 15: Device Assignment - Selecting the Device (* The name of the device class is displayed.) – Example for a device with firmware / one Device is selected	46
Figure 16: Firmware Download	47
Figure 17: Error Message ‘The device is not assigned to the hardware!’	48
Figure 18: Window ‘Select Firmware File’ (Example CIFX)	49
Figure 19: Request Select Firmware File - Example Invalid Firmware	51
Figure 20: Request - Do you really want to download the firmware?	52
Figure 21: Firmware Download - Progress Bar	52
Figure 22: Clock Symbol and Hook Symbol green	53
Figure 23: Firmware Download – Download	53
Figure 24: Licensing	54
Figure 25: Ethernet Devices Pane	55
Figure 26: Ethernet Devices Pane - Selection of the Ethernet Connection	56
Figure 27: Ethernet Devices Pane - Searching and selecting Devices	57
Figure 28: Ethernet Devices Pane - Search Device within Table	58
Figure 29: Ethernet Devices Pane - Selecting Device	59
Figure 30: Ethernet Devices Pane - Overview on Configuration	60
Figure 31: Ethernet Devices Pane - Use Configuration of	61
Figure 32: Ethernet Devices Pane - Setting new Device Name	62
Figure 33: Ethernet Devices Pane - Use Name of Station	64
Figure 34: Ethernet Devices Pane - Setting new IP Address	65
Figure 35: Ethernet Devices Pane – Enter new IP Address, Subnet Mask and Gateway Address	65
Figure 36: Ethernet Devices Pane – Set Address	66
Figure 37: Ethernet Devices Pane – The new current IP Address, Subnet Mask and Gateway Address are shown.	66
Figure 38: Ethernet Devices Pane - Use IP Address	67
Figure 39: Ethernet Devices Pane – Set Address	68
Figure 40: Ethernet Devices Pane – The new current IP Address, Subnet Mask and Gateway Address are shown.	68
Figure 41: Ethernet Devices Pane - Signal, Factory Defaults	69
Figure 42: Configuration > Controller Network Settings	76
Figure 43: Configuration > Device Table (*The name of the PROFINET IO-Device is displayed.)	79
Figure 44: Configuration > IP Address Table	81
Figure 45: Process Data (*The name of the Device device is displayed.)	83

Figure 46: Configuration > Isochronous Modules (Example isochronous Device and configured Modules and Submodules)	84
Figure 47: Configuration > Address Table (*The name of the PROFINET IO-Controller device is displayed.)	87
Figure 48: Configuration > Address Table - Auto Addressing	88
Figure 49: Configuration > Address Table - Display Mode	88
Figure 50: Configuration > Address Table – Input / Output (*The name of the PROFINET IO-Device is displayed.)	89
Figure 51: Configuration > Address Table – Address Overlap	90
Figure 52: FSU/Port-Settings (*The name /**Name of Station of the Device device is displayed.)	91
Figure 53: Configuration > Stations Timing, Example 'Unsynchronized (RT)' by default	93
Figure 54: Configuration > Stations Timing, Example 'Synchronized (IRT)' (editable)	94
Figure 55: Configuration > Stations Timing, Example 'Synchronized (IRT)', Isochronous mode	94
Figure 56: Configuration > Stations Timing, Example 'Unsynchronized (RT)'	97
Figure 57: Configuration > Stations Timing > 'Updating time' to be adjusted, Example 'Unsynchronized (RT)'	97
Figure 58: Configuration > Stations-Timing > 'Updating time' adjusted, Example 'Unsynchronized (RT)'	98
Figure 59: Configuration > Stations-Timing > 'Watchdog' to be adjusted, Example 'Unsynchronized (RT)'	98
Figure 60: Configuration > Stations-Timing, Example 'Synchronized (IRT)'	99
Figure 61: Configuration > Stations-Timing > RT mode to be selected, Example 'Synchronized (IRT)'	99
Figure 62: Configuration > Stations-Timing > RT mode selected, Example 'Synchronized (IRT)'	100
Figure 63: Configuration > Stations-Timing > Send-Clock, Example 'Synchronized (IRT)'	100
Figure 64: Configuration > Stations-Timing > 'Updating time' to be adjusted, Example 'Synchronized (IRT)'	101
Figure 65: Configuration > Stations-Timing > 'Updating time' adjusted, 'Synchronized (IRT)'	101
Figure 66: Configuration > Stations-Timing > 'Watchdog' to be adjusted, Example 'Synchronized (IRT)'	102
Figure 67: Configuration > Stations-Timing > 'Watchdog' adjusted, Example 'Synchronized (IRT)'	102
Figure 68: Configuration > Stations-Timing, Example 'Synchronized (IRT)', Isochronous mode	103
Figure 69: Configuration > Stations-Timing > Send-Clock, Example 'Synchronized (IRT)', Isochronous mode	103
Figure 70: Configuration > Stations-Timing > 'Updating time' to be adjusted, Example 'Synchronized (IRT)', Isochronous mode	104
Figure 71: Configuration > Stations-Timing > 'Updating time' adjusted, Example 'Synchronized (IRT)', Isochronous mode	104
Figure 72: Configuration > Stations-Timing > 'Watchdog' to be adjusted, Example 'Synchronized (IRT)', Isochronous mode	105
Figure 73: Configuration > Stations-Timing > 'Watchdog' adjusted, Example 'Synchronized (IRT)', Isochronous mode	105
Figure 74: Configuration > Controller Settings	106
Figure 75: Controller Settings > Start of Bus Communication	107
Figure 76: Controller Settings > Application Monitoring	107
Figure 77: Controller Settings > Port Settings	108
Figure 78: Starting 'Network Scan' (Example)	112
Figure 79: Scan Response dialog of the Controller DTM (Example)	113
Figure 80: Scan Response dialog of the Controller DTM (Example)	114
Figure 81: Scan Response dialog of the Controller DTM (Example)	115
Figure 82: Query for generating the module configuration (Example)	117
Figure 83: 'Download' current Configuration to PROFINET IO-Controller (Example)	118
Figure 84: 'Upload' the Device Configuration (Example)	119
Figure 85: Query for generating the module configuration (Example)	120
Figure 86: Upload succeeded (Example)	121
Figure 87: Uploaded Modules (Example)	122
Figure 88: Upload failed from device (Example)	124
Figure 89: netDevice Message: Download	126
Figure 90: License Pane	129

Figure 91: License Pane - License Type	130
Figure 92: License Pane – License Type / Master protocols	130
Figure 93: License Pane – License Type / Utilities	130
Figure 94: License Pane - Request Form, please fill out / Device Information	133
Figure 95: License Pane - Request Form, please fill out / License Type	134
Figure 96: License Pane - Request Form, please fill out / Mandatory data	134
Figure 97: License Pane – Selecting the Subsidiary / Ordering / Contacts	135
Figure 98: License Pane – placing the order by E-mail	136
Figure 99: Example: Order E-Mail License request	136
Figure 100: License Pane - placing the order by Fax or by Telephone	137
Figure 101: Example: Order Data Form PrintOrderRequest	137
Figure 102: License Pane – Fax Number of the selected Subsidiary	138
Figure 103: License Pane – Telephone Number of the selected Subsidiary	138
Figure 104: License Pane - Ordering by exported File and E-Mail	139
Figure 105: License Pane - Download License	140
Figure 106: General Diagnosis	142
Figure 107: Master Diagnosis	144
Figure 108: Station diagnosis	145
Figure 109: Firmware Diagnosis (Example)	146
Figure 110: Extended Diagnosis > [Folder Name] > Task Information Example Display	148
Figure 111: Extended Diagnosis > [Folder Name] > IniBatch Status Example Display	149
Figure 112: Extended Diagnosis > PNM_AP > Configuration State	150
Figure 113: Extended Diagnosis > PNM_AP > Network State	151
Figure 114: Extended Diagnosis > PNM_AP > Communication State	152
Figure 115: Extended Diagnosis > PNM_AP > Most recent Logbook Entries	153
Figure 116: Extended Diagnosis > PNM_AP > PROFINET Interface State	154
Figure 117: Extended Diagnosis > PNM_AP > PROFINET Switch Diagnosis	155
Figure 118: Extended Diagnosis > PNM_AP > System State	155
Figure 119: Packet Monitor	157
Figure 120: Send > Packet Header and Send Data	158
Figure 121: Packet Header and Receive Data	159
Figure 122: IO Monitor	160
Figure 123: Window 'Process Image Monitor'	161

11.5 List of Tables

Table 1: Descriptions Dialog Pages	6
Table 2: List of Revisions	7
Table 3: General Device Information	15
Table 4: Overview Dialog Panes	16
Table 5: OK, Cancel, Apply and Help	17
Table 6: Selecting, inserting, deleting Table Line	17
Table 7: Status Bar Icons [1]	18
Table 8: Signal Words	22
Table 9: Getting started - Configuration Steps	27
Table 10: Descriptions of the Dialog Panes Settings	29
Table 11: Driver Selection List Parameters	32
Table 12: Parameters netX Driver > USB/RS232 Connection	37
Table 13: Parameters netX Driver > TCP Connection	40
Table 14: Parameters of the Device Assignment	42
Table 15: Parameter Firmware Download	47
Table 16: Parameters Select Firmware File	50
Table 17: Parameters of found Devices	57

Table 18: Descriptions of the Dialog Panes Configuration	70
Table 19: Controller Network Settings Pane Parameters	78
Table 20: Device Table Pane Parameters	80
Table 21: IP Address Table Pane Parameters	82
Table 22: Process Data	83
Table 23: Isochronous Modules Pane Parameters	85
Table 24: Address Table Pane Parameters - Inputs / Outputs	89
Table 25: FSU/Port-Settings	92
Table 26: Parameters in the 'Stations Timing' Pane	96
Table 27: Range of Value / Value for the Watchdog time	107
Table 28: Parameters Port Settings	108
Table 29: Description on the Scan Response dialog of the Controller DTM	116
Table 30: Descriptions of the Diagnosis Panes	141
Table 31: Indication General Diagnosis	143
Table 32: Parameter General Diagnosis	143
Table 33: Parameter Master Diagnosis	144
Table 34: Parameters for Station diagnosis	145
Table 35: Possible Values for the Status	145
Table 36: Description Table Task Information	146
Table 37: Descriptions of the Dialog Panes Extended Diagnosis	147
Table 38: Extended Diagnosis > [Folder Name] > Task Information	148
Table 39: Extended Diagnosis > [Folder Name] > IniBatch Status	149
Table 40: Extended Diagnosis > PNM_AP > Configuration State	150
Table 41: Extended Diagnosis > PNM_AP > Network State	151
Table 42: Extended Diagnosis > PNM_AP > Communication State	152
Table 43: Extended Diagnosis > PNM_AP > Most recent Logbook Entries	154
Table 44: Extended Diagnosis > PNM_AP > PROFINET Interface State	154
Table 45: Extended Diagnosis > PNM_AP > PROFINET Switch Diagnosis	155
Table 46: Descriptions of the Diagnosis Panes	156
Table 47: Descriptions Packet Header	158
Table 48: Descriptions Packet Header	159
Table 49: Notes to the Window 'Process Image Monitor'	162
Table 50: Overview Error Codes and Ranges	164
Table 51: RCX General Task Errors	165
Table 52: RCX Common Status & Errors Codes	166
Table 53: RCX Status & Error Codes	167
Table 54: RCX Status & Error Codes Slave State	167
Table 55: PROFIENT IO-Controller V3 Task Error Codes	170
Table 56: ODM Error Codes - General ODM Error Codes	171
Table 57: ODM Error Codes - General ODM Driver Error Codes	172
Table 58: cifX Driver Specific ODM Error Codes	175
Table 59: Generic Error Codes	176
Table 60: Generic Driver Error Codes	177
Table 61: Generic Device Error Codes	178
Table 62: CIFS API Transport Error Codes	179
Table 63: CIFS API Transport Header State Error Codes	179
Table 64: ODM Error Codes DBM V4	184
Table 65: Settings (D = Displaying, X = Editing, Configuring)	185
Table 66: Configuration (D = Displaying, X = Editing, Configuring)	185

11.6 Glossary

DCP

Discovery and Configuration Protocol.

The Discovery and basic Configuration Protocol (DCP) is a protocol for identifying and configuring devices which is defined within the PROFINET specification.

DNS

Domain Name Service.

DTM

Device Type Manager.

The Device Type Manager (DTM) is a software module with graphical user interface for the configuration or for diagnosis of device.

Ethernet

A networking technology used both for office and industrial communication via electrical or optical connections. It has been developed and specified by the Intel, DEC and XEROX. It provides data transmission with collision control and allows various protocols. As Ethernet is not necessarily capable for real-time application, various real-time extensions have been developed (Industrial Ethernet, Real-Time Ethernet).

FDT

Field Device Tool

FDT specifies an interface, in order to be able to use DTM (Device Type Manager) in different applications of different manufacturers.

Gateway Address

The IP address of a Gateway

GSDML

GSDML = Generic Station Description Markup Language.

IP

Internet Protocol.

IP belongs to the TCP/IP family of protocols and is defined in RFC791. It is based on layer 3 of the ISO/OSI 7 layer model of networking.

It is a connectionless protocol, i.e. you do not need to open a connection to a computer before sending an IP data packet to it. Therefore IP is not able to guarantee that the IP data packets really arrive at the recipient. On IP level neither the correctness of data nor the consistence and completeness are checked.

IP defines special addressing mechanisms, see IP Address.

IP Address

Address within IP (the Internet Protocol, part of TCP/IP).

An IP address is an address identifying a device or a computer within a network using the IP protocol. IP addresses are defined as a 32 bit number. Usually, for ease of notation the IP address is divided into four 8 bit numbers which are represented in decimal notation and separated by points:

a.b.c.d

where a.b.c.d are each integer values between 0 and 255.

Example: 192.168.30.15

However, not all combinations are allowed, some are reserved for special purposes.

The IP address 0.0.0.0 is defined as invalid.

IRT

Isochronous-real-time

MAC-ID

MAC = Media Access Control

A MAC-ID is on delivery a unique (physical) Ethernet address of the device.

MAC-IDs are defined as a 48 bit number. Usually, for ease of notation the MAC-ID address is divided into six 8 bit numbers which are represented in hexadecimal notation and separated by "minus"-signs (-):

A-B-C-D-E-F

where A-B-C-D-E-F are each integer values between 0 and 0xFF=255.

Example: 00-02-A2-20-91-18

MAU

Medium Attachment Unit

Module

Hardware or logical component of a physical device.

Name of Station

The **Name of Station** is defined by the DNS compatible device name in the GSD file. It can be modified according to the DNS name specification. If the PROFINET IO device does use the name baptism the **Name of Station** is set by the PROFINET IO device.

Network Mask

Bit mask for separation between network part and device part in IP addresses in the network protocol IPv4.

The network part must be the identical for all devices of the corresponding network, while the device part is different.

This is used to specify whether the device searches for a given IP address in its own network (device part) or can reach the IP address in other networks via router (network part).

See also https://en.wikipedia.org/wiki/IPv4_subnetting_reference

Example: 255.255.255.0 (network part 255 255 255, device part 0)

ODMV3

The Online-Data-Manager Version 3 (ODMV3) is an application interface. The ODMV3 works as a server, which can be run as an out-proc server or system service. Its task is to provide different applications (e. g. SYCON.net), access to multiple devices and even share one device amongst several applications.

PROFINET

A communication system for Industrial Ethernet designed and developed by PROFIBUS & PROFINET International (PI). It uses some mechanisms similar to those of the PROFIBUS field bus.

PROFINET IO

PROFINET IO (Input - Output) has been created for the connection of decentralized peripherals to a controller.

PROFINET IRT

PROFINET protocol level for PROFINET IO applications in drive systems with cycle times of less than 1 ms; IRT = Isochronous Real-Time

PROFINET IO Controller

A PROFINET control unit responsible for the defined run-up of an I/O subsystem and the cyclic or acyclic data exchange.

PROFINET IO Device

A PROFINET field device that cyclically receives output data from its PROFINET IO-Controller and responds with its input data.

RPC

Remote Procedure Call

Mechanism for calling up a code on another computer in the network (standard used by PROFINET)

SCADA

Supervisory Control and Data Acquisition

A concept for control and data acquisition of technical processes

Slot

Address of a structural unit within a PROFINET IO device.

Subslot

Subslot address of a structural unit within a slot.

Submodule

Hardware or logical component of a module.

11.7 Contacts

Headquarters

Germany

Hilscher Gesellschaft für
Systemautomation mbH
Rheinstrasse 15
65795 Hattersheim
Phone: +49 (0) 6190 9907-0
Fax: +49 (0) 6190 9907-50
E-Mail: info@hilscher.com

Support

Phone: +49 (0) 6190 9907-99
E-Mail: de.support@hilscher.com

Subsidiaries

China

Hilscher Systemautomation (Shanghai) Co. Ltd.
200010 Shanghai
Phone: +86 (0) 21-6355-5161
E-Mail: info@hilscher.cn

Support

Phone: +86 (0) 21-6355-5161
E-Mail: cn.support@hilscher.com

France

Hilscher France S.a.r.l.
69500 Bron
Phone: +33 (0) 4 72 37 98 40
E-Mail: info@hilscher.fr

Support

Phone: +33 (0) 4 72 37 98 40
E-Mail: fr.support@hilscher.com

India

Hilscher India Pvt. Ltd.
Pune, Delhi, Mumbai
Phone: +91 8888 750 777
E-Mail: info@hilscher.in

Italy

Hilscher Italia S.r.l.
20090 Vimodrone (MI)
Phone: +39 02 25007068
E-Mail: info@hilscher.it

Support

Phone: +39 02 25007068
E-Mail: it.support@hilscher.com

Japan

Hilscher Japan KK
Tokyo, 160-0022
Phone: +81 (0) 3-5362-0521
E-Mail: info@hilscher.jp

Support

Phone: +81 (0) 3-5362-0521
E-Mail: jp.support@hilscher.com

Korea

Hilscher Korea Inc.
Seongnam, Gyeonggi, 463-400
Phone: +82 (0) 31-789-3715
E-Mail: info@hilscher.kr

Switzerland

Hilscher Swiss GmbH
4500 Solothurn
Phone: +41 (0) 32 623 6633
E-Mail: info@hilscher.ch

Support

Phone: +49 (0) 6190 9907-99
E-Mail: ch.support@hilscher.com

USA

Hilscher North America, Inc.
Lisle, IL 60532
Phone: +1 630-505-5301
E-Mail: info@hilscher.us

Support

Phone: +1 630-505-5301
E-Mail: us.support@hilscher.com