



WARNINGS

- When connecting the PS-600G (hereafter referred to as the "PS-G")'s power cord terminals to the PS-G's Terminal Block, check first that the PS-G's power supply is completely turned OFF, via a breaker, or similar unit.
- Whenever changing the Backlight, to prevent electric shocks and burns, be sure to turn OFF the PS-G's power and wear protective gloves.
- Do not open or remodel the PS-G unit, since it may lead to a fire or electric shock.
- Do not use power beyond the PS-G's specified voltage range. Doing so may cause a fire or an electric shock.
- Do not use the PS-G in an environment where flammable gases are present, since operating the PS-G may cause an explosion.
- The PS-G uses a lithium battery for backing up its internal clock data. If the battery is incorrectly replaced (i.e. its + and - sides are reversed), the battery may explode. When changing the battery, please contact your local PS-G distributor.
- Do not use the PS-G unit as a warning device for critical alarms that can cause serious operator injury, machine damage or production stoppage. Critical alarm indicators and their control/activator units must be designed using stand-alone hardware and/or mechanical interlocks.
- Do not use PS-G touch panel switches in life-related or important disaster prevention situations. For safety related switches, such as an emergency switch, be sure to use a separate mechanical switch.
- To prevent operator injury or machine damage, be sure to design your machine operation system so that the machine will not malfunction due to a communication fault between the PS-G and its host controller.
- The PS-G is not appropriate for use with aircraft control devices, aerospace equipment, central trunk data transmission (communication) devices, nuclear power control devices, or medical life support equipment, due to these devices inherent requirements of extremely high levels of safety and reliability.
- When using the PS-G with transportation vehicles (trains, cars and ships), disaster and crime prevention devices, various types of safety equipment, non-life support related medical devices, etc. redundant and/or failsafe system designs should be used to ensure the proper degree of reliability and safety.

To prevent this unit from malfunctioning :


- Do not strike the PS-G's touch panel with a hard or heavy object, or press on the touch panel with excessive force, since it may damage the display.
- Do not install the PS-G where the temperature will exceed its specified range.
- Be sure that water, liquids or metal particles do not enter the PS-G, since it may cause a malfunction or a short circuit.
- Avoid installing the PS-G where sudden, large changes in temperature may occur. These changes may cause condensation to form inside the unit, possibly causing a malfunction.
- To prevent excessive heat from building up inside the PS-G, do not install it where its ventilation holes may be blocked. Also, do not install or store the PS-G near high temperature equipment.
- Do not install or store the PS-G in direct sunlight or where high levels of dust exist.
- Since the PS-G is a precision instrument, do not install or store it where either strong shocks or excessive vibration may occur.
- Do not install or store the PS-G in an area containing chemicals or chemical fumes.
- Do not use paint thinner or organic solvents to clean the PS-G's case or screen.
- Due to the danger of unforeseeable accidents, back up all PS-G data regularly.
- After turning this unit OFF, be sure to wait a few seconds before turning it ON again. If the unit is started too soon, it may not start up correctly.

Package Contents

The following items are included in the PS-G' package. Before using the PS-G, please confirm that all items listed here are present.

■ PS-G Unit (1)


(PS600G-T11-J1)

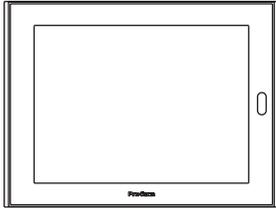

■ Moisture Resistant Gasket (1)



■ Installation Fasteners (4/set)

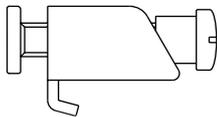

■ Installation Guide (1)

<This Guide>



■ CD-ROM (1)



This unit has been carefully packed, with special attention to quality. However, should you find anything damaged or missing, please contact your local PS-G distributor immediately.

CD-ROM Contents

The CD-ROM contains the following items.

| Item | Description |
|----------------------------|---|
| PS-600G Series User Manual | PS-G Unit PDF Manual |
| Acrobat® Reader 5.0 | Software to view PDF Files (Self-Extracting Type) |

About The PDF Manual

The CD-ROM contains the following PDF manual file.

- PS-600G Series User Manual (ps600ge.pdf)

Reading a PDF file requires installation of the Adobe Corporation's Acrobat Reader.

■ Acrobat Reader Installation:

To install the Acrobat Reader software, follow the steps given below.

- 1) This software, in the form of a self-extracting file, is located in this CD-ROM in the folder titled [reader]. Use the Explorer software to find the file [ar505enu.exe], and double-click on the file icon to begin the Reader installation.
- 2) After Installation begins, follow the instructions given on the Installation screens.


■ Viewing the PDF manual:

To view the PDF manual contained in this CD-ROM, follow the steps given below.

- 1) Use the Explorer software to locate the file [ps600ge.pdf] in the folder titled [manual].
- 2) Double-click on this file, Acrobat Reader will automatically start and the first page of the PDF manual will appear.

Acrobat® Reader Copyright© Adobe Systems Incorporated. All rights reserved. Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated. Digital's "Software Usage Conditions" do not apply to Adobe Systems' products.


1 Part Names

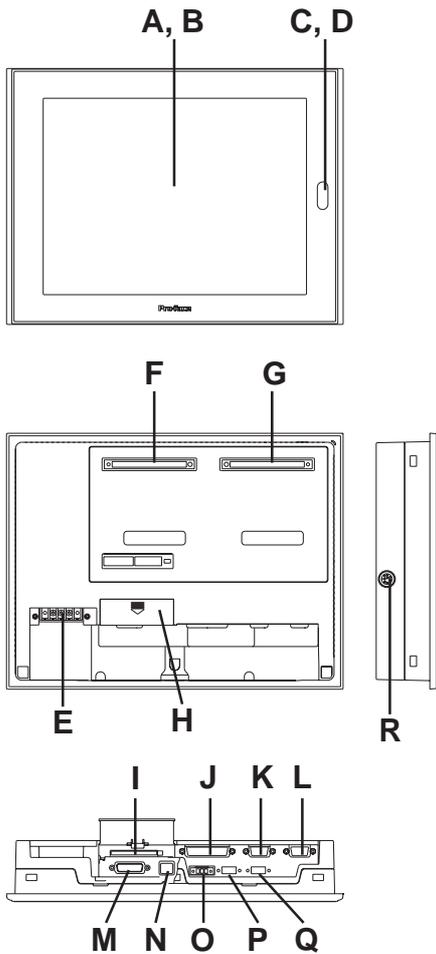

- A : Display
- B : Touch Panel
- C : Status LED
- D : IrDA Interface
- E : Power Input Terminal Block
- F : Expansion Unit Interface 1 (EXT1)
- G : Expansion Unit Interface 2 (EXT2)
- H : CF Card Cover
- I : CF Card Slot
- J : Printer interface (PIO)
- K : Serial Interface (COM 1)
- L : Serial Interface (COM 2)
- M : RAS Interface (RAS)
- N : Ethernet Interface (10BASE-T)
- O : Sound Output Terminal Block
- P : USB interface 1 (USB1)
- Q : USB interface 2 (USB2)
- R : Keyboard / Mouse Interface (KEYBOARD / MOUSE)

2 Dimensions

Unit:mm [in]

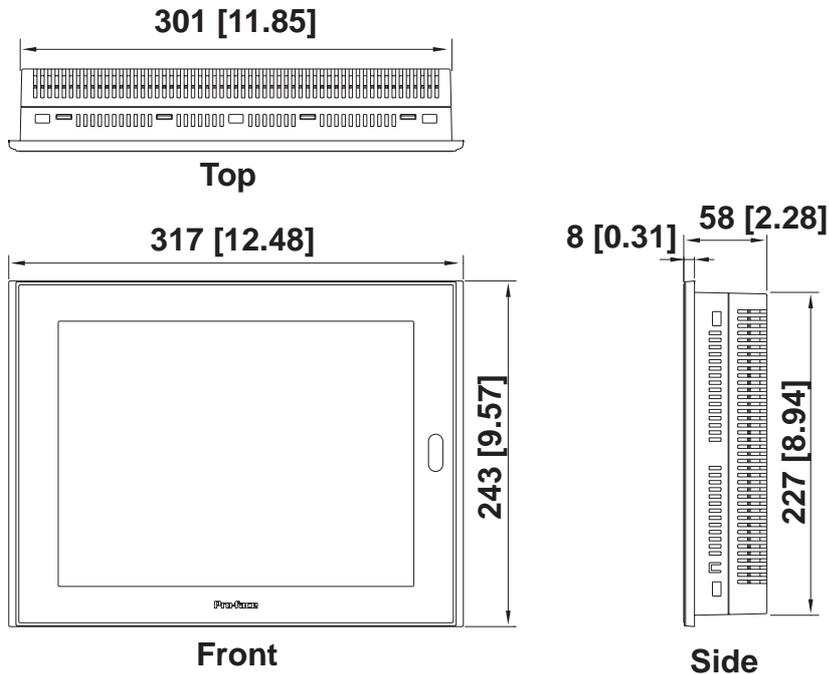

3 General Specifications

■ Electrical

| | |
|------------------------|---------------------------|
| Rated Voltage | AC100V |
| Voltage Supply Range | AC85V to AC132V 50/60Hz |
| Allowable Voltage Drop | 1 cycle or less |
| Power Consumption | 50VA or less |
| Voltage Endurance | AC1500V 20mA for 1 minute |
| Insulation Resistance | Above 10MΩ at DC500V |

■ Environment

| | |
|--|---|
| Ambient Operating Temperature (Panel Interior and Panel Face) | 0 °C to 50 °C *1 |
| Storage Temperature | -20 °C to + 60 °C |
| Ambient Humidity | 10%RH to 90%RH (non-condensing, dry bulb temperature : 39°C or less) |
| Dust | Less than 0.1mg/m ³ (Non-conductive particles) |
| Atmosphere | Free of corrosive gases |
| Air-pressure Resistance (Operating Altitude) | 800 hPa to 1114 hPa (2000 meters or lower) |
| Vibration Resistance | IEC61131-2 (JIS B 3501) compliant When vibration is NOT continuous 10Hz to 57Hz 0.075 mm, 57Hz to 150Hz 9.8m/s ² When vibration is continuous 10Hz to 57Hz 0.035 mm, 57Hz to 150Hz 4.9m/s ² X,Y,Z directions for 10 times (80min.) |
| Noise Immunity (via noise simulator) | Noise Voltage : 1500Vp-p Pulse Length : 1 microsecond Rise Time : 1 nanosecond |
| Electrostatic Discharge Immunity | Contact Discharge, 6kV (IEC61000-4-2 Level 3) |

*1 If the PS-G's operating temperature exceeds 40 °C for an extended period of time, the display quality, i.e, contrast, etc., may degrade. If, however, the operating temperature is reduced to 40°C or less, the display quality will return to normal.

■ Structural

| | |
|-------------------------------|---|
| Grounding | 100Ω or less, or your country's applicable standard |
| Ratings^{*1} | (Front face of installed unit) Equivalent to IP65f (JEM 1030) Design Type: Modular Installation method: panel mounting |
| Cooling Method | Natural air circulation |
| Weight | Approx. 3.5kg (7.7lb) |
| Dimensions (W x H x D) | 317 mm [12.48 in.] x 243 mm [9.57 in.] x 58 mm [2.28 in.] |

**1 The front face of the PS-G unit, installed in a solid panel, has been tested using conditions equivalent to the standard shown in the specification. Even though the PS-G unit's level of resistance is equivalent to this standard, oils that should have no effect on the PS-G can possibly harm the unit. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the unit for long periods of time. If the PS-G's front face protection sheet becomes peeled off, these conditions can lead to the ingress of oil into the PS-G and separate protection measures are suggested. Also, if non-approved oils are present, it may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the PS-G be sure to confirm the type of conditions that will be present in the PS-G's operating environment.*


If the installation gasket is used for a long period of time, or if the unit and its gasket are removed from the panel, the original level of the protection cannot be guaranteed. To maintain the original protection level, Pro-face recommends that you replace the installation gasket regularly.

4 Interfaces


■ Serial Interface (COM 1, COM 2)

RS-232C Interface

◆ COM1
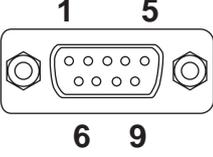
| Pin Arrangement | PIN# | Signal | Condition | Direction |
|---|------|----------|---------------------|-----------|
|  | 1 | CD | Carrier Detect | Input |
| | 2 | RD (RXD) | Receive Data | Input |
| | 3 | SD (TXD) | Send Data | Output |
| | 4 | ER (DTR) | Data Terminal Ready | Output |
| | 5 | SG | Signal Ground | - |
| | 6 | DR (DSR) | Data Set Ready | Input |
| | 7 | RS (RTS) | Request Send | Output |
| | 8 | CS (CTS) | Clear Send | Input |
| | 9 | CI (RI) | Ringing Indicate | Input |

◆ COM2
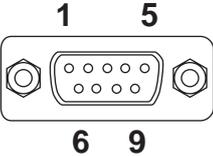
| Pin Arrangement | PIN# | Signal | Condition | Direction |
|---|------|----------|---|-----------|
|  | 1 | NC | No Connection | - |
| | 2 | RD (RXD) | Receive Data | Input |
| | 3 | SD (TXD) | Send Data | Output |
| | 4 | NC | No Connection | - |
| | 5 | SG | Signal Ground | - |
| | 6 | NC | No Connection | - |
| | 7 | RS (RTS) | Request Send | Output |
| | 8 | CS (CTS) | Clear Send | Input |
| | 9 | VCC | +5V - Power Supply for External Devices | - |

Recommended Connector: Dsub 9-pin plug XM2D-0901 <made by OMRON Corp.>

Recommended Cover : Dsub 9-pin Cover XM2S-0913 <made by OMRON Corp.>

Use Jack Screw XM2Z-0073 <made by OMRON Corp.> when needed.

Recommended Cable : CO-MA-VV-SB5P x 28AWG <made by HITACHI Cable Ltd.>




- *The rated electric current of COM2's No.9 (DC5V) output is 0.20A MAX.*
- *Be sure to connect pin number 5 (SG) of COM1 and COM2 to the host unit's Signal Ground terminal.*
- *Connect the FG terminal line to the connector shell's PS-G connector fastening screw.*
- *FG and SG terminals are internally connected in the PS-G. When connecting to another device, be sure to create an SG shorting loop in your system.*



Note: Use inch type (#4-40UNC) threads to hold the cable's set (fastening) screws in place.

■ Printer Interface (PIO)

This interface conforms to Centronics standards.

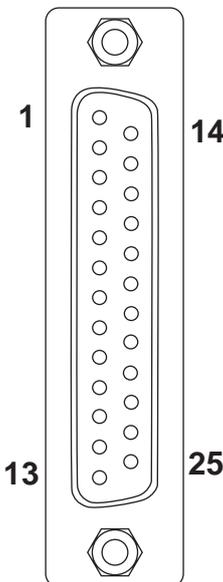
| Pin Arrangement | Pin # | Signal | Condition | Direction |
|--|-------|----------------------------|-------------------|-----------|
|  | 1 | $\overline{\text{PSTB}}$ | Strobe Signal | Output |
| | 2 | PDB0 | Data 8 bit | Output |
| | 3 | PDB1 | | Output |
| | 4 | PDB2 | | Output |
| | 5 | PDB3 | | Output |
| | 6 | PDB4 | | Output |
| | 7 | PDB5 | | Output |
| | 8 | PDB6 | | Output |
| | 9 | PDB7 | | Output |
| | 10 | $\overline{\text{ACK}}$ | Acknowledge | Input |
| | 11 | BUSY | Busy Signal | Input |
| | 12 | PE | Paper End | Input |
| | 13 | SLCT | Select Condition | Input |
| | 14 | AF | Auto Feed | Output |
| | 15 | $\overline{\text{ERROR}}$ | Printer Error | Input |
| | 16 | $\overline{\text{INIT}}$ | Initialize Signal | Output |
| | 17 | $\overline{\text{SLCTIN}}$ | Select In | Output |
| | 18 | GND | Ground | - |
| | 19 | GND | Ground | - |
| | 20 | GND | Ground | - |
| | 21 | GND | Ground | - |
| | 22 | GND | Ground | - |
| | 23 | GND | Ground | - |
| | 24 | GND | Ground | - |
| | 25 | GND | Ground | - |

Recommended Connector : Dsub 25-pin plug XM2A-2501 <made by OMRON Corp.>

Recommended Cover : Dsub 25-pin Cover XM2S-2513 <made by OMRON Corp.>


Use Jack Screw XM2Z-0073 <made by OMRON Corp.>
when needed.

■ Sound Output Terminal Block

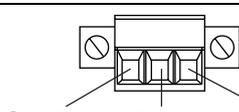
| Pin Arrangement | Signal | Condition | Direction |
|---|----------|--------------------------|-----------|
|  | SP-OUT | Speaker Output Terminal | Output |
| | GND | Ground | - |
| | LINE-OUT | Line Out Output Terminal | Output |

■ Keyboard / Mouse Interface

PS/2 compatible Keyboard / Mouse Interface
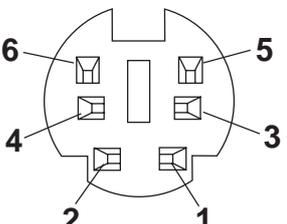
| Pin Arrangement | Pin # | Signal | Condition |
|---|-------|------------|---------------------------|
|  | 1 | KEY DATA | Key Data (Interactive) |
| | 2 | MOUSE DATA | Mouse Data (Interactive) |
| | 3 | GND | Ground |
| | 4 | +5V | External Power Supply |
| | 5 | KEY CLK | Key Clock (Interactive) |
| | 6 | MOUSE CLK | Mouse Clock (Interactive) |

■ RAS Interface (RAS)
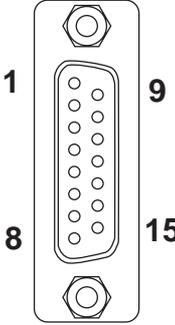
| Pin Arrangement | Pin # | Signal | Condition |
|---|-------|---------------|---|
|  | 1 | ALARM-OUT (-) | Alarm Output (-) |
| | 2 | DOUT (-) | General Purpose Output (-) |
| | 3 | RESET-IN (-) | Remote Reset Input (-) |
| | 4 | DIN0 (-) | General Purpose Input 0 (-)* ¹ |
| | 5 | DIN1 (-) | General Purpose Input 1 (-)* ¹ |
| | 6 | NC | No Contact |
| | 7 | RESERVE | Reserved |
| | 8 | RESERVE | Reserved |
| | 9 | ALARM-OUT (+) | Alarm Output (+) |
| | 10 | DOUT (+) | General Purpose Output (+) |
| | 11 | RESET-IN (+) | Remote Reset Input (+) |
| | 12 | DIN0 (+) | General Purpose Input 0 (+)* ¹ |
| | 13 | DIN1 (+) | General Purpose Input 1 (+)* ¹ |
| | 14 | RESERVE | Reserved |
| | 15 | RESERVE | Reserved |

*1 General purpose Input will latch Input Information.(This detects only the DIN circuit's ON state. OFF is not monitored.)

Recommended Connector : Dsub 15-pin plug XM2A-1501 <made by OMRON Corp.>

Recommended Cover : Dsub 15-pin Cover XM2S-1513 <made by OMRON Corp.>

Use Jack Screw XM2Z-0073 <made by OMRON Corp.>
when needed.

■ Ethernet Interface (10BASE-T)

This interface complies with the IEEE802.3 Ethernet communication standard (10BASE-T). This interface uses an RJ-45 type modular jack connector (8 points).

■ CF Card Slot

This slot accepts a CF Card.

■ USB Interface (USB1, USB2)

This interface is for connecting USB equipment.

■ Expansion Unit Interface 1 (EXT1)

This interface is used to connect a DIO unit.

■ Expansion Unit Interface 2 (EXT2)

This interface is a PCMCIA Bus interface.

This is used to connect a PCMCIA unit.

5 Installation

■ Confirm the Installation Gasket's Positioning


It is strongly recommended that you use the installation gasket.

Place the PS-G on a level surface with the display panel facing downward.

Check that the PS-G's installation gasket is seated securely into the gasket's groove, which runs around the perimeter of the panel's frame.




- Before installing the PS-G into a cabinet or panel, check that the installation gasket is securely attached to the unit.
- A gasket which has been used for a long period of time may have scratches or dirt on it, and could have lost much of its water resistance. Be sure to change the gasket at least once a year, or when scratches or dirt become visible.
- Be sure to use gasket model GP570-WP10-MS.
- Be sure the gasket's seam is not inserted into any of the unit's corners, only in the straight sections of the groove. Inserting it into a corner may lead to its eventually tearing.

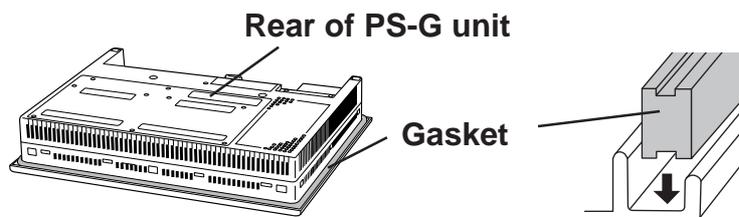

■ Create a Panel Cut


Insert the PS-G into the panel from the front


Unit: mm [in.]

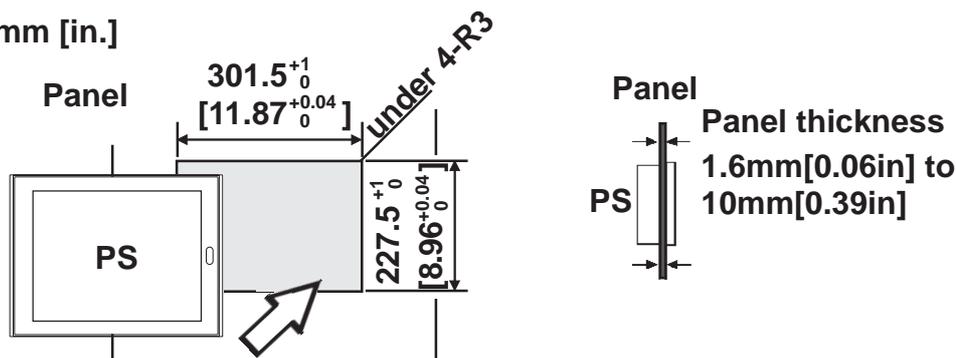

■ Attach the Installation Fasteners from Inside the Panel

The following figures show the four (4) insertion slot locations of the PS-G installation fasteners. Insert the hook section into the slot and tighten the fastener with a screwdriver, as shown.

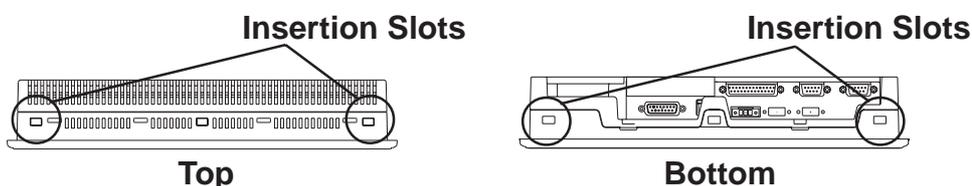

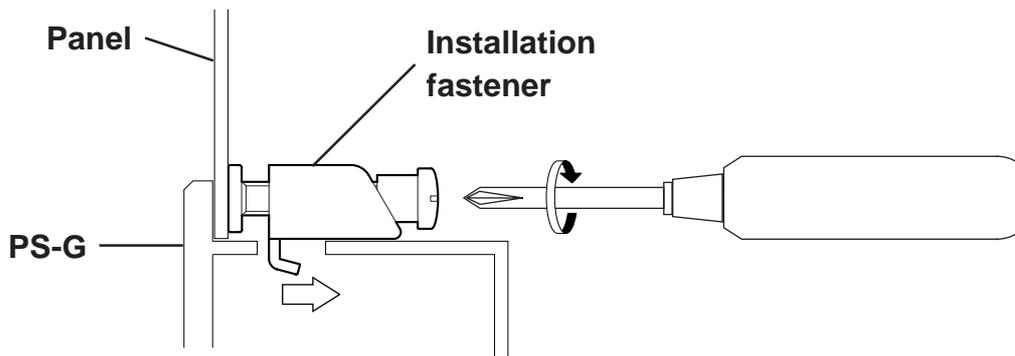


- Do not tighten the screws with too much force, since it can damage the PS-G unit's plastic case.
- The torque necessary to create a drip-resistant seal is 0.5 N•m.



- Depending on the installation panel's thickness, etc., the number of installation fasteners used may need to be increased to provide the desired level of moisture resistance.
- Installation fasteners are sold by your local PS-G distributor.
- Be sure to use installation fastener model GP070-AT01.

■ Installation Requirements

- To enhance the PS-G's maintainability, operability and ventilation, allow at least 100 mm clearance between the PS-G and other objects. (The clearance must be large enough to allow you to install or uninstall option units and to attach connectors.)

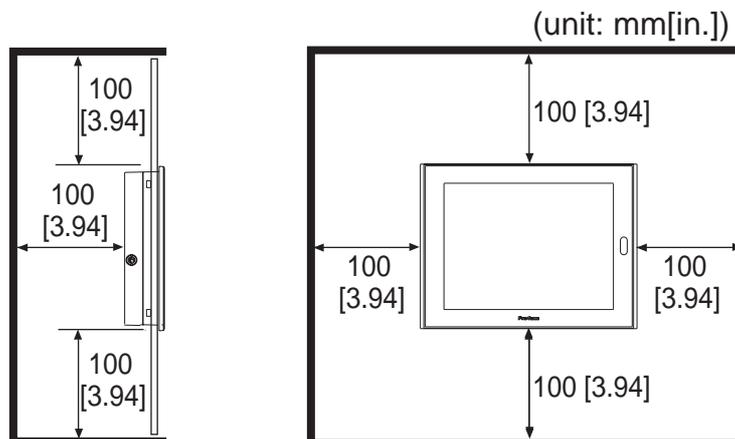

- Standard installation for the PS-G unit is in a vertical panel. If the PS-G unit is to be installed in a slanted panel, the panel should not incline more than 30° from the vertical.
- If the PS-G panel is to be installed in a slanted panel that inclines more than 30°, use forced-air cooling to ensure the ambient operation temperature does not exceed 50° C.
- Horizontal installation (that is, rotating the panel so that one of its sides is the base) is not supported.

6 Wiring

WARNINGS


- To avoid an electric shock, check that the PS-G's power supply is completely turned OFF, via a breaker, or similar unit before connecting the PS-G's power cord terminals to the power terminal block.
- The PS600G-T11-J1 can accept only AC100V input. If you use power other than AC100V, you can damage both the power supply and the PS-G unit.
- Since the PS-G unit has no power ON/OFF switch, be sure to attach a breaker type switch to its power cord.




When the FG terminal is connected, be sure the wire is grounded. Not grounding the PS-G unit will result in excess noise and vibration.



- Wherever possible, use thick wires (max. 2 mm²) for PS-G power cord power terminals. Also, to reduce noise be sure to twist the wire ends before attaching the connectors.
- Use the following sized Ring Terminals.

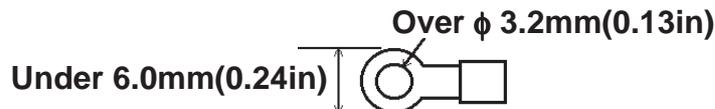

- To avoid a short caused by loose ring terminals, be sure to use ring terminals with an insulating sleeve.

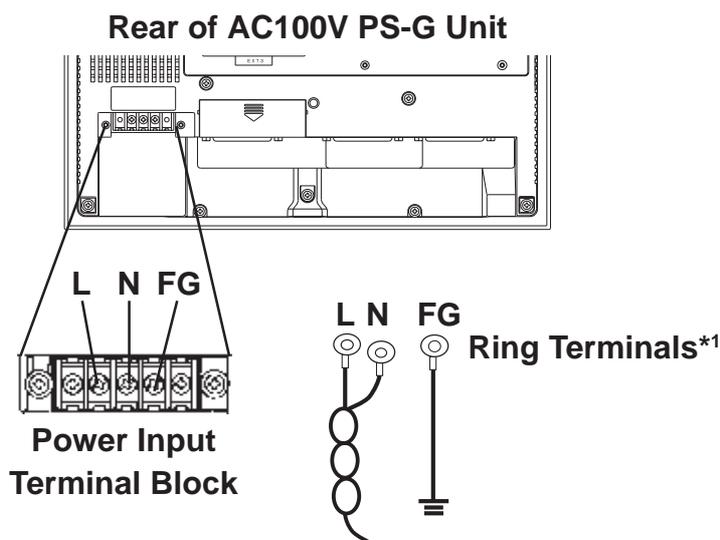

*1 L : AC Input Terminal-live line
N : AC Input Terminal-neutral line
FG : Ground Terminal connected to the PS-G chassis
Suggested Ring Terminal : V2-MS3 (made by JST)

■ Connecting the PS-G's Power Cord Terminals

When connecting the power cord, be sure to follow the procedures given below.

1. Confirm that the PS-G's power cord is unplugged from the power supply.
2. Use a screwdriver to remove the Power Input Terminal Block's clear plastic cover.
3. Remove the screws from the middle three (3) terminals, align the Ring Terminals and re-attach the screws.
4. Confirm that the wires are connected correctly.
5. Replace the Power Input Terminal Block's clear plastic cover.



Note: The torque required to tighten these screws is 0.5 to 0.6N•m.

7 Power Supply Cautions

Please pay special attention to the following instructions when connecting the power cord terminals to the PS-G unit.

- If the power supply voltage exceeds the PS-G unit's range, connect a voltage transformer.
- Between the line and the ground, be sure to use a low noise power supply. If there is still an excessive amount of noise, connect a noise reducing transformer.
- Input and Output signal lines must be separated from the power control cables for operational circuits.
- To increase the noise resistance, be sure to twist the ends of the power cord before connecting it to the PS-G unit.
- The PS-G unit's power supply cord should not be bundled with or kept close to main circuit lines (high voltage, high current), or input/output signal lines.
- Connect a surge absorber to handle power surges.
- To reduce noise, make the power cord as short as possible.

8 Grounding Cautions

- When attaching a wire to the PS-G's rear face FG terminal, (on the Power Input Terminal Block), be sure to create an exclusive ground.*1
- FG and SG terminals are internally connected in the PS-G. When connecting to another device, be sure to create an SG shorting loop in your system.

*1 Use a grounding resistance of 100Ω, a wire of 2mm² or thicker, or your country's applicable standard.

9 Input/Output Signal Line Cautions

- Input and Output signal lines must be separated from the power control cables for operational circuits.
- If this is not possible, use a shielded cable and the shield should be grounded.

10 Replacing the Backlight

- The PS-G unit's backlight is user replaceable.
For an explanation of how to replace the PS-G unit's backlight, please refer to the instruction manual which comes with the replacement backlights (sold separately).
- Be sure to use backlight model PS600-BU00.



Using any backlight other than the model written above may cause an accident or PS-G unit malfunction.

Note

Be aware that the Digital Electronics Corporation shall not be held liable for any real or estimated damages or losses, or third party claims resulting from the use of this product.